

# TERRAINKING™

Engineering Practical Solutions™

## OPERATOR'S MANUAL

**TERRAIN  
MASTER/  
FLAIL KING**  
**FLAIL MOWER**



Safety Video



[www.algqr.com/kbv](http://www.algqr.com/kbv)

This Operator's Manual is an integral part of the safe operation of this machine and must be maintained with the unit at all times. **READ, UNDERSTAND, and FOLLOW** the Safety and Operation Instructions contained in this manual before operating the equipment.

Important Operating and Safety Instructions are found in the Mower Safety Video that can be instantly accessed on the internet at: [www.algqr.com/kbv](http://www.algqr.com/kbv) C01-Cvr Kubota

Published 03/21

Part No. 37002990204



FC-R-0076

### Terrain King

1502 E. Walnut St.  
Seguin, Texas 78155-5202  
800-882-5756

Terrain King Web Page



[www.algqr.com/kwe](http://www.algqr.com/kwe)

©2021 Terrain King



\$0.00

<b>⚠ PELIGRO</b>	<b>⚠ DANGER</b>
Si no puede leer inglés: antes de poner en funcionamiento este equipo, solicite que alguien le traduzca los mensajes de seguridad o vaya al sitio web para consultar los mensajes de seguridad y las etiquetas ya traducidos.	Si vous ne pouvez pas lire l'anglais : avant d'utiliser l'équipement, demandez à une personne de vous traduire les messages de sécurité ou allez sur le site Internet pour voir la traduction des autocollants et des messages de sécurité.
<b>El Manual del Operador Seguridad vídeo</b>    <a href="http://www.algqr.com/kfs">www.algqr.com/kfs</a> <a href="http://www.algqr.com/avs">www.algqr.com/avs</a>	<b>Manuel de l'Opérateur</b>   <a href="http://www.algqr.com/kff">www.algqr.com/kff</a>

<b>⚠ PERIGO</b>	<b>⚠ GEFAHR</b>
Caso você não leia inglês: antes de operar o equipamento, peça para alguém traduzir as mensagens de segurança ou visite a web e obtenha tais mensagens ou os decalques traduzidos.	Falls Sie nicht Englisch sprechen: Bevor Sie die Geräte in Betrieb nehmen, bitten Sie eine Englisch sprechende Person darum, Ihnen die Sicherheitsmeldung zu übersetzen, oder besuchen Sie die Website; dort finden Sie übersetzte Aufkleber und Sicherheitsmeldungen.
<b>Manual do Operador</b>   <a href="http://www.algqr.com/kfp">www.algqr.com/kfp</a>	<b>Benutzerhandbuch</b>   D842 <a href="http://www.algqr.com/kfg">www.algqr.com/kfg</a>

Safety Video



[www.algqr.com/kbv](http://www.algqr.com/kbv)

Operator's & Parts Manuals

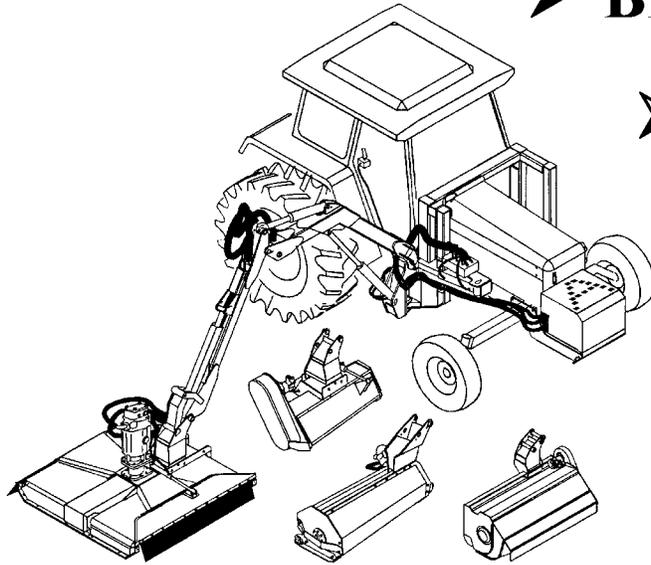


[www.algqr.com/kpm](http://www.algqr.com/kpm)

General Safety



[www.algqr.com/kfe](http://www.algqr.com/kfe)



➤ **BE SAFE!**

➤ **BE ALERT!**

➤ **BE ALIVE!**

➤ **BE TRAINED**  
**before operating**  
**the Mower!**

Safety Video



[www.algqr.com/kbv](http://www.algqr.com/kbv)



## *Safety Training Makes the Difference*

In order to reduce accidents and enhance the safe operation of mowers, *Terrain King*, in cooperation with other industry manufacturers has developed the AEM/FEMA Industrial and Agricultural Mower Safety Practices video and guide book.

The video will familiarize and instruct mower-tractor operators in safe practices when using industrial and agricultural mowing equipment. It is important that Every Mower Operator be educated in the operation of their mowing equipment and be able to recognize the potential hazards that can occur while operating a mower. This video, along with the mower operator's manual and the warning messages on the mower, will significantly assist in this important education.

Your Authorized *Terrain King* Dealer may have shown this video and presented you a DVD Video when you purchased your mower. If you or any mower operator have not seen this video, **Watch the Video, Read this Operator's Manual, and Complete the Video Guidebook** before operating your new mower. If you do not understand any of the instructions included in the video or operator's manual or if you have any questions concerning safety of operation, contact your supervisor, dealer or *Terrain King*.

If you would like a VHS video tape of the video, please email [AEMVideo@alamo-group.com](mailto:AEMVideo@alamo-group.com) or Fax AEM VHS Video at (830) 372-9529 or mail in a completed copy of the form on the back of this page to AEM VHS Video 1502 E Walnut Street, Seguin, TX 78155. and request the VHS video version. Please include your name, mailing address, mower model and serial number.

Every operator should be trained for each piece of equipment (Tractor and Mower), Understand the intended use, and the potential hazards before operating the equipment.

The information and material listed above along with this Operator's Manual can assist you in meeting the OSHA requirement for Operator annual training.

### **OSHA TRAINING REQUIREMENTS**

**The following training requirements have been taken from Title 29, Code of Federal Regulations Part 1928.57 (a)(6). [www.osha.gov](http://www.osha.gov)**

Operator Instructions. At the time of initial assignment and at least annually thereafter, the employer shall instruct every employee who operates an agricultural tractor or implement in the safe operating practices and servicing of equipment with which they are or will be involved, and of any other practices dictated by the work environment.

**Terrain King Division is willing to provide  
one (1) AEM Mower Safety Practices Video**

- Please Send Me:  VHS Format – AEM/FEMA Mower Operator Safety Video  
 DVD Format – AEM/FEMA Mower Operator Safety Video  
 Mower Operator’s Manual  
 AEM Mower Operator’s Safety Manual

Requester Name \_\_\_\_\_ Phone: \_\_\_\_\_

Requester Address: \_\_\_\_\_

City \_\_\_\_\_

State \_\_\_\_\_

Zip Code \_\_\_\_\_

Mower Model: \_\_\_\_\_ Serial Number: \_\_\_\_\_

Date Purchased: \_\_\_\_\_ Dealer Salesperson: \_\_\_\_\_

Dealership Name: \_\_\_\_\_ Dealership Location: \_\_\_\_\_

Mail to:

AEM Video Services  
1502 E. Walnut Street  
Seguin, TX 78155

Or Fax to:

(830) 372-9529

Or Email to:

AEMVideo@alamo-group.com

## To the Owner/Operator/Dealer

This Operator's Manual is an integral part of the safe operation of this machine and must be maintained with the implement at all times. A Manual canister is provided on the implement where this manual can be properly stored. If you lose or damage this manual a free replacement manual can be obtained from an authorized *Terrain King* dealer or by downloading the manual from the *Terrain King* website [www.terraining.com](http://www.terraining.com)

**BEFORE YOU START!!** READ, UNDERSTAND, and FOLLOW the information provided in this manual, the AEM Mower Safety manual and the tractor operator's manual carefully to learn how to operate and service your machine properly. Failure to do so could result in personal injury to you and bystanders. All implements with moving parts are potentially hazardous. Every effort has been made to ensure that the machine is safe but operators must avoid engaging in unsafe practices and follow the written instructions provided. The manufacturer has designed this implement to be used with all its safety equipment properly attached to minimize the chance of accidents.

**SAFETY FIRST.** Completely read and understand the safety section of this manual before operating this equipment. Do not allow anyone to operate this equipment who has not fully read and understood this manual. Contact your Dealer to explain any instructions that you do not fully understand.

The care you give your *Terrain King* Implement will greatly determine your satisfaction with its performance and its service life. Carefully read and follow the instructions in this manual to provide you with a thorough understanding of your new implement and its intended use and service requirements.

All references made in this manual to right, left, front, rear, top or bottom are as viewed facing the direction of forward travel with the implement properly attached to the tractor.

Replacement Parts information is located in a separate Parts Manual. *Terrain King* mowers use balanced and matched system components for blade carriers, blades, cuttershafts, knives, knife hangers, rollers, drivetrain components, and bearings. These parts are made and tested to *Terrain King* specifications. Non-genuine "will fit" parts do not consistently meet these specifications. The use of "will fit" parts may reduce mower performance, void warranties, and present a safety hazard. Use genuine *Terrain King* mower parts for economy and safety.

For future reference, record your *Terrain King* product model number and serial number.

Dealer		Telephone		Model Number	
Owner		Purchase Date:		Serial Number	



# DEALER to CUSTOMER Pre-Delivery/ Operation Instructions

Dealer should inform the Purchaser of this product of Warranty terms, provisions, and procedures that are applicable. Dealer should inform Purchaser to review the contents of the Operator's Manual including safety equipment, safe operation and maintenance, to review the Safety Signs on the implement (and tractor if possible) and of Purchaser's responsibility to train his/her operators's of safe operation procedures.

- **IMPLEMENTS:** I have explained that Deflectors, Chain Guards, or Solid Skirts must be installed and maintained in good repair.
- **DRIVELINES:** I have made certain that all driveline, gearbox, and other shields are in good repair and fastened securely in place to prevent injuries from entanglement or thrown objects.
- **HYDRAULIC MACHINES:** I have explained the necessity of using clean hydraulic oil, changing filters as instructed, stopping leaks, damage caused by operating with over-heated oil, caring for hoses, using hoses of proper rating, maintaining the specified operating pressure and the potential hazard of oils penetrating the skin.
- **FOLDING-TYPE IMPLEMENTS:** I have explained that it is not possible to guard against thrown objects when the head is lifted off ground and that operator is responsible to watch out for persons in the area. I have explained that the lifted mower head or boom can contact overhead obstructions with damage to cables and telephone lines and possible injury. I have explained that the extended head or boom or retracted boom can contact power lines resulting in electrocution, injury or death and that operator is responsible for keeping clear of such hazards.

## PRE-DELIVERY SERVICE CHECK AND ADJUST OR LUBRICATE AS REQUIRED See Operator's Manual for Details

### Inspection Performed - Warranty and Safety Procedures Explained - Installation Complete

#### LUBRICATION & HYDRAULICS

- Gearbox (Oil Levels)
- Hydraulic Oil Level (External Tank)
- Tractor Hydraulic Oil Level
- Hydraulic Hoses (Not Kinked Tighten Connections)
- Front Pump Drive (Assembly Is Tight And Shaft Properly Aligned)

#### MOWER

- Mower Cutting Height And Level Adjusted
- Cutting Shaft Bearings Lubricated
- All Hardware Properly Torqued

#### ATTACHMENTS & INSTALLATION

- Deflectors Front And Rear
- Correct Blade Rotation Direction

#### MOWER TO TRACTOR CONNECTIONS

- A-Frame Pivot & Links
- Axle Height (Adjusted)
- Cutting Height (Adjust)
- Mount Kit-Pre-Operation Check Complete
- Mower Wing (Adjust Level With The Center)
- Mower Wing (Check For Proper Raising Operation)
- Mounting Hardware Properly Torqued

#### SAFETY ITEMS

- Protective Shields (Operation And Installation)
- Driveline Clutch (Torque Limiter) (Adjust And Run In)
- Safety Decals (Installed)
- Operator's Manual (Supplied)
- Tractor PTO Shield (Installed)
- S.M.V. Emblem (Installed If Needed)
- ADMA Driveline Safety Manual Supplied
- AEM Mower Safety Manual (Supplied in Canister)
- AEM Mower Safety Video has been shown to Purchaser

# Table of Contents

<b>SAFETY SECTION .....</b>	<b>1-1</b>
GENERAL SAFETY INSTRUCTIONS AND PRACTICES .....	1-2
OPERATOR SAFETY .....	1-3
CRUSHING HAZARDS .....	1-4
CONNECTING OR DISCONNECTING IMPLEMENT SAFETY .....	1-5
THROWN OBJECTS HAZARDS .....	1-6
THROWN OBJECTS HAZARD (CONTINUED) .....	1-7
RUN OVER HAZARDS .....	1-8
PTO ENTANGLEMENT HAZARDS .....	1-9
MOWER BLADE CONTACT HAZARDS .....	1-10
HIGH PRESSURE OIL LEAK HAZARD .....	1-11
ELECTRICAL & FIRE HAZARDS .....	1-12
TRANSPORTING HAZARDS .....	1-13
HAZARDS WITH MAINTENANCE OF IMPLEMENT .....	1-14
Decal Location .....	1-16
Decal Description .....	1-18
FEDERAL LAWS AND REGULATIONS .....	1-29
<b>INTRODUCTION SECTION .....</b>	<b>2-1</b>
Attention Owner/Operator .....	2-4
<b>OPERATION SECTION .....</b>	<b>3-1</b>
OPERATOR REQUIREMENTS .....	3-4
TRACTOR REQUIREMENTS .....	3-5
ROPS and Seat Belt .....	3-5
Tractor Safety Devices .....	3-5
Tractor Horsepower .....	3-5
GETTING ON AND OFF THE TRACTOR .....	3-6
Boarding the Tractor .....	3-6
Dismounting the Tractor .....	3-7
STARTING THE TRACTOR .....	3-7
CONNECTING THE MOWER TO THE TRACTOR .....	3-8
SETTING THE MOWER .....	3-9
Leveling Deck .....	3-11
DRIVELINE ATTACHMENT .....	3-11
Driveline Length Check .....	3-12
PRE-OPERATION INSPECTION AND SERVICE .....	3-13
Tractor Pre-Operation Inspection/Service .....	3-15
Mower Pre-Operation Inspection/Service .....	3-15
DRIVING THE TRACTOR AND IMPLEMENT .....	3-21
Starting the Tractor .....	3-22
Brake .....	3-23
Differential Lock .....	3-23
Operating the Mower Wings .....	3-25
Engaging and Disengaging the Power Take Off (PTO) and Wings .....	3-27
Driving the Tractor and Implements .....	3-28
Crossing Ditches and Steep Inclines .....	3-29
OPERATING THE TRACTOR AND IMPLEMENT .....	3-30
Foreign Debris Hazards .....	3-31
Bystanders/Passersby Precautions .....	3-31

PTO RPM and Ground Speed .....	3-32
Shutting Down the Implement .....	3-34
DISCONNECTING THE MOWER FROM THE TRACTOR .....	3-34
MOWER STORAGE .....	3-36
TRANSPORTING THE TRACTOR AND IMPLEMENT .....	3-37
Transporting on Public Roadways .....	3-38
Hauling the Tractor and Implement .....	3-40
TROUBLE SHOOTING GUIDE .....	3-43

## **MAINTENANCE SECTION ..... 4-1**

HAZARDS WITH MAINTENANCE OF IMPLEMENT .....	4-2
PARTS INFORMATION .....	4-3
DAILY CHECKS .....	4-3
ADJUSTING TENSION OF DRIVEBELTS .....	4-5
Hydraulic Fluid .....	4-5
Proper Oil Level .....	4-6
CHANGING HYDRAULIC SYSTEM FILTER .....	4-7
CUTTER UNIT .....	4-9
GENERAL MAINTENANCE .....	4-9
REPLACING CUTTER UNIT DRIVEBELTS .....	4-10
ADJUSTING CUTTING HEIGHT .....	4-10
Inboard (Drive) Bearing .....	4-11
REPLACING CUTTER UNIT KNIVES .....	4-12
Flail Blades Inspection .....	4-13
Blade Pins and D-Ring Inspection .....	4-14
HYDRAULICS .....	4-15
General .....	4-15
Initial Start-Up Procedures .....	4-15
Solenoid Control Valve .....	4-17
Checking Solenoid Valve .....	4-17
CONTROL CIRCUIT .....	4-18
Lift and Tilt Cylinders .....	4-18
Cylinder Rod Maintenance .....	4-18
Boom Cylinder Removal and Replacement Instructions .....	4-19
Hydraulic Component Maintenance Schedule .....	4-20
Hydraulic Gear Pump .....	4-20
Sectional Control Valve .....	4-21
Slip Clutch .....	4-22
SEASONAL CLUTCH MAINTENANCE .....	4-23
Proper Torque for Fasteners .....	4-24

# **SAFETY SECTION**

Safety Section 1-1

# SAFETY

## GENERAL SAFETY INSTRUCTIONS AND PRACTICES

A careful operator is the best operator. Safety is of primary importance to the manufacturer and should be to the owner/operator. Most accidents can be avoided by being aware of your equipment, your surroundings, and observing certain precautions. The first section of this manual includes a list of Safety Messages that, if followed, will help protect the operator and bystanders from injury or death. Read and understand these Safety Messages before assembling, operating or servicing this Implement. This equipment should only be operated by those persons who have read the manual, who are responsible and trained, and who know how to do so responsibly.



The Safety Alert Symbol combined with a Signal Word, as seen below, is used throughout this manual and on decals which are attached to the equipment. The Safety Alert Symbol means: "ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!" The Symbol and Signal Word are intended to warn the owner/operator of impending hazards and the degree of possible injury faced when operating this equipment.

Practice all usual and customary safe working precautions and above all---remember safety is up to YOU. Only YOU can prevent death or serious injury from unsafe practices.



Indicates a hazardous situation that, if not avoided, WILL result in DEATH OR VERY SERIOUS INJURY.



Indicates a hazardous situation that, if not avoided, COULD result in DEATH OR SERIOUS INJURY.



Indicates a hazardous situation that, if not avoided, MAY result in MINOR OR MODERATE INJURY.



Indicates information considered important, but not hazard-related (e.g. messages relating to property damage).

**NOTE:** Identifies points of particular interest for more efficient and convenient operation or repair.

READ, UNDERSTAND, and FOLLOW the following Safety Messages. Death or serious injury may occur unless care is taken to follow the warnings and instructions stated in this Manual and in the Safety Messages on the implement. Always follow the instruction in this manual and use good common sense to avoid hazards.



Pictographs are used throughout this manual to help bring your visual attention to safety issues.

SAFETY HAZARD	SAFETY AVOIDANCE	SAFETY PREVENTION
<p>Pictograph surrounded by a triangle indicates a Safety Hazard that must be avoided.</p> <p><i>Example:</i></p>  <p>Equipment contacting overhead electrical lines</p>	<p>Pictograph in a circle with blue or black background, by itself or inside a box, indicates an avoidance procedure or action that should be followed to prevent injuries.</p> <p><i>Example:</i></p>  <p>Wear safety footwear.</p>  <p>Always shut off engine and remove key before working on equipment.</p>	<p>A circle with a slash through it indicates an action that is prohibited.</p> <p><i>Example:</i></p>  <p>No Smoking</p>

**NOTE:** If you want a translation of this safety section in one of the following Languages, please contact: Translations at 1502 E. Walnut Street Seguin, TX 78155; Fax: (830) 372-9529; Safety Section Translations are available in Spanish, Portuguese, French, German, Russian. PN GS-01

# SAFETY

**SAFETY**

## OPERATOR SAFETY

				
Read and understand Operator's Manual	Always wear Safety Glasses with side shields marked to comply with ANSI Z87	Wear Hard Hat Safety Shoes	Never use Drugs or Alcohol when operating equipment	Wear Safety Vest when operating on or near roads



**TO AVOID DEATH OR SERIOUS INJURY DO THE FOLLOWING:**

- **READ, UNDERSTAND** and **FOLLOW** Operator's Manual instructions, Warnings and Safety Messages.
- **WEAR SAFETY GLASSES** with side shields (marked with ANSI Z87), safety shoes, hard hat, hearing protection and gloves when operating or repairing equipment
- **WEAR** appropriate breathing respirator when operating in dusty conditions to avoid respiratory diseases.
- **DO NOT WEAR** loose clothing or jewelry to avoid rotating parts entanglement injury.
- **DO NOT USE DRUGS** or **ALCOHOL** before or while operating equipment.
- **DO NOT ALLOW** anyone to operate equipment under the influence of drug or alcohol.
- **CONSULT** medical professional for medication impairment side effects.
- **STAY ALERT**, prolonged operation can cause fatigue, **STOP** and **REST**.

## GENERAL OPERATING SAFETY

### **VISIBILITY CONDITIONS WHEN MOWING:**

- **OPERATE IN DAYLIGHT** or with lights that gives at least 100 yards clear visibility.
- **BE ABLE TO SEE** and identify passersby, steep slopes, ditches, drop-offs, overhead obstructions, power lines, debris and foreign objects.

### **GROUND SPEED WHEN MOWING:**

- **NORMAL SPEED** range is between 2 to 5mph.
- **ADJUST MOWING SPEED** for terrain conditions and grass type, density and cut height.
- **REDUCE MOWING SPEED** when near steep slopes, ditches, drop-offs, overhead obstructions, power lines and to avoid debris and foreign objects.

### **INSECT INFESTATION**

- Do Not operate in areas where bees or insects may attack unless you **WEAR PROTECTIVE CLOTHING** or use enclosed tractor cab.

### **PTO SPEED:**

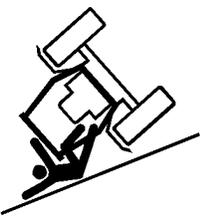
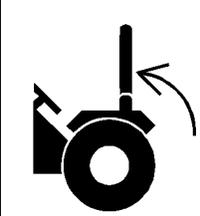
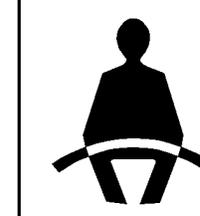
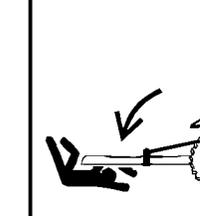
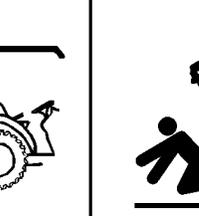
- **DO NOT EXCEED IMPLEMENT RATED PTO SPEED**
- **AVOID** exceeding rated PTO speeds that may result in broken drivelines or blade failures.

### **SAFETY SIGNS:**

- **REPLACE** missing, damaged or unreadable safety signs immediately. *PN OS01*

# SAFETY

## CRUSHING HAZARDS

				
Crushing injury from roll over	Lock ROPS in up position	Always wear seatbelt	Crushing injury implement falling	Crushing injury wing falling

**DANGER**

TO AVOID DEATH OR SERIOUS INJURY FROM FALLING OFF TRACTOR, EQUIPMENT RUN OVER, ROLLOVER AND CRUSHING BY FALLING WING OR IMPLEMENT:

- USE ROPS and SEAT BELT equipped tractors for mowing operations.
- KEEP ROPS lock in up position.
- ALWAYS BUCKLE UP seat belt when operating tractor and equipment.
- ONLY OPERATE tractor and equipment while seated in tractor seat.

**WHEN RAISING OR LOWERING WINGS:**

- Raise or lower ONLY WHILE SEATED in tractor seat with seat belt buckled.
- KEEP BYSTANDERS CLEAR of area TO AVOID crushing.
- KEEP sufficient clearance around implement and wings TO AVOID contacting buildings or overhead power lines.

LIFTED Equipment can fall from mechanical or hydraulic failure or inadvertent Control Lever movement.

**WARNING**

TO AVOID EQUIPMENT FALLING while working near or under lifted wings, components and implements raised by 3-Pointed tractor hitch:

- SECURELY SUPPORT or block up raised equipment, wings and components.
- BLOCK UP and securely support equipment before putting hands, feet or body under raised equipment or lifted components.
- KEEP BYSTANDERS CLEAR of folded wings until wings are blocked or locked up.

**WHEN PARKING** Implement and Tractor:

- LOWER implement, LOCK or BLOCK lifted parts before leaving equipment.
- NEVER leave implement unattended in a raised position.

**WARNING**

TO AVOID CHILDREN FALLING OFF OR BEING CRUSHED BY EQUIPMENT:

- NEVER ALLOW children to play on or around Tractor or Implement.

**WHEN UNHITCHING IMPLEMENT:**

- LOWER implement, LOCK or BLOCK lifted parts before leaving equipment.

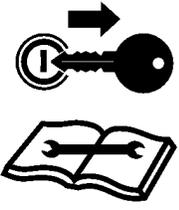
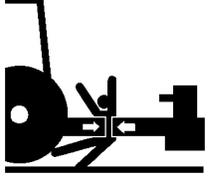
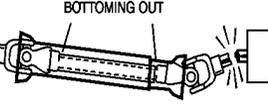
**BEFORE REMOVING Wing Retaining Lock:**

- ATTACH hoses to tractor.
- FILL Wing Cylinders with oil. (Refer to Instructions in Operation Section)
- KEEP bystanders away before operating wings.
- LOWER WINGS slowly and carefully. PN CHFM-03

# SAFETY

SAFETY

## CONNECTING OR DISCONNECTING IMPLEMENT SAFETY

				
<p>Stop Tractor Remove Key Read Manual</p>	<p>Crushing injury between tractor and implement</p>	<p>Crushing injury wing falling</p>	<p>Make sure PTO shaft is securely attached to tractor</p>	<p>Make sure PTO shaft are proper length</p>



**TO AVOID DEATH OR SERIOUS INJURY FROM BEING CRUSHED BY TRACTOR OR IMPLEMENT:**

**WHEN BACKING tractor to implement hitch:**

- **DO NOT ALLOW BYSTANDERS** between tractor and implement.

**BEFORE connecting and disconnecting implement hitch:**

- **STOP TRACTOR ENGINE**, place transmission into park, engage parking brake and remove key.

**WHEN connecting and disconnecting implement hitch:**

- **DO NOT** crawl or walk under raised mower or wing.

**WHEN CONNECTING IMPLEMENT DRIVELINE:**

**TO AVOID implement driveline coming loose during operation:**

- **LUBRICATE** yoke spring locking collar to ensure it freely slides on PTO shaft.
- **SECURELY** seat yoke locking balls in PTO shaft groove.
- **PUSH** and **PULL DRIVELINE** on both the tractor and implement **PTO SHAFTS** to ensure it is **SECURELY ATTACHED**.

**TO AVOID broken driveline during operations:**

- **CHECK** driveline for proper length between PTO shaft and implement gearbox shaft. *(Refer to Instructions in Operation Section)*
- Drivelines too short can pull apart or disengage.
- Drivelines too long can bottom out.
- Bottoming driveline telescoping assembly will stop sliding and become solid.
- Driveline bottoming can push through support bearings and break off PTO shaft.

**CONTACT DEALER if implement driveline does not match Tractor PTO shaft:**

- **DO NOT USE PTO ADAPTER.**  
Using a PTO adapter can cause:
  - Excessive vibration, thrown objects, blade and implement failures by doubling operating speed.
  - Increased working length exposing unshielded driveline areas and entanglement hazards.

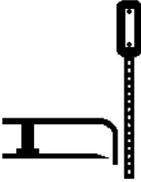
**BEFORE REMOVING WING RETAINING LOCKS:**

- **FILL** Wing Cylinders with oil. *(Refer to Instructions in Operation Section)*
- **KEEP** bystanders clear of area before operating wings.
- **LOWER WINGS** slowly and carefully.

**DO NOT** connect the Mower to a tractor with the PTO directly connected to the Tractor transmission. *PN CDFM-03*

# SAFETY

## THROWN OBJECTS HAZARDS

			
Mower Thrown Objects Hazard	Raised Mower Thrown Objects	Inspect Area remove foreign objects	Do not let blades contact solid objects



**ROTARY MOWERS CAN THROW OBJECTS 300 FEET OR MORE UNDER ADVERSE CONDITIONS.**

### TO AVOID DEATH OR SERIOUS INJURY TO OPERATOR OR BYSTANDERS FROM THROWN OBJECTS:

- KEEP bystanders 300 feet away

### STOP MOWING IF PASSERSBY ARE WITHIN 300 FEET UNLESS:

- **All THROWN OBJECT SHIELDING** including, Front and Rear Deflectors, Steel Guards, Bands, Side Skirts and Skid Shoes in place and in good condition when mowing.
- Mower sections or wing are adjusted to be close and parallel to ground without exposing blades.
- **MOWING AREA** has been inspected and foreign materials and debris have been removed.
- **PASSERSBY** are inside enclosed vehicle.

### INSPECT AREA FOR POTENTIAL THROWN OBJECTS BEFORE MOWING:

- **REMOVE** debris, rocks, wire, cable, metal objects and other foreign material from area. Wire, cable, rope, chains and metal objects can be thrown or swing outside deck with great velocity: **DO NOT** allow the mower blades to contact decaying animal carcasses or other hazardous materials. The mower blades could throw hazardous and biologic material out from under mower exposing the operator and bystanders to health risks. Always wear required OSHA approved Personal Protective Equipment (PPE) when cleaning or removing potentially hazardous material from equipment.
  1. **MARK** objects that cannot removed.
  2. **AVOID** these objects when mowing.

### HIGH GRASS and WEED AREA INSPECTION:

- **INSPECT** for and **REMOVE** any hidden large debris.
- **MOW** at Intermediate height
- **INSPECT** and remove remaining debris
- **MOW** at final height.

### MOWER THROWN OBJECT SHIELDING:

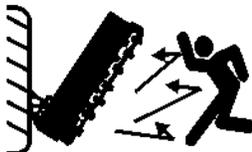
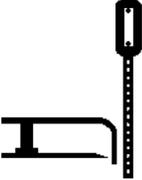
- **KEEP** all thrown object shielding including, Front and Rear Deflectors, Steel Guards, Bands, Side Skirts and Skid Shoes in place and in good condition when mowing.
- **DO NOT OPERATE** with any thrown object shielding missing, damaged or removed.

### RIGHT OF WAY (Highway) MOWING

- No shielding is 100% effective in preventing thrown objects. To Reduce Possibility of Injury:
  1. **MAINTAIN MOWER SHIELDING**, side skirts, skid shoes, and blades in good operational condition,
  2. **RAISE CUTTING HEIGHT** to **6 INCHES** minimum,
  3. **INSPECT AREA** thoroughly before mowing to **REMOVE** potential **THROWN OBJECT HAZARDS**,
  4. **NEVER ALLOW BLADES** to **CONTACT SOLID OBJECTS** like wire, rocks, post, curbs, guardrails, or ground while mowing. *PN TOFM-01*

# SAFETY

## THROWN OBJECTS HAZARD (CONTINUED)

			
<p>Mower Thrown Objects Hazard</p>	<p>Raised Mower Thrown Objects</p>	<p>Inspect Area remove foreign objects</p>	<p>Do not let blades contact solid objects</p>

### MOWER OPERATION:

- **DO NOT** exceed mower's rated Cutting Capacity or cut non-vegetative material.
- **USE ENCLOSED TRACTOR CABS** when two or more mowers are operating in mowing area.
- **ADJUST** mower sections or wing close and parallel to ground without exposing blades
- **ADJUST** cutting **HEIGHT** to **AVOID BLADE CONTACT** with solid objects like wire, rocks, posts, curbs, guard rails and fixed obstructions.
- **DO NOT** operate mower when mower is raised or in transport position
- **STOP MOWING** immediately if blades strike heavy objects, fixed structures, metal guard rails and concrete structures:
  1. **BLADES CAN FAIL** from impact and objects can be thrown with great velocity.
  2. **INSPECT** and **REPLACE** any damaged blades.
  3. **CHECK** blade carrier balance and **REPLACE** if damaged.
- **DO NOT** mow in standing water **TO AVOID** possible **BLADE FAILURE**.
- **AVOID MOWING** in reverse:
  1. **STOP PTO** and back up mower.
  2. **LOWER** mower, engage **PTO** and mow forward.
- **STOP PTO** and **BLADES** when raising the mower to transport position.
- **DO NOT ENGAGE PTO** with mower in transport position.
- **STOP** mowing when **EXCESSIVE VIBRATION** occurs:
  1. **STOP PTO** and tractor **ENGINE**.
  2. **INSPECT** mower for vibration source
  3. **REPLACE** any damage parts and bent or damaged **BLADES**. *PN TOFM-02*

**SAFETY**

# SAFETY

## RUN OVER HAZARDS

		
Operator run over hazard	Rider fall off run over hazard	Rider fall off run over hazard



**TO AVOID DEATH OR SERIOUS INJURY FROM FALLING OFF TRACTOR OR EQUIPMENT RUN OVER:**

- **USE ROPS** and **SEAT BELT** equipped tractors for mowing operations.
- **KEEP ROPS** locked in **UP** position.
- **ONLY** start tractor while seated in tractor seat.
- **ALWAYS BUCKLE UP** seat belt when operating tractor and equipment.
- **ONLY OPERATE** tractor and equipment while seated in tractor seat.
- **NEVER ALLOW RIDERS** on tractor or implement.

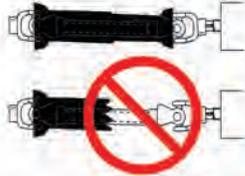
### **WHEN MOUNTING AND DISMOUNTING TRACTOR:**

- **ONLY** mount or dismount when tractor and moving parts are stopped.
- **STOP ENGINE AND PTO**, engage parking brake, lower implement, allow all moving parts to stop and remove key before dismounting from tractor. *PN R001*

# SAFETY

SAFETY

## PTO ENTANGLEMENT HAZARDS

	 <p>PTO (Barra Gitatoria)</p>		 <p>BOTTOMING OUT</p>
<p>Entanglement hazard Do Not approach or touch a rotating PTO driveshaft</p>	<p>Make sure PTO shaft is securely attached Do Not Use PTO Adapter</p>	<p>DO NOT Operate if PTO shields are damaged or missing</p>	<p>Make sure PTO shafts are proper length</p>



**KEEP AWAY FROM ROTATING DRIVELINES AND ELEMENTS TO AVOID DEATH OR SERIOUS INJURY:**

**STAY AWAY** and **KEEP** hands, feet and body **AWAY** from rotating blades, drivelines and parts until all moving elements have stopped.

- **STOP, LOOK** and **LISTEN** before approaching the mower to make sure all rotating motion has stopped.
- **ROTATING COMPONENTS CONTINUE** to **ROTATE** after the PTO is shut off.

### PTO SHIELDING:

#### TO AVOID DEATH OR SERIOUS INJURY FROM ENTANGLEMENT WHEN OPERATING IMPLEMENT:

- **KEEP PTO** shields, integral driveline shields and input shields installed
- **DO NOT OPERATE** mower without shields and guards in place or missing
- **REPAIR OR REPLACE** guards and shields if damaged, broken or missing
- **ALWAYS REPLACE GUARDS** that have been removed for service or maintenance.
- Do Not use PTO or PTO guard as a step.

#### TO AVOID broken driveline during operations:

- **CHECK** driveline for proper length between PTO shaft and implement gearbox shaft. (*Refer to Instructions in Operation Section*)
- Drivelines too short can pull apart or disengage.
- Drivelines too long can bottom out.  
Bottoming driveline telescoping assembly will stop sliding and become solid.
- Driveline bottoming can push through support bearings and break off PTO shaft
- **AVOID** sharp turns or lifting mower to heights that cause driveline "knocking".
- Lubricate driveshaft-telescoping components weekly.

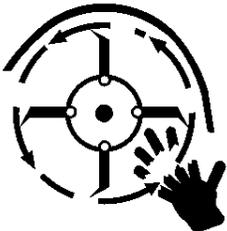
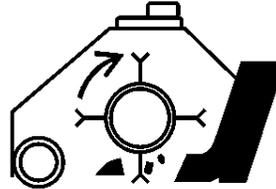
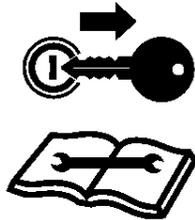
#### CONTACT DEALER if implement driveline does not match Tractor PTO shaft:

- **DO NOT USE PTO ADAPTER.**

Using a PTO adapter can cause excessive vibration, thrown objects, blade and implement failures by doubling operating speed. Increased working length exposes unshielded driveline areas. **PN PE01**

# SAFETY

## MOWER BLADE CONTACT HAZARDS

		
Do not put fingers underneath mower	Do not put foot underneath mower	Stop Tractor Remove Key Read Manual

### **⚠ DANGER**

KEEP AWAY FROM ROTATING BLADES TO AVOID DEATH OR SERIOUS INJURY FROM BLADE CONTACT:

- **STAY AWAY** and **KEEP HANDS, FEET** and **BODY AWAY** from rotating blades, drivelines and parts until all moving elements have stopped.
- **DO NOT** put hands or feet under mower decks
- **STOP** rotating **BLADES** disengage PTO and wait for blade to stop rotating before raising mower deck or wings
- **STOP LOOK** and **LISTEN** before approaching the mower to make sure all rotating motion has stopped. *PN MBFM-01*

SAFETY

# SAFETY

SAFETY

## HIGH PRESSURE OIL LEAK HAZARD

			
High pressure oil penetrating skin	High pressure oil eroding skin	Using cardboard to check for oil leaks	Tank contents under pressure. Allow oil to cool for at least 5 minutes before slowly removing cap



**TO AVOID DEATH OR SERIOUS INJURY FROM HIGH PRESSURE HYDRAULIC OIL LEAKS PENERATING SKIN:**

- **DO NOT OPERATE** equipment with oil or fuel leaks.
- **KEEP** all hydraulic hoses, lines and connections in **GOOD CONDITION** and **TIGHT** before applying system pressure.
- **RELIEVE HYDRAULIC PRESSURE** before disconnecting lines or working on the system.
- **REMOVE** and replace hose if you suspect it leaks. Have dealer test it for leaks.

**HIGH PRESSURE FLUID LEAKS CAN BE INVISIBLE.**

**WHEN CHECKING FOR HYDRAULIC LEAKS AND WORKING AROUND HYDRAULIC SYSTEMS:**

- **ALWAYS WEAR** safety glasses with side shields (marked with ANSI Z87) and impenetrable gloves.
- **USE** paper or cardboard to search for leaks.
- **DO NOT USE** hands or body parts to search for leak.
- **KEEP** hands and body **AWAY** from pin holes and nozzles ejecting hydraulic fluid.
- Hydraulic fluid may cause gangrene if not surgically removed immediately by a doctor familiar with this form of injury.

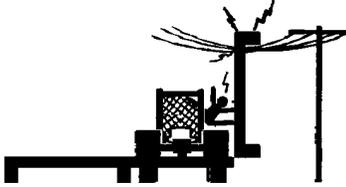
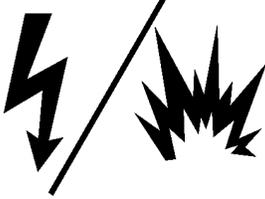
**Use Caution when removing Hydraulic Tank cap.**

- Tank content maybe under pressure.
- Allow oil to cool before removing cap.
- Relieve oil pressure before removing cap slowly.
- Stay away from hot oil that may spray from tank.

*PN HPFM-01*

# SAFETY

## ELECTRICAL & FIRE HAZARDS

		
<p>Wing contacting overhead electrical lines</p>	<p>Strike and explosion Hazard Blades Contacting Utility or Gas Lines</p>	<p>Do not operate near fires. Keep mower deck clear of debris</p>

**⚠ DANGER** TO AVOID DEATH OR SERIOUS INJURY FROM ELECTRICAL CONTACT WHEN WORKING AROUND ELECTRICAL POWER LINES, GAS LINES AND UTILITY LINES:

- **INSPECT** mowing area for overhead or underground electrical power lines, obstructions, gas lines, cables and Utility, Municipal, or other type structure.
- **KEEP** all raised wings at a 10 feet or greater distance from all power lines and overhead obstructions.
- **DO NOT** allow mower to contact with any Utility, Municipal, or type of structures and obstructions.
- **CALL 811** and 1-800-258-0808 for identify buried utility lines.

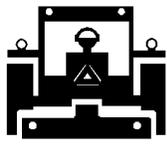
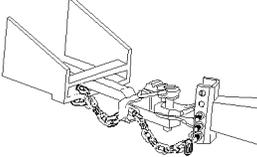
**FIRE PREVENTION GUIDELINES while Operating, Servicing, and Repairing Mower and Tractor to reduce equipment and grass fire Risk:**

- **EQUIP** Tractor with a **FIRE EXTINGUISHER**
- **DO NOT OPERATE** mower on a tractor equipped with under frame exhaust
- **DO NOT SMOKE** or have open flame near Mower or Tractor
- **DO NOT DRIVE** into burning debris or freshly burnt area
- **AVOID FIRE IGNITION** by not allowing mower blade to contact solid objects like metal or rock.
- **ADJUST SLIP CLUTCHES** to avoid excessive slippage and clutch plate heating.
- **CLEAR** any grass clippings or debris buildup around mower drivelines, slip clutches, and gearboxes.
- **SHUT OFF ENGINE** while refueling.
- Do not operate if oil is leaking. Repair oil leak and remove all accumulated oil before operating.
- **CLEAR** any grass clippings or debris buildup around mower hydraulic pumps, valves or tanks. *PN EFFM-01*

# SAFETY

**SAFETY**

## TRANSPORTING HAZARDS

				
Use SMV signs and Flashing Lights	Loss of Control Stopping Hazard	Loss of Control Speeding Hazard	Use Safety Tow Chain - Tractor to Implement	Engage Transport Locks

**⚠ WARNING**

**TO AVOID DEATH OR SERIOUS INJURY WHEN TOWING OR TRANSPORTING EQUIPMENT:**

- **KEEP** transport speed **BELOW** 20 mph to maintain control of equipment.
- **REDUCE SPEED** on inclines, on turns and in poor towing conditions.
- **DO NOT TOW** with trucks or other vehicles.
- **USE** only properly sized and equipped tractor for towing equipment.
- **FOLLOW** all local traffic regulations.

**TRACTOR REQUIREMENTS FOR TOWING OR TRANSPORTING IMPLEMENTS:**

- **ONLY TRANSPORT** with tractor with **ROPS** in the raised position.
- **USE** properly sized and equipped tractor that exceeds implement weight by at least 20%.
- **KEEP** 20% of tractor weight on front wheels to maintain safe steering.

**BEFORE TRANSPORTING OR TOWING IMPLEMENT:**

**TRACTOR INSPECTION:**

- **CHECK** steering and braking for proper operation and in good condition.
- **CHECK SMV** sign, reflectors, stop lights, tail lights and hazard lights for proper operation and visibility behind unit.
- **CHECK** that your driving vision is not impaired by tractor, cab, or implement while seated in tractor seat.
- **ADJUST** your operating position, mirrors, and implement transport for clear vision for traveling and traffic conditions.

**PREPARE IMPLEMENT FOR TRANSPORTING OR TOWING:**

**ENGAGE TRANSPORT LOCKS AND SAFETY CHAINS:**

- **RAISE MOWER** and **ENGAGE** center axle cylinder transport stops or pins.
- **RAISE WINGS** and **ENGAGE TRANSPORT LOCKS** or pins.
- **ATTACH** implement **SAFETY CHAIN** to tractor.
- **REMOVE** any cut material collected on mower deck.

**DETERMINE STOPPING CHARACTERISTICS OF TRACTOR AND IMPLEMENT FOR TRANSPORTING OR TOWING:**

**BRAKING TESTS:**

- **INSTALL** center axle cylinder transport stops or pins.
- Observe **STOPPING** distances increases with increased speeds.
- **DETERMINE** the maximum safe transport speed that does not exceed 20 mph.

**DETERMINE MAXIMUM TURNING SPEED BEFORE OPERATING ON ROADS OR UNEVEN GROUND:**

- **TEST** equipment in slowly increasing speed in turns to determine it can be operated at higher speeds.
- **USE REDUCED** turning speeds in sharp turns to avoid equipment turning over.

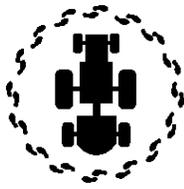
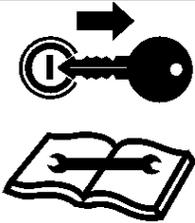
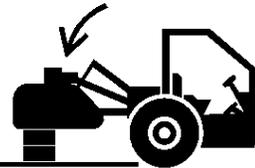
**WHEN TOWING OR TRANSPORTING EQUIPMENT:**

- Always **WEAR SEAT BELT** when operating or transporting mower.
- **USE** low speeds to avoid overturn with raised wings.
- **USE** low speeds and gradual steering on curves, hills, rough or uneven surfaces and on wet roads.
- **TURN ON** tractor **FLASHING WARNING LIGHTS**.
- **ALLOW** clearance for implement swing while turning.

**KEEP all raised wings at 10 feet or greater distance from all power lines and overhead obstructions. PN TH01**

# SAFETY

## HAZARDS WITH MAINTENANCE OF IMPLEMENT

				
Periodically inspect all moving parts, lubricate drivelines, and tighten all fasteners	Stop engine remove key before conducting maintenance	Block up implement before servicing Use large blocks on soft or wet soil	Engage cylinder transport locks	Inspect Blades for damage or cracks

**⚠ WARNING** AVOID DEATH OR SERIOUS INJURY FROM COMPONENT FAILURE BY KEEPING IMPLEMENT IN GOOD OPERATING CONDITION IN PERFORMING PROPER SERVICE, REPAIRS AND MAINTENANCE.

**BEFORE PERFORMING SERVICE, REPAIRS AND MAINTENANCE ON THE IMPLEMENT:**

- **STOP ENGINE AND PTO**, engage parking brake, lower implement, allow all moving parts to stop and remove key before dismounting from tractor.
- **PLACE** implement on ground or securely block up raised equipment. Use large blocks on soft or wet soil.
- **PUSH** and **PULL** Remote Hydraulic Cylinder lever to relieve hydraulic pressure.
- **DISCONNECT IMPLEMENT** driveline from tractor **PTO SHAFT**.

**WEAR SAFETY GLASSES, PROTECTIVE GLOVES** and follow **SAFETY PROCEDURES** when performing service, repairs and maintenance on the implement:

- Always **WEAR** protective **GLOVES** when handling blades, knives, cutting edges or worn component with sharp edges.
- Always **WEAR GLOVES** and **SAFETY GLASSES** with side shields (marked with ANSI Z87) when servicing hot components
- **AVOID CONTACT** with hot hydraulic oil tanks, pumps, motors, valves and hose connection surfaces.
- **SECURELY** support or **BLOCK UP** raised implement, framework and lifted components before working underneath equipment.
- **STOP** any implement movements and **SHUT-OFF TRACTOR** engine before doing any work procedures.
- **USE** ladder or raised stands to reach high equipment areas inaccessible from ground.
- **ENSURE** good footing by standing on solid flat surfaces when getting on implement to perform work.
- **FOLLOW** manufacturer's instructions in handling oils, solvents, cleansers, and other chemical agents.
- **DO NOT** change any factory-set hydraulic calibrations to avoid component or equipment failures.
- **DO NOT** modify or alter implement, functions or components.
- **DO NOT WELD** or repair rotating mower components. These may cause vibrations and component failures being thrown from mower.

**PERFORM SERVICE, REPAIRS, LUBRICATION AND MAINTENANCE OUTLINED IN IMPLEMENT MAINTENANCE SECTION:**

- **INSPECT** for loose fasteners, worn or broken parts, leaky or loose fittings, missing or broken cotter keys and washers on pins, and all moving parts for wear.
- **REPLACE** any worn or broken parts with authorized service parts.
- **LUBRICATE** unit as specified by lubrication schedule
- **NEVER** lubricate, adjust or remove material while it is running or in motion.
- **TORQUE** all bolts and nuts as specified.

**BLADE INSPECTION:**

- **REPLACE** bent, damage, cracked or broken blades immediately with new blades.
- **AVOID** blade failures and thrown broken blades. **DO NOT** straighten, weld, or weld hard-facing blades.

**SAFETY SHIELDS, GUARDS AND SAFETY DEVICES INSPECTION:**

- **KEEP** all Deflectors, Steel Guards, Gearbox Shields, and PTO integral shields, Bands, Side Skirts and Skid Shoes in place and in good condition.
- **REPLACE** any missing, broken or worn safety shields, guards and safety devices.
- **DISCONNECT** Pump solenoid valve or PTO driveline connection before servicing mower head.
- **FOLLOW INSTRUCTIONS** in maintenance section when replacing hydraulic cylinders to prevent component falling.



**WARNING**

Cancer and Reproductive Harm [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

PN HMFM-02

# SAFETY

## **PARTS INFORMATION**

### PARTS INFORMATION

Terrain King mowers use balanced and matched system components for blade carriers, blades, cuttershafts, knives, knife hangers, rollers, drivetrain components, and bearings. These parts are made and tested to Terrain King specifications. Non-genuine "will fit" parts do not consistently meet these specifications. The use of "will fit" parts may reduce mower performance, void mower warranties, and present a safety hazard. Use genuine Terrain King mower parts for economy and safety. (SPTK-1)

**SEE YOUR TERRAIN KING DEALER**

Operator's & Parts Manuals



[www.algqr.com/kpm](http://www.algqr.com/kpm)

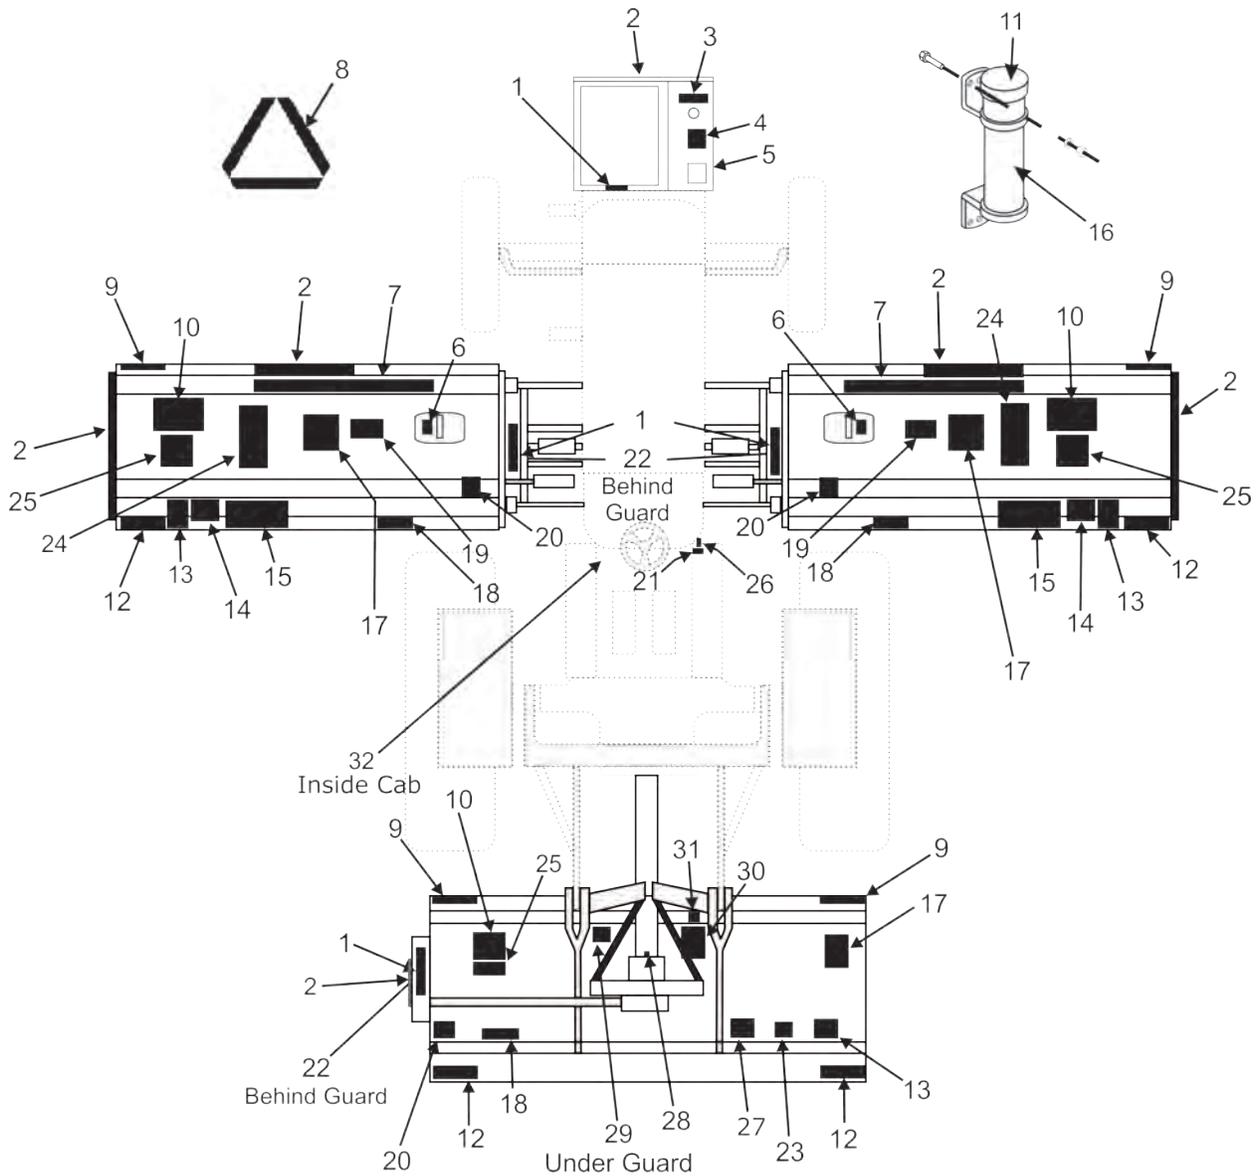
**SAFETY**

# SAFETY

## Decal Location

**NOTE:** Terrain King supplies safety decals on this product to promote safe operation. Damage to the decals may occur while in shipping, use, or reconditioning. Terrain King cares about the safety of its customers, operators, and bystanders, and will replace the safety decals on this product in the field, free of charge (Some shipping and handling charges may apply). Contact your Terrain King dealer to order replacement decals.

SAFETY



# SAFETY

**SAFETY**

ITEM	PART NO.	QTY	LEVEL	DESCRIPTION
1.	D641	4	WARNING	Pinch Point Hazard
2.	30002988385	6	LOGO	Terrain King Logo
3.	D625	1	WARNING	Pressurized Tank
4.	D877	1	IMPORTANT	Service Hydraulic System
5.	D617	1	WARNING	Hydraulic Oil Leak
6.	D697	2	DANGER	Crushing Hazard
7.	30002990257	2	LOGO	Terrain Master
	30002990685	2	LOGO	Terrain Master 74
8.	03200347	1	REFLECT	SMV
9.	1458393	4	REFLECT	Yellow Reflector Decal
10.	D841	3	DANGER	Multi Hazard
11.	00776031	1	-----	Canister (Operator's Manual)
12.	1458392	4	REFLECTR	Red Reflector Decal
13.	002023	3	INSTRUCT	Height Adjustment
14.	D701	2	INSTRUCT	Wing Lube Chart
15.	D682	2	DANGER	Entanglement Hazard
16.	37002990204	1	-----	Operators Manual
17.	D869	3	WARNING	Use Genuine Terrain King Parts
18.	D626	3	DANGER	Thrown Object Hazard
19.	D698	2	DANGER	Wing Falling
20.	000108	3	INSTRUCT	Operating Instructions
21.	D685	1	WARNING	Avoid Inadvertent Unfolding
22.	D646	3	DANGER	Guard Missing
23.	D700	1	INSTRUCT	Lube Chart Rear Flail
24.	D699	2	DANGER	Multi Hazard Fire
25.	D842	3	DANGER	Multi Hazard Language
26.	001412	1	INSTRUCT	Control Valve
27.	D708	1	WARNING	Avoid Equipment Fire
28.	D726	1	INSTRUCT	Grease Fitting
29.	D546	1	DANGER	Guard Missing
30.	D547	1	DANGER	Driveline Hazard
31.	30002990686	1	LOGO	Flail King 74
	30002990687	1	LOGO	Flail King 88
	30002990688	1	LOGO	Flail King 96
32.	30002988455	1	INSTRUCT	OEM Parts

# SAFETY

SAFETY

## Decal Description



# SAFETY

**⚠ WARNING**



**TO AVOID DEATH OR SERIOUS INJURY FROM HIGH PRESSURE HYDRAULIC OIL LEAKS PENETRATING SKIN:**

- DO NOT OPERATE equipment with oil or fuel leaks.
- KEEP all hydraulic hoses, lines and connections in good condition and tight before applying system pressure.
- Relieve hydraulic pressure before disconnecting lines or working on the system.
- REMOVE and replace hose if you suspect it leaks. Have dealer test it for leaks.

**HIGH PRESSURE FLUID LEAKS CAN BE INVISIBLE. WHEN CHECKING FOR HYDRAULIC LEAKS AND WORKING AROUND HYDRAULIC SYSTEMS:**

- DO NOT use hands to check for leaks.
- ALWAYS WEAR safety glasses with side shields (marked to comply with ANSI Z87) and impenetrable gloves.
- USE paper or cardboard to search for leaks.
- KEEP hands and body AWAY from pin holes and nozzles ejecting hydraulic fluid.
- Hydraulic fluid may cause gangrene if not surgically removed immediately by a doctor familiar with this form of injury.

D617

SAFETY

**⚠ DANGER**



D646

**GUARD MISSING  
DO NOT OPERATE**

# SAFETY

SAFETY

**⚠ DANGER**

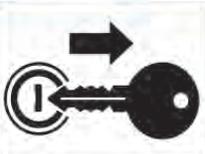
D841\_1

THROWN OBJECTS HAZARD

**Mower can throw objects up to 300 feet. TO AVOID DEATH OR SERIOUS INJURY to operator or bystanders:**

- STOP mowing if pedestrians or bystanders come within 300 feet.
- DO NOT OPERATE with thrown object shielding removed.
- KEEP thrown object shielding in place and in good condition during operation. Thrown Objects shielding is subject to wear.
- REPAIR OR REPLACE shielding if damaged, broken or missing. See Operator's Manual for all Shields and Guards.
- INSPECT area for potential mower thrown object hazards before mowing.
- Remove and AVOID objects such as wire, cable, metal objects and all other foreign material.
- DO NOT ALLOW blades to contact solid objects like wire, rocks, posts, curbs or guard rails.
- DO NOT OPERATE in transport position or with wings off ground.

**⚠ DANGER**



Run Over Hazard - Death or Injury

**TO AVOID SERIOUS INJURY OR DEATH:**

- ALWAYS BUCKLE UP seat belt.
- ONLY START Tractor while seated in the operator's seat.
- STOP ENGINE and PTO, engage parking brake, lower implement, allow all moving parts to stop and remove key before dismounting from tractor.
- KNOW HOW to stop tractor and equipment quickly for an emergency.
- DO NOT MOUNT or DISMOUNT Tractor in motion.
- NEVER ALLOW riders on tractor or implement.
- NEVER ALLOW children to operate or ride on tractor or implement.
- KEEP BYSTANDERS CLEAR of area before moving tractor or implement.
- KEEP ALERT and AVOID hitting stumps, holes, ruts, and uneven terrain.
- AVOID tree limbs, brush and other overhanging objects that can strike and throw the operator from seat.

D841\_4

# SAFETY

**SAFETY**

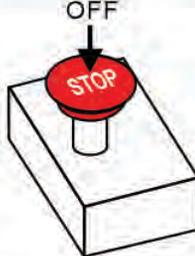
<b>⚠ DANGER</b>	
<b>ENTANGLEMENT HAZARD</b>	
<p><b>TO AVOID DEATH OR SERIOUS INJURY:</b></p> <ul style="list-style-type: none"> <li>● DO NOT operate without guards in place and in good condition. PTO and gearbox guarding are SUBJECT TO WEAR.</li> <li>● STAY AWAY and KEEP hands, feet and body AWAY from rotating blades, drivelines and parts that continue to move after power shut-off. WAIT until all moving elements have stopped.</li> <li>● ALWAYS REPLACE GUARDS that have been removed for service or maintenance.</li> <li>● STOP, LOOK and LISTEN for rotating motion before approaching implement.</li> <li>● DO NOT STEP ON drivelines or guards.</li> </ul>	<div style="text-align: center;">  <p style="font-size: small;">Tractor PTO Guard (Cubierta del PTO)</p>  <p style="font-size: small;">Implement PTO Guard (Cubierta del PTO) Shields (Cubiertas)</p> </div>
D841_2	

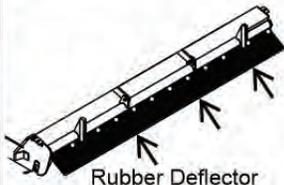
<b>⚠ DANGER</b>	
<b>Crushing Hazard - Death or Injury</b>	
<p><b>TO AVOID DEATH OR SERIOUS INJURY:</b></p> <ul style="list-style-type: none"> <li>● USE tractor equipped with <u>R</u>ollover <u>P</u>rotective <u>S</u>tructure ("ROPS") including roll bar and seat belt. Keep roll bar in raised position.</li> <li>● STAND CLEAR when removing transport latch, lowering or raising wings.</li> <li>● CLEAR AREA of bystanders before lowering implement wings.</li> <li>● IMPLEMENT CAN FALL from hydraulic failure or accidental operation of controls.</li> <li>● BLOCK UP and securely support equipment before putting hands, feet or body under raised equipment or lifted components.</li> </ul>	<div style="text-align: center;">   </div>
D841_3	

<b>⚠ DANGER</b>			
	 <a href="http://www.algqr.com/kfe">www.algqr.com/kfe</a>		 D841_5
<p><b>TO AVOID DEATH OR SERIOUS INJURY:</b></p> <ul style="list-style-type: none"> <li>● READ AND UNDERSTAND the provided Operator's Manuals, safety signs and information decals for tractor and implement before operating equipment.</li> <li>● CONTACT DEALER immediately if you do not have manuals.</li> <li>● CONTACT DEALER to explain any instructions not fully understood.</li> <li>● ALWAYS WEAR safety glasses with side shields (marked to comply with ANSI Z87).</li> <li>● WEAR hard hat, safety shoes and gloves for protection when operating equipment.</li> </ul>			
			D841

# SAFETY

SAFETY

<b>! DANGER</b>	
<b>Entanglement Hazard</b>	
Mower head will start running when lowered if Mower ON/OFF Switch is ON.	
<b>TO AVOID DEATH OR SERIOUS INJURY:</b>	
<ul style="list-style-type: none"><li>• MAKE CERTAIN the ON/OFF SWITCH is OFF before lowering mower head.</li><li>• CLEAR AREA of bystanders before lowering mower head.</li></ul>	
Mower head automatically shuts OFF when raised above 45°.	
D682	
	

<b>! DANGER</b>	
<b>THROWN OBJECT HAZARD</b>	
D626	
<b>TO AVOID DEATH OR SERIOUS INJURY:</b>	
DO NOT OPERATE if Thrown Object Shielding is damaged or missing.	
<ul style="list-style-type: none"><li>• Maintain Rubber Deflectors in good condition.</li><li>• Inspect Rubber Deflectors frequently.</li></ul>	
MAINTAIN Thrown Object Shielding	
 <b>HERE</b> 	 Rubber Deflector

# SAFETY

SAFETY

**⚠ WARNING**

**TO AVOID DEATH OR SERIOUS INJURY:**

- ONLY use genuine TERRAIN KING replacement parts, which have been validated and tested to use on Terrain King equipment by the manufacturer.
- The equipment manufacturer cannot verify the material or structural integrity of third-party supplied non-genuine replacement parts.
- Using non-genuine parts can result in the part failing, creating hazardous conditions for operator and bystanders. Contact local dealer or TERRAIN KING about repair parts at:  
1502 E. Walnut, Seguin, TX 78155.  
Customer Service: 800-882-5756.  
Email: boom@terraining.com

 [www.algqr.com/kpm](http://www.algqr.com/kpm)

**⚠ WARNING**  
Cancer and Reproductive Harm  
[www.P65 Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**IMPORTANT**

<b>BE AWARE BE ALERT BE ALIVE</b>	<b>BE TRAINED</b> <b>Before Operating this Mower</b>
---	---

 [www.algqr.com/ave](http://www.algqr.com/ave)

To prevent serious injury to yourself and/or bystanders, be trained in Safe Mowing Practices. Alamo Group Companies as well as AEM and FEMA provide training material that is critical for your Safety and the Safety of others when operating this equipment. Make these Safety Procedures an important part of every workday. Read and understand the Operator's Manual.

Do not let untrained individuals operate this equipment. Contact your Dealer, AEM ([www.aem.org](http://www.aem.org)), FEMA (314-878-2304, [www.FarmEquip.org](http://www.FarmEquip.org)), or Alamo Group ([www.Alamo-Group.com](http://www.Alamo-Group.com)) for information on training material or courses that provide training in Safer Operating Practices for Mowers.

D869

**⚠ DANGER**

D546



**GUARD MISSING  
DO NOT OPERATE**

**IMPORTANT**

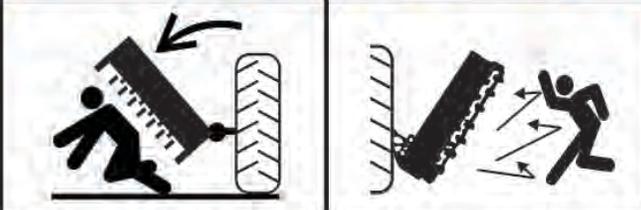
Service hydraulic system with universal tractor hydraulic oil. Part number 30002966307.

D877

# SAFETY

SAFETY

**! DANGER**



**Crushing Hazard - Death or Injury**

**TO AVOID DEATH OR SERIOUS INJURY:**

- **STAND CLEAR** when removing transport latch, lowering or raising wings.
- **CLEAR AREA** of bystanders before lowering implement wings.
- **IMPLEMENT CAN FALL** from hydraulic failure or accidental operation of controls.
- **BLOCK UP** and securely support equipment before putting hands, feet or body under raised equipment or lifted components.
- **SECURELY ENGAGE** transport latch before transportation or working under wing.
- **FILL CYLINDERS** with oil before attempting to lower implement wings.
- **DO NOT OPERATE** in transport position or with wings off ground.

D698

**! WARNING**



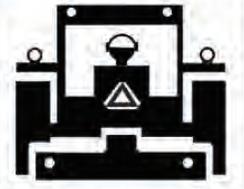
**To Avoid Inadvertent Unfolding and Serious Injury during Transportation:**

- Transport with lever in neutral position.

D685

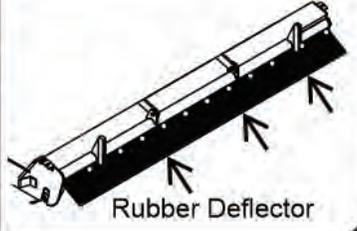
# SAFETY

SAFETY

<b>⚠ WARNING</b>		
		
<b>TO AVOID DEATH OR SERIOUS INJURY DURING TRANSPORTATION:</b>		
<ul style="list-style-type: none"><li>● ALWAYS BUCKLE UP seat belt.</li><li>● PLACE wing securely in Transport latch and turn off master switch.</li><li>● CHECK SMV sign, reflectors and warning lights for visibility behind unit.</li><li>● TURN ON tractor flashing warning lights.</li></ul>		
<b>TO AVOID LOSS OF TRANSPORTATION CONTROL:</b>		
<ul style="list-style-type: none"><li>● DO NOT travel at speeds over 20 mph.</li><li>● REDUCE SPEED on inclines, in turns and in poor weather conditions.</li></ul>		
<b>⚠ WARNING</b>		
<b>TO AVOID DEATH OR SERIOUS INJURY DURING OPERATION:</b>		
<ul style="list-style-type: none"><li>● DO NOT lift implement while on steep slopes.</li><li>● KEEP AWAY from soft ditch banks and holes.</li><li>● ALWAYS MAINTAIN 20% of tractor weight on front wheels.</li><li>● DO NOT start or accelerate suddenly.</li><li>● KEEP mower AT LEAST 10 FEET AWAY from electric lines and pipe lines.</li></ul>		
<b>⚠ WARNING</b>		
<b>TO AVOID EQUIPMENT AND GRASS FIRES:</b>		
<ul style="list-style-type: none"><li>● CLEAR AWAY grass or debris from hydraulic lines, circuits and decks.</li></ul>		
<b>TO AVOID FIRE IGNITION:</b>		
<ul style="list-style-type: none"><li>● DO NOT ALLOW BLADES TO CONTACT rocks, metal or solid objects.</li><li>● DO NOT ALLOW OIL TO SPRAY on hot equipment or components.</li></ul>		

# SAFETY

SAFETY

 <b>DANGER</b>	
<b>THROWN OBJECT HAZARD</b>	D626
<b>TO AVOID DEATH OR SERIOUS INJURY:</b> DO NOT OPERATE if Thrown Object Shielding is damaged or missing. <ul style="list-style-type: none"><li>• Maintain Rubber Deflectors in good condition.</li><li>• Inspect Rubber Deflectors frequently.</li></ul>	
MAINTAIN Thrown Object Shielding  <b>HERE</b> 	 Rubber Deflector

 <b>WARNING</b>	
<b>TO AVOID EQUIPMENT AND GRASS FIRES:</b> <ul style="list-style-type: none"><li>• CLEAR AWAY grass or debris from slip clutches, gearboxes, drivelines and decks.</li></ul> <b>TO AVOID FIRE IGNITION:</b> <ul style="list-style-type: none"><li>• DO NOT ALLOW BLADES TO CONTACT rocks, metal or solid objects that can create sparks.</li></ul>	 D708

# SAFETY

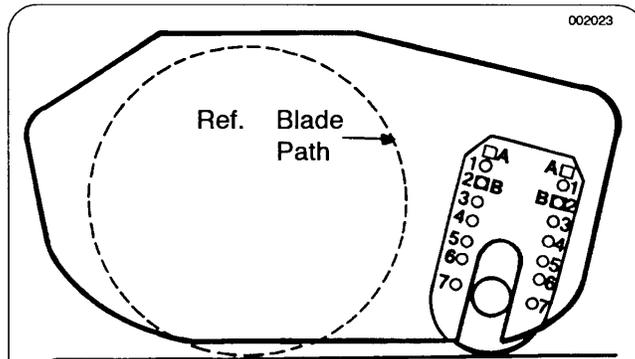
SAFETY

<b>⚠ PELIGRO</b>	<b>⚠ DANGER</b>
Si no puede leer inglés: antes de poner en funcionamiento este equipo, solicite que alguien le traduzca los mensajes de seguridad o vaya al sitio web para consultar los mensajes de seguridad y las etiquetas ya traducidos.	Si vous ne pouvez pas lire l'anglais : avant d'utiliser l'équipement, demandez à une personne de vous traduire les messages de sécurité ou allez sur le site Internet pour voir la traduction des autocollants et des messages de sécurité.
<b>El Manual del Operador Seguridad vídeo</b>    <a href="http://www.algqr.com/kfs">www.algqr.com/kfs</a> <a href="http://www.algqr.com/avs">www.algqr.com/avs</a>	<b>Manuel de l'Opérateur</b>   <a href="http://www.algqr.com/kff">www.algqr.com/kff</a>

<b>⚠ PERIGO</b>	<b>⚠ GEFAHR</b>
Caso você não leia inglês: antes de operar o equipamento, peça para alguém traduzir as mensagens de segurança ou visite a web e obtenha tais mensagens ou os decalques traduzidos.	Falls Sie nicht Englisch sprechen: Bevor Sie die Geräte in Betrieb nehmen, bitten Sie eine Englisch sprechende Person darum, Ihnen die Sicherheitsmeldung zu übersetzen, oder besuchen Sie die Website; dort finden Sie übersetzte Aufkleber und Sicherheitsmeldungen.
<b>Manual do Operador</b>   <a href="http://www.algqr.com/kfp">www.algqr.com/kfp</a>	<b>Benutzerhandbuch</b>   D842 <a href="http://www.algqr.com/kfg">www.algqr.com/kfg</a>

# SAFETY

**SAFETY**



**MOWER CUTTING HEIGHT ADJUSTMENT**

DESIRED CUTTING HEIGHT (INCHES)	ADJUSTMENT BRACKET HOLE	MOWER END PLATE HOLE
1/2	B	2
1	A	1
1-1/2	B	3
2	A	2
2-1/2	B	4
3	A	3
3-1/2	B	5
4	A	4
4-1/2	B	6
5	A	5
5-1/2	B	7
6	A	6

### OPERATING INSTRUCTIONS

This Mower will give long satisfactory service with a minimum of upkeep cost if the following procedure is followed:

1. **KEEP PROPERLY LUBRICATED**
  - a. **BEARINGS** - Use a lithium-based #2 Bearing Grease such as Shell Alvania #2, Sinclair Litholene, Mobil BRB, Texaco Marfak #2, Standard Stanolith #57, etc.
  - b. **GEARBOX** - Use SAE EP90 oil.
2. **KEEP FASTENERS TIGHTENED**
  - a. Normally, if Fasteners loosen after being properly tightened, the Mower is vibrating more than is acceptable and permanent damage can occur rapidly.
  - b. See Bolt Chart for proper tightening torque.
3. **KEEP THE MOWER RUNNING SMOOTHLY AND QUIETLY.**
  - a. After hitting any obstruction and at the first sign of any unusual vibration or noise, STOP THE MOWER, and do not operate again until the problem is found and corrected. VIBRATION CAN DESTROY THE ENTIRE MOWER IN A SHORT TIME.
  - b. Inspect for broken or missing Knives, Knives restricted from swinging freely, worn Bearings, a bent Shaft, or other conditions causing out-of-balance rotation.
  - c. See Operators Manual for details on causes and correction of vibration of Flail Mowers.

**NOTICE:** Warranty does not cover damage resulting from the failure to observe these reasonable procedures.

000108

# SAFETY

## FEDERAL LAWS AND REGULATIONS

This section is intended to explain in broad terms the concept and effect of federal laws and regulations concerning employer and employee equipment operators. This section is not intended as a legal interpretation of the law and should not be considered as such.

### Employer-Employee Operator Regulations

U.S. Public Law 91-596 (The Williams-Steiger Occupational and Health Act of 1970) OSHA

#### This Act Seeks:

“...to assure so far as possible every working man and woman in the nation safe and healthful working conditions and to preserve our human resources...”

#### DUTIES

Sec. 5 (a) Each employer-

- (1) shall furnish to each of his employees employment and a place of employment which are free from recognized hazards that are causing or are likely to cause death or serious physical harm to his employees;
- (2) shall comply with occupational safety and health standards promulgated under this Act.
- (b) Each employee shall comply with occupational safety and health standards and all rules, regulations and orders issued pursuant to this Act which are applicable to his own actions and conduct.

### OSHA Training Requirements

**Title 29, Code of Federal Regulations Part 1928.57(a)(6). [www.osha.gov](http://www.osha.gov)**

Operator instructions. At the time of initial assignment and at least annually thereafter, the employer shall instruct every employee who operates an agricultural tractor and implements in the safe operating practices and servicing of equipment with which they are or will be involved, and of any other practices dictated by the work environment.

Keep all guards in place when the machine is in operation;

Permit no riders on equipment

Stop engine, disconnect the power source, and wait for all machine movement to stop before servicing, adjusting, cleaning or unclogging the equipment, except where the machine must be running to be properly serviced or maintained, in which case the employer shall instruct employees as to all steps and procedures which are necessary to safely service or maintain the equipment.

Make sure everyone is clear of machinery before starting the engine, engaging power, or operating the machine.

### Employer Responsibilities:

To ensure employee safety during Tractor and Implement operation, it is the employer's responsibility to:

1. Train the employee in the proper and safe operation of the Tractor and Implement.
2. Require that the employee read and fully understand the Tractor and Implement Operator's manual.
3. Permit only qualified and properly trained employees to operate the Tractor and Implement.
4. Maintain the Tractor and Implement in a safe operational condition and maintain all shields and guards on the equipment.
5. Ensure the Tractor is equipped with a functional ROPS and seat belt and require that the employee operator securely fasten the safety belt and operate with the ROPS in the raised position at all times.
6. Forbid the employee operator to carry additional riders on the Tractor or Implement.
7. Provide the required tools to maintain the Tractor and Implement in a good safe working condition and provide the necessary support devices to secure the equipment safely while performing repairs and service.
8. Require that the employee operator stop operation if bystanders or passersby come within 300 feet.

### Child Labor Under 16 Years of Age

Some regulations specify that no one under the age of 16 may operate power machinery. It is your responsibility to know what these regulations are in your own area or situation. (Refer to U.S. Dept. of Labor, Employment Standard Administration, Wage & Home Division, Child Labor Bulletin #102.)



# INTRODUCTION SECTION

Introduction Section 2-1

# INTRODUCTION

The Terrain Master Flail Mower is designed with care and built with quality materials by skilled workers. Proper assembly, maintenance, and operating practices, as described in this manual, will help the owner/operator get years of satisfactory service from the machine.

The purpose of this manual is to familiarize, instruct, and train. The Assembly Section instructs the owner/operator in the correct assembly of the Mower using standard and optional equipment. The Parts Manual is designed to familiarize the owner/operator with replaceable parts on the Mower and is provided also. This section provides exploded assembly drawings of each mower component illustrating each piece and the corresponding part number.

Careful use and timely service saves extensive repairs and costly downtime losses. The Operation and Maintenance Sections of the manual train the owner/operator how to work the Mower correctly and attend to appropriate maintenance. The Trouble Shooting Guide helps diagnose difficulties with mower and offers solution to the problems.

Safety is of primary importance to the owner/operator and to the manufacturer. The first section of this manual includes a list of Safety Messages, that, if followed, will help protect the operator and bystanders from injury or death. Many of the Safety Messages will be repeated throughout the manual. The owner/operator/dealer should know these Safety Messages before assembly and be aware of the hazards of operating this mower during assembly, use, and maintenance. The Safety Alert Symbol combined with a Signal Word, as seen below, is intended to warn the owner/operator of impending hazards and the degree of possible injury faced when operating this machine.



Indicates an imminently hazardous situation that, if not avoided, WILL result in DEATH OR VERY SERIOUS INJURY.



Indicates an imminently hazardous situation that, if not avoided, COULD result in DEATH OR SERIOUS INJURY.



Indicates an imminently hazardous situation that, if not avoided, MAY result in MINOR INJURY.

**Important**

Identifies special instructions or procedures that, if not strictly observed, could result in damage to, or destruction of the machine, attachments or the environment.

# INTRODUCTION



1. Rear Mower
2. Wing Mower
3. Frame
4. Rubber Deflector
5. Hydraulic Hoses
6. Hydraulic Cylinders
7. Motor
8. Hydraulic Tank
9. Drive Belt
10. Driveline
11. Gearbox

INTRODUCTION

The Terrain Master is a revolutionary mowing system. Utilizing 2 side wings and 1 rear, you have ability to mow up to 21' across in one swath. Perfect for large areas of mowing including interstate highways and airport fields. A productive way to get a manicured cut in spaces there is high public visibility.

Unique in-frame cooling system maintains the proper oil temperature while providing constant power flow.

Strong top decks made with 10-gauge steel and end plates that are 1/2" thick for the inboard and 5/16" thick steel for the outboard.

Smart front mount hydraulic pump that drives power from the crankshaft of tractor, while twin piston pumps provide the power for the wing mowing units.

Knife Variety - An array of cutting knife options allows you to tailor the finished appearance to meet your needs.

Cutting Capacity: 1" diameter grass and weeds.

Wing Cutting Widths:

21' 9.5" Terrain Master, 96" Rear Flail, 88" Left and Right Wings

19' 5.5" Terrain Master, 96" Rear Flail, 74" Left and Right Wings

14' 10.75" Single-Side Terrain Master, 96" Rear Flail and 88" Right Wing

13' 8.75" Single-Side Terrain Master, 96" Rear Flail and 74" Right Wing

Literature Page



[www.algqr.com/kle](http://www.algqr.com/kle)

# INTRODUCTION

Dual Wing	Wing	Rear	Cut	Cut
	88	96	261.5	21' 9.5"
	74	96	233.5	19' 5.5"

Single Wing	Wing	Rear	Cut	Cut
	88	96	178.75	14' 10.75"
	74	96	164.75	13' 8.75"

## Attention Owner/Operator

BEFORE OPERATING THIS MACHINE:

1. Carefully read the Operator's Manual, completely understand the Safety Messages and instructions, and know how to operate correctly both the tractor and implement.
2. Fill out the Warranty Card in full. Be sure to answer all questions, including the Serial Number of the implement. Mail within 30 days of delivery date of this implement.

**NOTE:** Warranties are honored only if completed "Owner Registration and Warranty" forms are received by Terrain King within thirty days of delivery of the implement.

3. Record the Model and Serial Numbers on the Warranty page at the front of the Operator's Manual. Keep this as part of the permanent maintenance file for the implement.

# INTRODUCTION

## TERRAIN KING LIMITED WARRANTY

### 1. LIMITED WARRANTIES

- 1.01. Terrain King ("Manufacturer") warrants for one year from the purchase date to the original non-commercial, governmental, or municipal Purchaser and warrants for six months to the original commercial or industrial purchaser ("Purchaser", as applicable) that the goods Purchased are free from defects in material or workmanship.
- 1.02. Manufacturer will replace for the Purchaser any part or parts found, upon examination at one of its factories, to be defective under normal use and service due to defects in material or workmanship during the applicable warranty period.
- 1.03. This limited warranty does not apply to any part of the goods which has been subjected to improper or abnormal use, negligence, alteration, modification, or accident, damaged due to lack of maintenance or use of wrong fuel, oil, or lubricants, or which has served its normal life. This limited warranty does not apply to any part of any internal combustion engine, or expendable items such as blades, shields, guards, or pneumatic tires except as specifically found in your operator's manual.
- 1.04. No employee, agent, dealer, or other person is authorized to give any warranties of any nature on behalf of Manufacturer.

### 2. REMEDIES AND PROCEDURES.

- 2.01. This limited warranty is not effective unless the purchaser returns the registration and warranty form to Manufacturer within 30 days of purchase.
- 2.02. Purchaser claims must be made in writing to the authorized dealer ("dealer") from whom Purchaser purchased the goods or an approved authorized dealer ("dealer") within 30 days after Purchaser learns of the facts on which the claim is based.
- 2.03. Purchaser is responsible for returning the goods in question to the dealer.
- 2.04. If after examining the goods and/or parts in question, Manufacturer finds them to be defective under normal use and service due to defects in material or workmanship, Manufacturer will:
  - (a) Repair or replace the defective goods or part(s) or
  - (b) Reimburse Purchaser for the cost of the part(s) and reasonable labor charges (as determined by Manufacturer) if Purchaser paid for the repair and/or replacement prior to the final determination of applicability of the warranty by Manufacturer. The choice of remedy shall belong to Manufacturer.
- 2.05. Purchaser is responsible for any labor charges exceeding a reasonable amount as determined by Manufacturer and for returning the goods to the dealer, whether or not the claim is approved. Purchaser is responsible for the transportation cost for the goods or part(s) from the dealer to the designated factory.

### 3. LIMITATION OF LIABILITY.

- 3.01. MANUFACTURER DISCLAIMS ANY EXPRESS (EXCEPT AS SET FORTH HEREIN) AND IMPLIED WARRANTIES WITH RESPECT TO THE GOODS INCLUDING, BUT NOT LIMITED TO, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.
- 3.02. 3.02. MANUFACTURER MAKES NO WARRANTY AS TO THE DESIGN, CAPABILITY, CAPACITY, OR SUITABILITY FOR USE OF THE GOODS.
- 3.03. 3.03. EXCEPT AS PROVIDED HEREIN, MANUFACTURER SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO PURCHASER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS, OR DAMAGE CAUSED OR ALLEGED TO BE CAUSED DIRECTLY OR INDIRECTLY BY THE GOODS INCLUDING, BUT NOT LIMITED TO, ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES RESULTING FROM THE USE OR OPERATION OF THE GOODS OR ANY BREACH OF THIS WARRANTY. NOT WITHSTANDING THE ABOVE LIMITATIONS AND WARRANTIES, MANUFACTURER'S LIABILITY HEREUNDER FOR DAMAGES INCURRED BY PURCHASER OR OTHERS SHALL NOT EXCEED THE PRICE OF THE GOODS.
- 3.04. 3.04. NO ACTION ARISING OUT OF ANY CLAIMED BREACH OF THIS WARRANTY OR TRANSACTIONS UNDER THIS WARRANTY MAY BE BROUGHT MORE THAN TWO (2) YEARS AFTER THE CAUSE OF ACTION HAS OCCURRED.

### 4. MISCELLANEOUS.

- 4.01. 4.01. Proper venue for any lawsuits arising from or related to this limited warranty shall be only in Guadalupe County, Texas.
- 4.02. 4.02. Manufacturer may waive compliance with any of the terms of this limited warranty, but no waiver of any terms shall be deemed to be a waiver of any other term.
- 4.03. 4.03. If any provision of this limited warranty shall violate any applicable law and is held to be unenforceable, then the invalidity of such provision shall not invalidate any other provisions herein.
- 4.04. 4.04. Applicable law may provide rights and benefits to Purchaser in addition to those provided herein.

### KEEP FOR YOUR RECORDS

ATTENTION: Purchaser should fill in the blanks below for his reference when buying repair parts and/or for proper machine identification when applying for warranty.

Terrain King Implement Model \_\_\_\_\_ Serial Number \_\_\_\_\_

Date Purchased \_\_\_\_\_ Dealer \_\_\_\_\_

ATTENTION:

READ YOUR OPERATOR'S MANUAL

**TERRAIN KING**  
1502 East Walnut St.  
Seguin, Texas 78156  
800-882-5756



TERRAIN MASTER 03/21

Introduction Section 2-5



# OPERATION SECTION

Operation Section 3-1

# OPERATION

OPERATION

## TERRAIN KING TERRAIN MASTER OPERATING INSTRUCTIONS

Terrain King Terrain Master flail mowers are manufactured with quality material by skilled workers. These mowers are designed for cutting grass and small weeds. The mower is equipped with protective deflectors to prevent objects being thrown from the mower by the blades, however, no shielding is 100% effective. All shields, guards, and deflectors equipped on the mower must be maintained in good operational condition.

It is the operator's responsibility to be knowledgeable of all potential operating hazards and to take every reasonable precaution to ensure oneself, others, animals, and property are not injured or damaged by the mower, tractor, or a thrown object. Do not operate the mower if passersby, pets, livestock, or property are within 100 yards of the unit.

- **All THROWN OBJECT SHIELDING** including, Front, Rear Deflectors and Skid Shoes are in place and in good condition when mowing.
- Mower is adjusted to be close and parallel to ground without exposing blades.
- **MOWING AREA** has been inspected and foreign materials and debris have been removed.
- **PASSERSBY** are inside enclosed vehicle.

This section of the Operator's Manual is designed to familiarize, instruct, and educate safe and proper mower use to the operator. Pictures contained in this section are intended to be used as a visual aid to assist in explaining the operation of a Terrain Master flail mower and are not specific to any model. Some pictures may show shields removed for picture clarity. NEVER operate implement without all shields in place and in good operational condition. The operator must be familiar with the mower and tractor and all associated safety practices before operating the mower and tractor. Proper operation of the mower, as detailed in this manual, will help ensure years of safe and satisfactory use of the mower.

### Important

To avoid mower damage, retorque all bolts after the first 10 hours of operation. Refer to the Torque Chart at the end of the Maintenance Section to ensure bolts are properly tightened.

**READ AND UNDERSTAND THE ENTIRE OPERATING INSTRUCTIONS AND SAFETY SECTION OF THIS MANUAL AND THE TRACTOR MANUAL BEFORE ATTEMPTING TO USE THE TRACTOR AND IMPLEMENT.** If you do not understand any of the instructions, contact your nearest authorized dealer for a full explanation. Pay close attention to all safety signs and safety messages contained in this manual and those affixed to the implement and tractor. *OPS-U- 0001*

READ, UNDERSTAND, and FOLLOW the following Safety Messages. Death or serious injury may occur unless care is taken to follow the warnings and instructions stated in the Safety Messages. Always use good common sense to avoid hazards. (SG-2)



Si no lee ingles, pida ayuda a alguien que si lo lea para que le traduzca las medidas de seguridad. (SG-3)

¡ LEA EL  
INSTRUCTIVO!



## Standard Equipment and Specifications

### Base Unit Specifications

TERRAIN MASTER 03/21

Operation Section 3-2

# OPERATION

16'5", 18'5", or 20'9" Overall Cutting Widths  
Full-Length Welded Tubular Frame With Transport Lock  
19-Gallon Reservoir with 12 Micron Filtration  
Tandem Piston Pumps Rated @ 48 GPM @ 3800 PSI (Dual Terrain Master)  
Tandem Piston Pump Rated @ 24 GPM @ 3800 PSI (Right & Left Hand Terrain Master)  
4-Spool Valve with Detent Position (Dual Wing Terrain Master)  
2-Spool Valve with Detent Position (Right & Left Hand Terrain Master)

## **Wing Mower Specification**

62", 74", or 88" Cutting Widths  
1/2" Inboard & 5/16" Outboard Side Plates  
Replaceable Skid Shoes  
4-1/2" x 5/16" Wall Cuttershaft  
1-5/16" Bore Greasable, Self-Aligning Cuttershaft Bearings  
53 HP Piston Motor  
Belt Drive From Motor to Cuttershaft with Automatic Spring Tension  
6" Adjustable Rear Roller  
1/2" to 6" Cutting Height  
Available in Fine or Coarse-Cut  
Front and Rear Safety Deflectors  
Automatic Cut-Off Switch  
Lift Cylinder Capable of 14" Vertical Lift  
Tilt Cylinder Capable of 40 Degrees Down & 90 Degrees up  
10 Gauge Unitized Cutter Housing

## **Rear Mower Specifications**

88" or 96" Cutting Width (Depending on tractor mount kit)  
10-Gauge Unitized Cutter Housing  
5/16" Side Plates  
CAT I or CAT II Three Point Hitch  
4-1/2" x 5/16" Wall Cuttershaft  
1-5/16" Bore Greasable, Self-Aligning Cuttershaft Bearings  
60 HP Gearbox  
6" Adjustable Rear Roller  
1/2" to 6" Cutting Height  
Available in Fine or Coarse-Cut  
Torque Limiter Clutch  
Front and Rear Safety Deflectors  
CAT 4 Driveline  
Belt Drive From Gearbox To Cuttershaft with Automatic Spring Tension

# OPERATION

## 1. OPERATOR REQUIREMENTS

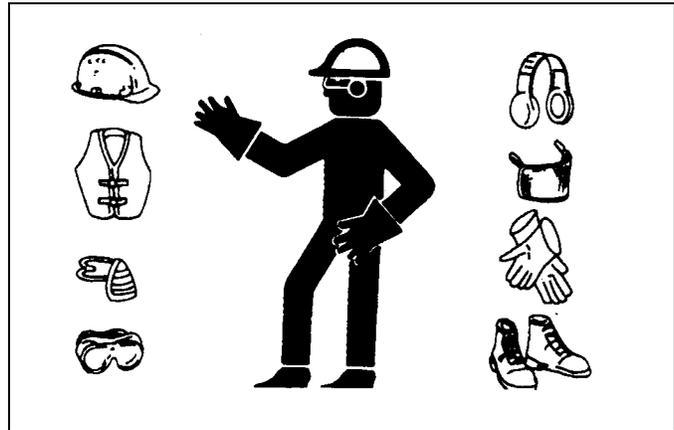
Safe operation of the unit is the responsibility of a qualified operator. A qualified operator has read and understands the implement and tractor Operator's Manuals and is experienced in implement and tractor operation and all associated safety practices. In addition to the safety messages contained in this manual, safety signs are affixed to the implement and tractor. If any part of the operation and safe use of this equipment is not completely understood, consult an authorized dealer for a complete explanation.

If the operator cannot read the manuals for themselves or does not completely understand the operation of the equipment, it is the responsibility of the supervisor to read and explain the manuals, safety practices, and operating instructions to the operator.

Safe operation of equipment requires that the operator wear approved Personal Protective Equipment (PPE) for the job conditions when attaching, operating, servicing, and repairing the equipment. PPE is designed to provide operator protection and includes the following safety wear:

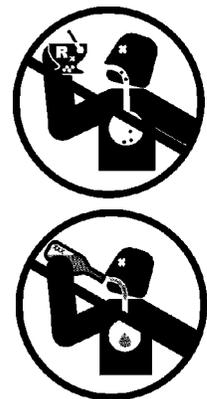
### PERSONAL PROTECTIVE EQUIPMENT (PPE)

- Always Wear Safety Glasses with Side Shields (marked with ANSI Z87)
- Hard Hat
- Steel Toe Safety Footwear
- Gloves
- Hearing Protection
- Close Fitting Clothing
- Respirator or Filter Mask (depends on operating conditions) *OPS-U- 0002*



### **DANGER**

DO NOT use drugs or alcohol immediately before or while operating the Tractor and Implement. Drugs and alcohol will affect an operator's alertness and coordination and therefore affect the operator's ability to operate the equipment safely. Before operating the Tractor or Implement, an operator on prescription or over-the-counter medication must consult a medical professional regarding any side effects of the medication that would hinder their ability to operate the Equipment safely. NEVER knowingly allow anyone to operate this equipment when their alertness or coordination is impaired. Serious injury or death to the operator or others could result if the operator is under the influence of drugs or alcohol. (SG-27)



# OPERATION

## 2. TRACTOR REQUIREMENTS

In addition to tractor horsepower and size required to operate the flail mower, the tractor must also be properly equipped to provide operator protection, to alert approaching vehicle drivers of the tractor's presence, and to ensure tractor stability when mowing with the flail mower.

### **Tractor Requirements and Capabilities**

- Certified approved Roll-Over Protective Structure (ROPS) or ROPS cab and seat belt.
- Tractor Safety Devices ..... Slow Moving Vehicle (SMV) emblem, lighting, PTO master shield
- Tractor Horsepower-Minimum ..... Single Wing 74 w/ 96 Rear-60 Engine HP,  
Dual Wing 74 w/96 Rear-80 Engine HP
- Power Take Off ..... 540 RPM
- Wheel Base Minimum ..... 80"

### 2.1 ROPS and Seat Belt

The tractor must be equipped with a Roll-Over-Protective-Structure (ROPS) (tractor cab or roll-bar) and seat belt to protect the operator from falling off the tractor, especially during a roll over where the driver could be crushed and killed. Only operate the tractor with the ROPS in the raised position and seat belt fastened. Tractor models not equipped with a ROPS and seat belt should have these life saving features installed by an authorized dealer. *OPS-U- 0003*



Operate this Equipment only with a Tractor equipped with an approved roll-over-protective system (ROPS). Always wear seat belts. Serious injury or even death could result from falling off the tractor, particularly during a turnover when the operator could be pinned under the ROPS. (SG-7)



### 2.2 Tractor Safety Devices

If transporting or operating the tractor and implement near a public roadway, the tractor must be equipped with proper warning lighting and a Slow Moving Vehicle (SMV) emblem which are clearly visible from the rear of the unit. Lights and a SMV emblem must be equipped directly on implements if the visibility of the tractor warning signals are obscured.

Maintain all manufacturer equipped safety shields and guards. Always replace shields and guards that were removed for access to connect, service, or repair the tractor or implement. Never operate the tractor PTO with the PTO master shield missing or in the raised position. *OPS-U- 0004*

### 2.3 Tractor Horsepower

The horsepower required to operate the mower depends on many factors including the vegetation to be cut, terrain condition, operator experience, and condition of the mower and tractor. For most mowing condition, the Rear INT 88" & 96" mowers require a tractor with at least 60HP. Operating the mower with a tractor that does not have adequate power may damage the tractor engine.

# OPERATION



**DO NOT** use a PTO adapter to attach a non-matching Implement driveline to a Tractor PTO. Use of an adapter can double the operating speed of the Implement resulting in excessive vibration, thrown objects, and implement failure. Adapter use will also change the working length of the driveline exposing unshielded driveline areas. Serious bodily injury and/or equipment failure can result from using a PTO adapter. Consult an authorized dealer for assistance if the Implement driveline does not match the Tractor PTO. (S3PT-14)

## **3. GETTING ON AND OFF THE TRACTOR**

Before getting onto the tractor, the operator must read and completely understand the implement and tractor operator manuals. If any part of either manual is not completely understood, consult an authorized dealer for a complete explanation. *OPS-U-0007*



Do not mount or dismount the Tractor while the tractor is moving. Mount the Tractor only when the Tractor and all moving parts are completely stopped. (SG-12)



### **3.1 Boarding the Tractor**

Use both hands and equipped handrails and steps for support when boarding the tractor. Never use control levers for support when mounting the tractor. Seat yourself in the operator's seat and secure the seat belt around you.

Never allow passengers to ride on the tractor or attached equipment. Riders can easily fall off and be seriously injured or killed from falling off and being ran over. It is the operator's responsibility to forbid all extra riders at all times. *OPS-U- 0008*



Never allow children to operate, ride on, or come close to the Tractor or Implement. Usually, 16-17 year-old children who are mature and responsible can operate the implement with adult supervision, if they have read and understand the Operator's Manuals, been trained in proper operation of the tractor and Implement, and are physically large enough to reach and operate the controls easily. (SG-11)



Never allow children or other persons to ride on the Tractor or Implement. Falling off can result in serious injury or death. (SG-10)



# OPERATION

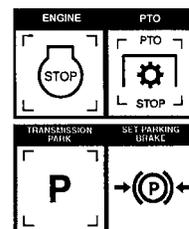
## 3.2 Dismounting the Tractor

Before dismounting, park the tractor and implement on a reasonably level surface, apply the parking brake and/or transmission park lock. Idle the engine down, disengage the PTO, and lower the implement to the ground. Shut down the tractor engine according to the operator's manual, remove the key, and wait for all motion to completely stop. Never leave the seat until the tractor, its engine and all moving parts have come to a complete stop.

Use hand rails and steps when exiting the tractor. Be careful of your step and use extra caution when mud, ice, snow or other matter has accumulated on the steps or hand rails. Use all handrails and steps for support and never rush or jump off the tractor. *OPS-U- 0009\_TK*



BEFORE leaving the tractor seat lower the implement, set the parking brake and/or set the tractor transmission parking lock, disengage the PTO, stop the engine, remove the key, and wait for all moving parts to stop. Place the tractor shift lever into a low range or parking lock to prevent the tractor from rolling. Never dismount a Tractor that is moving or while the engine is running. Operate the Tractor controls from the tractor seat only. (SG-9\_TK)



## 4. STARTING THE TRACTOR

The operator must have a complete understanding of the placement, function, and operational use of all tractor controls before starting the tractor. Review the tractor operator's manual and consult an authorized dealer for tractor operation instructions if needed.

Essential Tractor Controls:

- Locate the light control switch.
- Locate the engine shut off control.
- Locate the brake pedals and the clutch.
- Locate the PTO control.
- Locate the 3-point hitch control lever.
- Locate the hydraulic remote control levers.

Before starting the tractor ensure the following:

- Conduct all pre-start operation inspection and service according to the tractor operator's manual.
- Make sure all guards, shields, and other safety devices are securely in place.
- The parking brake and/or transmission parking lock is on.
- The PTO control lever is disengaged.
- The 3-point hitch control lever is in the lowered position.
- The hydraulic remote control levers are in the neutral position.
- The tractor transmission levers are in park or neutral.

Refer to the tractor owner's manual for tractor starting procedures. Only start the tractor while seated and belted in the tractor operator's seat. Never bypass the ignition switch by short circuiting the starter solenoid.

After the tractor engine is running, avoid accidental contact with the tractor transmission to prevent sudden and unexpected tractor movement. *OPS-U-0028\_TK*

# OPERATION



Never run the Tractor engine in a closed building or without adequate ventilation. The exhaust fumes can be hazardous to your health. (SG-23)



Start tractor only when properly seated in the Tractor seat. Starting a tractor in gear can result in injury or death. Read the Tractor operators manual for proper starting instructions. (SG-13)



OPERATION

## 5. CONNECTING THE MOWER TO THE TRACTOR

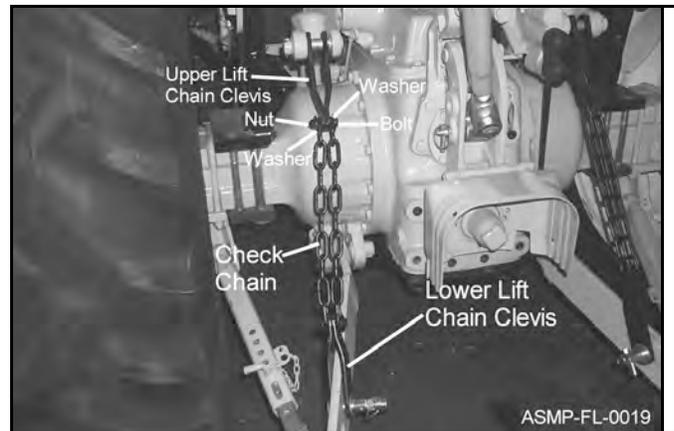
Use extreme caution when connecting the mower to the tractor. The mower should be securely resting at ground level or setting on blocks. Keep hands and feet from under the mower deck and clear of pinch points between the tractor hitch arms and mower pins. OPS-R-0001



Always shut the Tractor completely down, set the parking brake and/or the transmission parking lock before you or anyone else attempts to connect or disconnect the Implement and Tractor hitches. (S3PT-15\_TK)

### Connecting the Mower A-Frame to the Tractor

1. Make sure the tractor is equipped with 540 PTO shaft. Change shafts if needed.
2. Shorten or remove the tractor drawbar to avoid interference when raising and lowering the mower.
3. Board the tractor and start the engine. Position the tractor to the mower with the 3-point lift arms positioned between the respective set of mower A-frame lift lugs. Note: Set the 3-point lift control to "Position Control" so that the lift arms maintain a constant height when attaching the mower. See the tractor Operator's Manual for correct settings when attaching 3-point equipment.



# OPERATION

4. Turn off the tractor engine and dismount.
5. One lift arm at a time, align arm end hole between the set of A-frame lift lugs. Insert hitch pin through the lug and arm holes and insert retaining pin into hitch pin.
6. Walk around to opposite side and repeat procedure for remaining lift arm and hitch pin.
7. Extend or retract 3-point top link to align its end hole with the holes of the mower's top link. Insert the top link hitch pin and insert retaining pin into hitch pin.
8. Adjust any lower link, check chains, guide blocks, or sway blocks to prevent the mower from swaying side to side and possible contact with tractor rear tires.



**IMPORTANT:** Scan this QR Code with your smart phone to link to the PAMI Safe Implement Hitching Manual for more information on correctly connecting agricultural tractors to implements. Or type in your internet browser the following web address: [www.algqr.com/hme](http://www.algqr.com/hme) Ops-0008-MISC



## 6. SETTING THE MOWER

Properly setting the cutting height is essential for efficient and safe operation. A properly set mower will make a more uniform cut, distribute clippings more evenly, require minimal tractor work, and follow the contour of uneven terrain. **NOTE:** Avoid very low cutting heights, striking the ground with the blades gives the most damaging shock loads and will cause damage to the mower and drive. Blades contacting the ground may cause objects to be thrown out from under the mower deck. Always avoid operating the mower at a height which causes the blades to contact the ground. OPS-U- 0010



Never work under the Implement, the framework, or any lifted component unless the Implement is securely supported or blocked up to prevent sudden or inadvertent falling which could cause serious injury or even death. (SG-14)

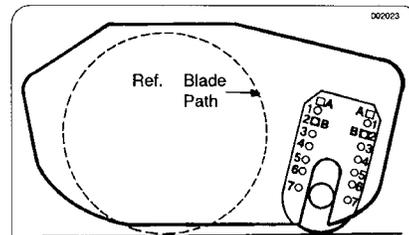
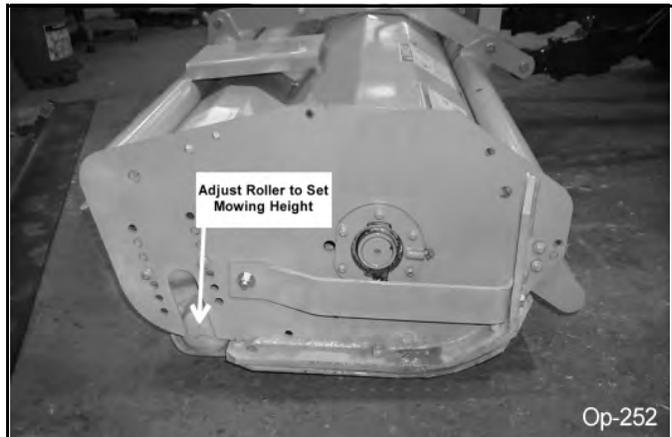


Roller Height Adjustment

# OPERATION

## OPERATION

1. The mower's cutting height is set by positioning the roller assembly for each mower section. Each section must be set at the same height to ensure an even cut across the entire width of the mower.
2. Place the tractor and mower on a level surface and completely lower the mower to the ground.
3. Shut down the tractor, place the transmission in park, and set the parking brake before dismounting.
4. One section at a time, place lifting device (scissors jack or hydraulic jack) under center of cutter housing.
5. Remove hex nuts, washers and carriage bolts from bracket at each end of roller. Make certain that roller bracket is free to move once the fasteners are removed. A stuck roller could drop unexpectedly and cause injury.
6. Use lifting device to reposition cutter housing to desired cutting height. Align bracket holes with cutter housing, then reinstall hardware.
7. Lower cutter housing to the ground and remove lifting device.
8. Set cutting height according to procedures above for remaining two cutter sections. Make sure that all three rollers are set at the same height to ensure a even cut across the entire width of the mower.



MOWER CUTTING HEIGHT ADJUSTMENT

DESIRED CUTTING HEIGHT (INCHES)	ADJUSTMENT BRACKET HOLE	MOWER END PLATE HOLE
1/2	B	2
1	A	1
1-1/2	B	3
2	A	2
2-1/2	B	4
3	A	3
3-1/2	B	5
4	A	4
4-1/2	B	6
5	A	5
5-1/2	B	7
6	A	6

Op- 253

### Hydraulic Cylinder Priming

Hydraulic Cylinders must be filled with hydraulic oil before releasing the wing transport locks to lower the mower. Hydraulic cylinders and lines are filled by holding the valve control levers in the raised position until the cylinders fully extend then place the control lever in the float position. Repeat the process several more times to ensure wings are entirely supported by the hydraulic cylinders before releasing the transport locks and lowering the mower.

# OPERATION

## 6.1 Leveling Deck

To Facilitate a safe and efficient mowing operation, the mower should be operated parallel to the ground at all times. Never operate if front or rear of mower is tilted upward. Objects may be discharged at high speeds causing possible injury or even death.

Adjust Top Link to level mower roller adjustment. Side Skid Shoes should always be parallel to ground throughout the full adjustment range. Adjust cutting height of machine by raising or lowering rear roller as specified in Operation Section.



### **WARNING**

Do not let the Blades turn when the Mower Deck is raised for any reason, including clearance or for turning. Raising the Mower deck exposes the Cutting Blades which creates a potentially serious hazard and could cause serious injury or even death from objects thrown from the Blades. (SRM-07)



## 7. DRIVELINE ATTACHMENT

The driveline yoke and tractor PTO shaft must be dirt free and greased for attachment.

Before attempting to connect PTO make sure tractor engine is shut off. The tractor PTO output shaft can turn 60 degrees left/right to aid in aligning the driveline to the tractor PTO output shaft. To connect the mower driveline to the tractor PTO output shaft, pull the driveline yoke collar back and align the grooves and splines of the yoke with those of the PTO shaft. Push the driveline yoke onto the PTO shaft, release the locking collar, and position the yoke until the locking collar balls are seated onto the PTO shaft. Push and pull the driveline back and forth several times to ensure a secure attachment.



After the driveline is securely attached, place the tractor PTO master shield back in the operating position.  
OPS-R-0003\_TK

# OPERATION

## 7.1 Driveline Length Check

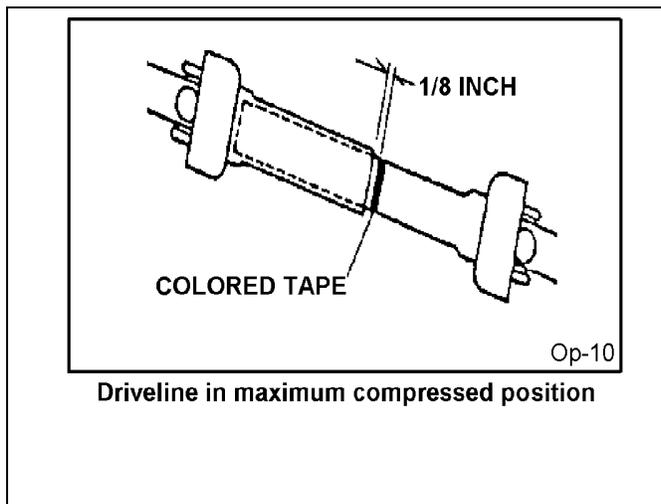
### **⚠ WARNING**

Before operating the Implement, check to make sure the Implement input driveline will not bottom out or become disengaged. Bottoming out occurs when the inner shaft penetrates the outer housing until the assembly becomes solid-it can shorten no more. Bottoming out can cause serious damage to the Tractor PTO by pushing the PTO into the Tractor and through the support bearings or downward onto the PTO shaft, breaking it off. A broken driveline can cause personal injury. (S3PT-18)

When fitting the mower to the tractor, the telescoping driveline must be inspected to ensure that at its most compressed position, the profiles do not “bottom out”, and when at its farthest extended position, there is sufficient engagement between the profiles to operate safely. At its shortest length, there must be at least a 1” clearance between each profile end and opposite profile universal joint. At its farthest operating extension, a minimum profile engagement of 12” must be maintained.

### “Bottoming Out” Check Procedure

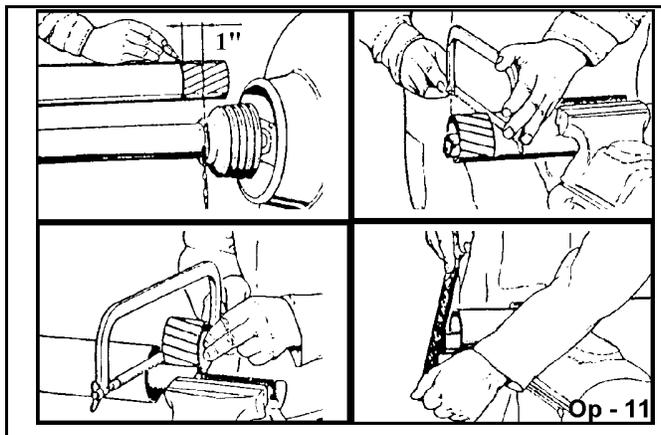
- Disconnect driveline from the tractor and slide the profiles together until fully compressed.
- Place a mark on the inner shield 1/8” from the end of the outer shield and reattach the driveline to the PTO Shaft.
- With the **PTO NOT TURNING**, slowly drive the tractor with mower attached through the sharpest turn possible and watch shaft movement. With the **PTO NOT TURNING**, slowly drive the tractor with the mower attached through the most severe terrain conditions expected and watch shaft movement.
- If the distance between the mark and the outer shield becomes less than 2” at any point there is a potential problem bottoming out the driveline and the driveline should be shortened.  
*OPS-F-0001*



# OPERATION

## **Shorten the driveline profiles as follows:**

- Remove the driveline from the tractor.
- Position the mower to the point with the shortest distance between the tractor PTO shaft and cutter gearbox. Shut down the tractor and securely block the mower in this position.
- Pull driveline apart and reattach yoke to PTO shaft.
- Hold driveline sections parallel to one another and measure back 1" from yoke of each shaft and place mark on opposite section. Cut this length off with a saw.
- Round off all sharp edges and debur.
- Thoroughly grease then reinstall the driveline.
- Recheck for proper operation.



## **Engagement Check Procedure**

- With the driveline attached, position the mower to the point where the telescoping driveline is at its maximum extension. Completely shut down the tractor and secure in position.
- Mark the inner driveline shield 1/8" from the end of the outer shield.
- Disconnect the driveline from the tractor and separate the two driveline halves.
- Measure the distance from the mark to the end of the inner profile. This length is the amount the driveline profiles were engaged.
- If the engaged length is less than 12" the shaft is considered too short and should be replaced with a longer shaft. Consult an authorized dealer to purchase the required driveline length.

**NOTE:** If the driveline cannot be shortened and still maintain the required profile engagement, the operator must be made aware of terrain conditions and avoid situations which pose a potential problem to avoid damaging the driveline. OPS-F-0002

IMPORTANT: Scan this QR Code with your smart phone to link to the ADMA Driveline Safety Manual for more information on the safe use of a driveline during normal operation and maintenance. Or type in your internet browser the following web address: [www.algqr.com/dme](http://www.algqr.com/dme) Ops-0009-MISC



## **8. PRE-OPERATION INSPECTION AND SERVICE**

Before each use, a pre-operation inspection and service of the implement and tractor must be performed. This includes routine maintenance and scheduled lubrication, inspecting that all safety devices are equipped and functional, and performing needed repairs. DO NOT operate the unit if the pre-operation inspection reveals any condition affecting safe operation. Perform repairs and replacement of damaged and missing parts as soon as noticed. By performing a thorough pre-operation inspection and service, valuable down time and repair cost can be avoided. OPS-U-0029

# OPERATION

**⚠ DANGER**

Always disconnect the main PTO Driveline from the Tractor before performing service on the Mower. Never work on the Mower with the tractor PTO driveline connected and running. Blades or Drivelines could turn without warning and cause immediate entanglement, injury or death. (SRM-3)

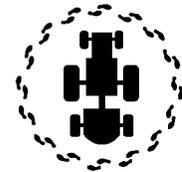
**⚠ DANGER**

**DO NOT** allow any person under a folded wing unless wing is securely locked up or supported. **DO NOT** approach the Implement unless the Tractor is turned off and all motion has ceased. Never work under the frame work, or any lifted component unless the implement is securely supported or blocked up. A sudden or inadvertent fall by any of these components could cause serious injury or even death. (STI-03)



**⚠ WARNING**

Periodically inspect all moving parts for wear and replace when necessary with authorized service parts. Look for loose fasteners, worn or broken parts, and leaky or loose fittings. Make sure all pins have cotter pins and washers. Serious injury may occur from not maintaining this machine in good working order. (SG-21)



# OPERATION

## 8.1 Tractor Pre-Operation Inspection/Service

Refer to the tractor operator's manual to ensure a complete pre-operation inspection and scheduled service is performed according to the manufacturers recommendations. The following are some of the items that require daily service and inspection:

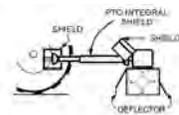
- Tire condition/air pressure
  - Front
    - Tire - Air Pressure 30 PSI
  - Rear
    - Tire - Air Pressure 24 PSI
- Wheel lug bolts, and rim to clamp hardware
- Steering linkage
- PTO shield
- SMV sign is clean and visible
- Tractor's lights are clean and functional
- Tractor Seat belt is in good condition
- Tractor ROPS or Cab is in good condition
- ROPS is in the raised position
- No tractor oil leaks
- Radiator free of debris
- Engine oil level and condition
- Engine coolant level and condition
- Power brake fluid level
- Power steering fluid level
- Fuel condition and level



## 8.2 Mower Pre-Operation Inspection/Service

Before each mower use, a complete inspection and service is required to ensure the mower is in a good and safe working condition. Damaged and/or broken parts should be repaired and/or replaced immediately. To ensure the mower is ready for operation, conduct the following. OPS-R-0007

**⚠ DANGER** All Safety Shields, Guards and Safety devices including (but not limited to) - the Deflectors, Steel Guards, Gearbox Shields, PTO integral shields, and Retractable Door Shields should be used and maintained in good working condition. All safety devices should be inspected carefully at least daily for missing or broken components. Missing, broken, or worn items must be replaced at once to reduce the possibility of injury or death from thrown objects, entanglement, or blade contact. (SFL-5)



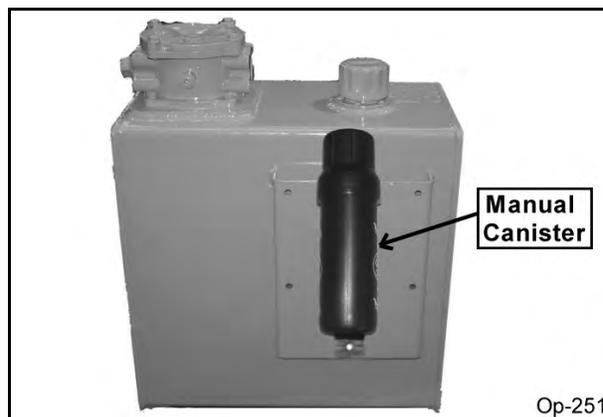
**⚠ DANGER** Replace bent or broken blades with new blades. NEVER ATTEMPT TO STRAIGHTEN, WELD, OR WELD HARDFACING ON BLADES SINCE THIS WILL LIKELY CRACK OR OTHERWISE DAMAGE THE BLADE WITH SUBSEQUENT FAILURE AND POSSIBLY CAUSE SERIOUS INJURY FROM THROWN BLADES. (SGM-10)

# OPERATION

## OPERATION

The operator's manual and safety signs affixed on the unit contain important instructions on the safe and proper use of the equipment. Maintain these important safety features on the implement in good condition to ensure the information is available to the operator at all times.

- Ensure the manual canister is secured to the equipment with the operator's manual inside.
- Ensure all safety signs are in place and legible. Replace missing, damaged, and illegible decals. *OPS-U- 0011*



- Check that the main driveline securely attached to the tractor and the locking collar is seated in the groove of the PTO Shaft.
- Ensure wing hydraulics are secure at both ends.
- Inspect that the 3-point hitch pins are the proper size, correctly installed and secured to the tractor lift arms with retaining pins inserted. *OPS-F- 0003\_TK*

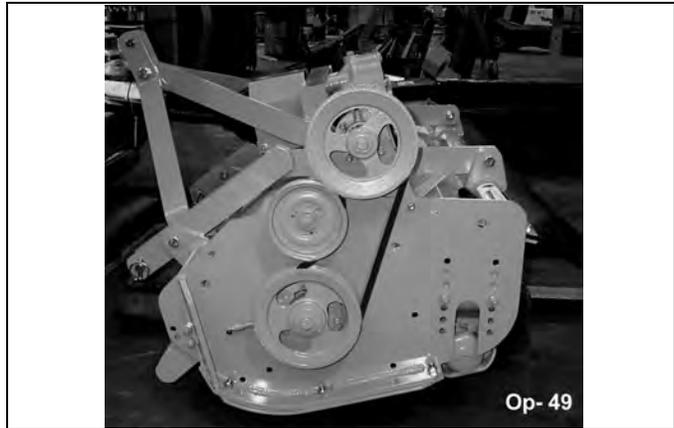


# OPERATION

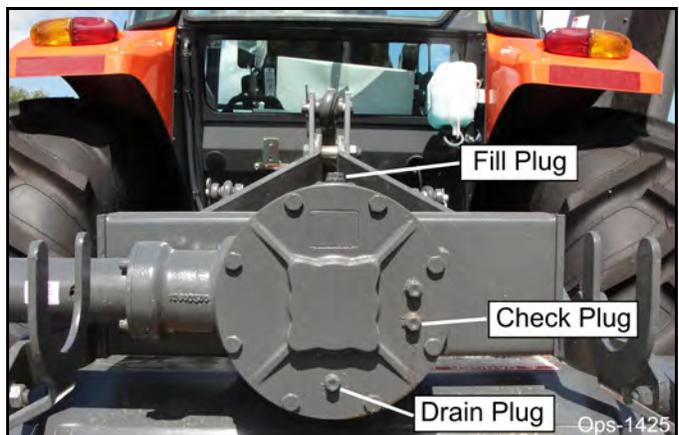
- Ensure rubber deflectors are in position and not damaged. Replace worn, broken, and missing sections immediately.
- Ensure the rollers are in good condition and rotate freely.
- Ensure the driveline integral shield is in good condition and rotate freely.
- Inspect that all bolts and screws are in position and are properly torqued. *OPS-F- 0004\_TK*



- Inspect the condition of the wings and rear section drive belts.
- Ensure the slip clutch (rear mower section only) is properly adjusted and the friction plates are not frozen together. Reference the Maintenance Section for proper slip clutch maintenance.
- Ensure the slip clutch shield and drive belts shields are in place and in good repair.
- Ensure the tractor PTO master shield is in place, lowered and in good condition. *OPS-F- 0005*



- Inspect oil level in gearbox and replenish if needed. A low oil level is a warning sign that the gearbox may be cracked or its seal is damaged and needs to be replaced.
- Check the oil level in tank and replenish if need. **NOTE:** Do not fill the tank with oil above the level of the sight gauge. Over filling the tank with oil after initial filling may result in oil being discharged through the air filter on the top of the hydraulic tank.
- Perform scheduled lubrication as specified in the maintenance section. *OPS-F- 0006\_TK*



# OPERATION

## OPERATION

- Inspect cutter knives and knife pins for looseness and excessive wear. Make sure the mower is securely blocked up before crawling beneath. Replace damaged, worn, and missing knives as complete sets to maintain cuttershaft balance.
- Remove any grass or other debris which may be wrapped around the cuttershafts.
- Inspect the condition of deck skid shoes and hardware. OPS-F- 0007\_TK



# OPERATION

## Flail Mower PRE-OPERATION Inspection



Mower ID# \_\_\_\_\_

Make: \_\_\_\_\_

Date: \_\_\_\_\_

Shift: \_\_\_\_\_

**IMPORTANT:**  
Scan this QR Code  
for an electronic copy  
of this inspection sheet.

Inspection Sheet



[www.algqr.com/fmi](http://www.algqr.com/fmi)



**Before conducting the inspection, make sure the tractor engine is off, all rotation has stopped and the tractor is in park with the parking brake engaged. Make sure the mower is resting on the ground or securely blocked up and all hydraulic pressure has been relieved.**

Item	Condition at Start of Shift	Specific Comments if not O.K.
<b>FLAIL MOWER</b>		
The Operator's Manual is in the canister on the mower		
All safety decals are in place and legible		
The hitch connection bolts & pins are tight		
There are no cracks in hitch		
Their mower deck is clear of cut grass and debris		
The thrown object guard/deflectors are in place		
Their guards/deflectors are in good condition		
The driveline/gearbox shields are in good condition		
The driveline clutch is in good condition, not frozen		
The driveline tubes & u-joints have been lubricated		
The driveline yoke is securely attached to the PTO		
The gearbox oil level is full		
Blades are not broken, chipped, cracked or bent		
Blade shackles are in good condition with no cracks		
The blade pins are properly retained		
The skid shoes are in good condition & tight		
The rear roller is in good condition and turns freely		

Operator's Signature: \_\_\_\_\_

**DO NOT OPERATE an UNSAFE TRACTOR or MOWER**

**OPERATION**

# OPERATION

## Tractor PRE-OPERATION Inspection



Mower ID# \_\_\_\_\_ Make \_\_\_\_\_

Date: \_\_\_\_\_ Shift \_\_\_\_\_



**Before conducting the inspection, make sure the tractor engine is off, all rotation has stopped and the tractor is in park with the parking brake engaged. Make sure the mower is resting on the ground or securely blocked up and all hydraulic pressure has been relieved.**

**OPERATION**

Item	Condition at Start of Shift	Specific Comments if not O.K.
The flashing lights function properly		
The SMV Sign is clean and visible		
The tires are in good condition with proper pressure		
The wheel lug bolts are tight & rim/clamp hardware is tight		
The tractor brakes are in good condition & parking brake		
The steering linkage is in good condition		
There are no visible oil leaks		
The hydraulic controls function properly		
The ROPS or ROPS Cab is in good condition		
The seatbelt is in place and in good condition		
The 3-point hitch is in good condition		
The drawbar pins are securely in place		
The PTO master shield is in place		
The engine oil level is full		
The brake fluid level is full		
The power steering fluid level is full		
The fuel level is adequate		
The engine coolant fluid level is full		
The radiator (Cab & A/C) & screens are free of debris		
The air filter is in good condition		
Kubota M6-101, M6-111 & M6S-111 Tire Pressure Ratings: Front: 30 PSI / Rear: 24 PSI		
Kubota M6-131 & M6-141 Tire Pressure Ratings: Front: 24PSI / Rear: 29 PSI		
Operation Switch installed and working		

Operator's Signature: \_\_\_\_\_

**DO NOT OPERATE an UNSAFE TRACTOR or MOWER**

This Inspection Form may be freely duplicated for extra copies.

# OPERATION

## 9. DRIVING THE TRACTOR AND IMPLEMENT

Safe tractor transport requires the operator possess a thorough knowledge of the model being operated and precautions to take while driving with an attached implement. Ensure the tractor has the capacity to handle the weight of the implement and the tractor operating controls are set for safe transport. To ensure safety while driving the tractor with an attached implement, review the following. *OPS-U- 0012*



This Implement may be wider than the Tractor. Be careful when operating or transporting this equipment to prevent the Implement from running into or striking sign posts, guard rails, concrete abutments or other solid objects. Such an impact could cause the Implement and Tractor to pivot violently resulting in loss of steering control, serious injury, or even death. Never allow the Implement to contact obstacles. (S3PT-12)



Transport only at speeds where you can maintain control of the equipment. Serious accidents and injuries can result from operating this equipment at high speeds. Understand the Tractor and Implement and how it handles before transporting on streets and highways. Make sure the Tractor steering and brakes are in good condition and operate properly.



Before transporting the Tractor and Implement, determine the proper transport speeds for you and the equipment. Make sure you abide by the following rules:

Test the tractor at a slow speed and increase the speed slowly. Apply the Brakes smoothly to determine the stopping characteristics of the Tractor and Implement. As you increase the speed of the Tractor the stopping distance increases. Determine the maximum transport speed not to exceed 20 mph (30 kph) for transporting this equipment.

Test the equipment at a slow speed in turns. Increase the speed through the turn only after you determine that the equipment can be operated at a higher speed. Use extreme care and reduce your speed when turning sharply to prevent the tractor and implement from turning over. Determine the maximum turning speed for you and this equipment before operating on roads or uneven ground.

Only transport the Tractor and Implement at the speeds which allow you to properly control the equipment.

Be aware of the operating conditions. Do not operate the Tractor with weak or faulty brakes or worn tires. When operating down a hill or on wet or rain slick roads, the braking distance increases: use extreme care and reduce your speed. When operating in traffic always use the Tractor's flashing warning lights and reduce your speed. Be aware of traffic around you and watch out for the other guy. (SG-19)



# OPERATION

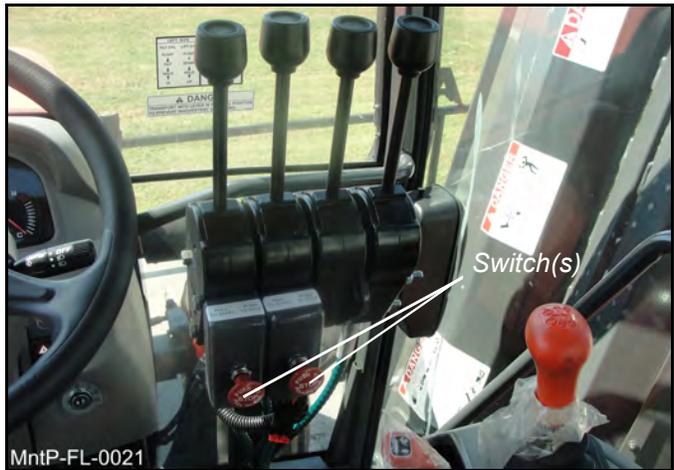
OPERATION

## 9.1 Starting the Tractor

The procedure to start the tractor is model specific. Refer to the tractor operator's manual for starting procedures for your particular tractor. Consult an authorized dealer if the starting procedure is unclear. Ensure the 3-point control lever is in the lowered position and the PTO is disengaged before starting the tractor. OPS-U-0033\_KB



**NOTE:** Tractor will not start unless the switch(s) on the control levers are pushed in the stop position.



Four Lever Controls



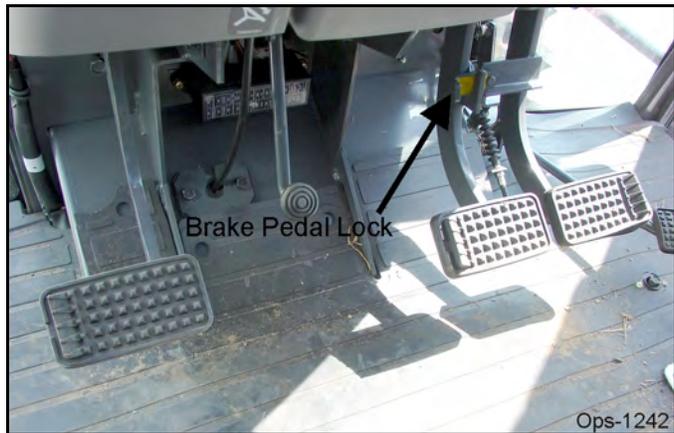
Two Lever Controls

# OPERATION

## 9.2 Brake

Make sure the tractor brakes are in good operating condition. Before operating the tractor on the road or before applying the parking brake, be sure to interlock the right and left pedals as illustrated on image.

Use individual brakes to assist in making sharp turns at slow speeds (Field Operation Only). Disengage the brake pedal lock and depress only one brake pedal. Be sure brake pedals have equal adjustment when using locked together. OPS-U- 0013\_TK



Be aware of the operating conditions. Do not operate the Tractor with weak or faulty brakes. When operating down a hill or on wet or rain slick roads, the braking distance increases; use extreme care and reduce your speed in these conditions. When operating in traffic, always use the Tractor's flashing warning lights and reduce your speed. Be aware of traffic around you and watch out for the other guy.

## 9.3 Differential Lock

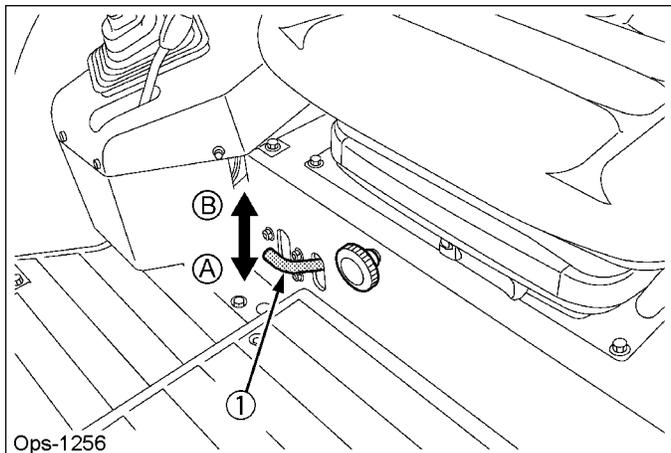
**2WD** - If one of the rear wheels should slip, step on the differential lock pedal. Both wheels will then turn together, reducing slippage.

Differential lock is maintained only while the pedal is depressed.

**IMPORTANT:** When using the differential lock, always slow the engine down.

To prevent damage to power train, do not engage differential lock when one wheel is spinning and the other is completely stopped.

If the differential lock cannot be released, step lightly on the brake pedals alternately.



(1) Differential lock pedal (Rear wheel)

(A) Press to "ENGAGE"

(B) Release to "DISENGAGE"



To avoid personal injury due to loss of steering control: Do not operate the tractor at high speed with any differential lock engaged. Do not attempt to turn with the rear wheel or 4-wheel differential lock engaged. Be sure to release the rear wheel or 4-wheel differential locks before making a turn in field conditions.

# OPERATION

## OPERATION

**4WD** - If the front and/or rear wheels should slip while driving straight in field conditions, step on the 4-wheel differential lock pedal. The four wheels will then turn together, reducing slippage.

If the front and/or rear wheels slip while in a turn in field conditions, step on the front wheel differential lock pedal only. The front wheels alone will rotate together for easy turning.

When using the differential lock, always slow the engine down.

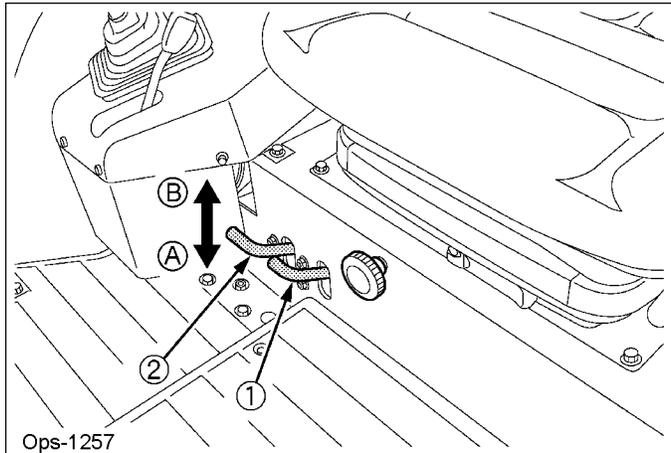
To prevent damage to power train, do not engage differential lock when one wheel is spinning and the other is completely stopped.

To prevent damage to power train, do not attempt to turn the tractor when 4-wheel differential lock pedal is pressed down.

If the differential lock cannot be released:

4-wheel differential lock pedal: --- Step lightly on the brake pedals alternately.

Front wheel differential lock pedal: --- Turn the steering wheel alternately.



(1) 4-wheel differential lock pedal (Rear and Front wheel)

(2) Front wheel differential lock pedal (Front wheel only)

(A) Press to "ENGAGE"

(B) Release to "DISENGAGE"

# OPERATION

## 10. Operating the Mower Wings

### Raising to Transport Position

1. With tractor engine running, place ON/OFF switch(s) in "OFF" position and wait for cuttershaft(s) to stop rotating.
2. Pull LIFT control lever rearward until lift frame is as high as it will go.
3. Pull TILT control lever rearward until bracket on unit is above support bar on lift cylinder support. If unit is in the detent "FLOAT", it will take some effort to pull TILT lever from "FLOAT" position.
4. Push LIFT control lever forward enough to lower unit slowly. Bar on cylinder support must pass through bracket on unit as shown in **Figure Ops-1431**.
5. Make certain that all control levers are in "HOLD" position when transporting unit.



LEFT SIDE		RIGHT SIDE	
TILT CYL	LIFT CYL	LIFT CYL	TILT CYL
FLOAT	FLOAT & DOWN	FLDAT	FLDAT
OUT		DOWN	OUT
▲	▲	▲	▲
HOLD	HOLD	HOLD	HOLD
▼	▼	▼	▼
IN	UP	UP	IN

**NOTE:** Lift and Tilt cylinder rods may be adjusted to provide proper transport bracket to support bar clearance.

Loosen rod end clamp.

Shorten stroke on LIFT cylinder to raise lift frame. Lengthen stroke on LIFT cylinder to lower lift frame.

and/or

Shorten stroke on TILT cylinder to move transport bracket closer to support bar. Lengthen stroke on TILT cylinder to move transport bracket away from support bar.

Once sufficient clearance is obtained, tighten rod end clamp.



# OPERATION



When the Wings are folded for transport, the center of gravity is raised and the possibility of overturn is increased. Drive slowly and use extreme caution when turning on hillsides. Overturning the Implement could cause the Implement to overturn the Tractor and vice versa resulting in serious injury or even death. Never fold wings on a hillside...the Implement or unit may overturn. (STI-02)

## Lowering into Operating Position

Ensure that ON/OFF switch(es) is (are) in "OFF" position. With tractor engine running, pull LIFT control lever rearward until bracket on cutter unit clears support bar on lift cylinder support. Push TILT control lever forward until cutter unit is level with ground. Push LIFT lever forward enough to slowly lower unit until it touches ground, then push both levers forward to "FLOAT" position.



Ops-1433



The mower head will start running when lowered if the mower ON/OFF switch is in the ON position. Make sure the SWITCH is in the OFF position before lowering mower wing(s). (SFL-10)

**NOTE:** For best mowing results and longer roller life, both LIFT and TILT levers should be in "FLOAT" position while mowing.

It takes some effort to pull TILT lever from "FLOAT" position because of detent spring.

The mower must be operated with the cutter sections fully lowered and the hydraulic control lever in the float detent to ensure the mower follows the contour of the ground and to prevent sections from creeping up. NEVER attempt to raise the mower while the mower is operating.



MntP-FL-0021

LEFT SIDE		RIGHT SIDE	
TILT CYL	LIFT CYL	LIFT CYL	TILT CYL
FLOAT	FLOAT	FLOAT	FLOAT
▲	▲	& DOWN	▲
OUT	DDWN		OUT
▲	▲	▲	▲
HOLD	HOLD	HOLD	HOLD
▼	▼	▼	▼
IN	UP	UP	IN

# OPERATION

## **10.1 Engaging and Disengaging the Power Take Off (PTO) and Wings**

Before engaging the PTO, make certain that the area is clear of bystanders and passersby. The implement must be lowered to the mowing position. NEVER engage the PTO with the implement in the raised position. Set the tractor engine speed at approximately 1,000 RPM before engaging the PTO. Shift the PTO control to the on position.

To start the wings, make sure they are in the lowered position (refer to Lowering Wings into Operating Position of the operation section) and PULL the start/stop button(s) to start the wing motor(s) and slowly increase the engine speed until the PTO is operating at the rated speed. If you hear unusual noises or see or feel abnormal vibrations, lower the engine RPM's, disengage the PTO and PUSH the wing start/stop button(s) to stop the wing motor(s). Inspect the implement to determine the cause of the noise or vibration and repair the abnormality.



Do not let the Blades turn when the Mower Deck is raised for any reason, including clearance or for turning. Raising the Mower deck exposes the Cutting Blades which creates a potentially serious hazard and could cause serious injury or even death from objects thrown from the Blades. (SRM-07)



Do not put hands or feet under mower decks. Blade Contact can result in serious injury or even death. Stay away until all motion has stopped and the decks are securely blocked up. (SGM-09)



# OPERATION

## 10.2 Driving the Tractor and Implements

Start off driving at a slow speed and gradually increase your speed while maintaining complete control of the tractor and units. The tractor should never be operated at speeds that cannot be safely handled or which will prevent the operator from stopping quickly during an emergency. If the power steering or engine ceases operating, stop the tractor immediately as the tractor will be difficult to control.



To avoid overturns, drive the tractor with care and at safe speeds, especially when operating over rough ground, crossing ditches or slopes, and turning corners. Tractor wheel tread spacing should be increased as wide as possible when working on inclines or rough ground to reduce the possibility of tipping.

Use extreme caution when operating on steep slopes. Keep the tractor in a low gear when going downhill. **DO NOT** coast or free-wheel downhill. OPS-F- 0009\_TK



# OPERATION

## 10.3 Crossing Ditches and Steep Inclines

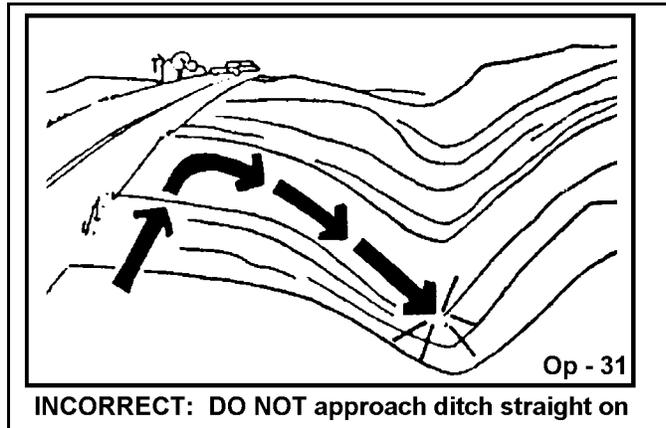
When crossing ditches with steep banks or going up sharp inclines, it is possible that the main driveline inner profile will penetrate into the outer housing to its maximum depth until the assembly becomes solid (driveline is at its extreme shortest length). This type of abusive operation can cause serious damage to the tractor and mower drive by pushing the PTO into the tractor and through the support bearings or downward onto the PTO shaft, breaking it off.



**WARNING** Damage resulting from over-collapse of the driveline's inner profile and its outer housing may allow the driveline to come loose from the Tractor which could cause bodily injury to the operator or bystanders and/or extensive damage to the Tractor or Implement.

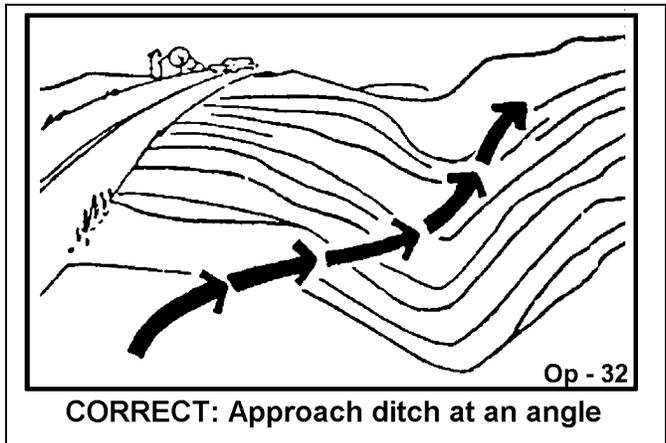
When confronted with an incline or ditch, do not approach from an angle which is perpendicular or straight on as damaged to over collapse of the driveline may occur.

When crossing such terrain, the implement should be fully lowered for a lower center of gravity and added stability. OPS-R-0021



Inclines and ditches should be approached along a line which is at an angle as shown. This type of path will reduce the possibility of over-collapse of the driveline and resulting damage. If the gradient is so steep that such an approach increases the possibility of a tractor roll-over, select an alternate crossing path.

When operating the tractor and mower across slopes and inclines, through ditches, and other uneven terrain conditions, it is important to maintain sufficient deck to ground clearance. Blade contact with the ground may cause soil, rocks and other debris to be thrown out from under the mower resulting in possible injury and/or property damage. Ground contact also produces a severe shock load on the mower drive and to the mower blades resulting in possible damage and premature wear. OPS-R-0022



# OPERATION

## 11. OPERATING THE TRACTOR AND IMPLEMENT

**THE OPERATOR MUST COMPLETELY UNDERSTAND HOW TO OPERATE THE TRACTOR AND IMPLEMENT AND ALL CONTROLS BEFORE ATTEMPTING TO OPERATE.** The operator must read and understand the Safety and Operation Sections of the implement and tractor operator's manuals. These manuals must be read and explained to any operator who cannot read. Never allow someone to operate the implement and tractor without complete operating instructions.

Before starting any operation, the operator must become familiar with the area to be worked in and any obstacles and hazards contained within to ensure safety to the operator, bystanders, and equipment. Special attention should be paid to foreign debris, rough terrain, steep slopes, and passersby and animals in the area.  
*OPS-U- 0015*



Extreme care should be taken when operating near loose objects such as gravel, rocks, wire, and other debris. Inspect the area before mowing. Foreign objects should be removed from the site to prevent machine damage and/or bodily injury or even death. Any objects that cannot be removed must be clearly marked and carefully avoided by the operator. Stop mowing immediately if blades strike a foreign object. Repair all damage and make certain rotor or blade carrier is balanced before resuming mowing. (SGM-05)



Many varied objects, such as wire, cable, rope, or chains, can become entangled in the operating parts of the mower head. These items could then swing outside the housing at greater velocities than the blades. Such a situation is extremely hazardous and could result in serious injury or even death. Inspect the cutting area for such objects before mowing. Remove any like object from the site. Never allow the cutting blades to contact such items.  
(SGM-06)

# OPERATION

## **11.1 Foreign Debris Hazards**

Before mowing, inspect the area to make sure there are no foreign objects that the mower blades could hit or become entangled with. Remove all foreign objects and debris. If objects are too big to remove, mark them clearly and be sure to prevent the mower blades from contacting them.

If you hit a solid object or foreign debris, stop the mower and tractor at once. Immediately idle the engine speed and disengage the PTO. Wait for all mower rotating motion to stop, then raise the mower and move the tractor and implement off the object. Inspect the area and remove, or mark the location of the debris. Inspect the condition of the mower and make any needed repairs immediately. Make sure the blades are not damaged and the carrier is balanced before resuming operation.

Always wear your seat belt securely fastened and only operate the tractor and mower with the ROPS in the raised position. If the tractor or mower hits a tree stump, rock, or bump, a sudden movement could throw you off of the seat and under the tractor and/or mower. The seat belt is your best protection from falling off the tractor and the ROPS provides protection from being crushed during a tractor roll-over. *OPS-F-0010\_TK*



Op - 33



Ops-1436

## **11.2 Bystanders/Passersby Precautions**

If a bystander comes within 300 feet of the tractor while the mower is being operated, stop the tractor at once, idle the engine and disengage the PTO. Do not engage the PTO again until all bystanders are well past the 300 foot distance. *OPS-R-0024*

# OPERATION



Flail Mowers are capable under adverse conditions of throwing objects for great distances (300 feet or more) and causing serious injury or death. Follow safety messages carefully.



STOP MOWING IF PASSERSBY ARE WITHIN 300 FEET UNLESS:

- Front and Rear Deflectors, Chain Guards, or Bands are installed and in good, workable condition;
- Mower sections or Wings are running close to and parallel to the ground without exposed Blades;
- All areas have been thoroughly inspected and all foreign material such as rocks, cans, glass, and general debris has been removed.

**NOTE:** *Where there are grass and weeds high enough to hide debris that could be struck by the blades, the area should be: inspected and large debris removed, mowed at an intermediate height, inspected closely with any remaining debris being removed, and mowed again at desired final height. (This will also reduce power required to mow, reduce wear and tear on the Mower drivetrain, spread cut material better, eliminate streaking, and make the final cut more uniform.)* (SFL-6)

## 11.3 PTO RPM and Ground Speed

Ground speed for mowing will depend upon the height, type, and density of vegetation to be cut. Recommended speed for efficient mower performance is between 2 and 5 mph(3-8 kph). Operate the mower at its full rated PTO speed to maintain blade speed for a clean cut. Refer to the tractor operator's manual or the tractor instrument panel for the engine speed and gear to provide the required PTO and desired ground speed. Make sure that the mower is operating at its full rated speed before entering the vegetation to be cut. If it becomes necessary to temporarily regulate engine speed, increase or decrease the throttle gradually.

Ground speed is achieved by transmission gear selection and not by the engine operating speed. The operator may be required to experiment with several gear range combinations to determine the best gear and range which provides the most ideal performance from the mower and most efficient tractor operation. As the severity of cutting conditions increase, the ground speed should be decreased by selecting a lower gear to maintain the proper operating PTO speed. OPS-R-0025



Do not exceed the rated PTO speed for the Implement. Excessive PTO speeds can cause Implement driveline or component failures resulting in serious injury or death. (SG-26)



Mow at the speed that you can safely operate and control the tractor and mower. The correct mowing speed depends on terrain condition and grass type, density, and height of cut. Normal ground speed range is from 2-5 mph (3-8 kph). Use slow mowing speeds when operating on or near steep slopes, ditches, drop-offs, overhead obstructions, power lines, or when debris and foreign objects are to be avoided. (SGM-07)

Operating the Mower

# OPERATION

Only operate the mower from the tractor operator's seat with the seat belt securely fastened. The tractor must be equipped with a ROPS in the raised position or a ROPS or ROPS factory cab.

The mower is designed to cut vegetation up to 1" in diameter. Sharp blades will produce a cleaner cut and require less power. Travel at a speed that allows the mower sufficient time to cut through the vegetation and maintain the PTO operating speed to prevent overloading the mower and tractor. Choose a driving pattern that provides the maximum pass length and minimizes turning.

Under certain conditions, tractor tires may roll some grasses down preventing them from being cut at the same height as the surrounding area. When this occurs, reduce the tractor ground speed while maintaining the operating speed of the mower. A slower ground speed will permit grasses to at least partially rebound and be cut. Taking a partial cut and/or reversing the direction of travel may also help produce a cleaner cut.

Avoid mowing in the reverse direction when possible. In situations where the mower must be backed to access areas to be cut, make sure there are no persons or other foreign debris behind the mower before maneuvering in reverse.



Do not mow with two machines in the same area except with Cab tractors with the windows closed. (SGM-11)



Mow only in conditions where you have clear visibility in daylight or with adequate artificial lighting. Never mow in darkness or foggy conditions where you cannot clearly see at least 300 feet (90 m) in front and to the sides of the tractor and mower. Make sure that you can clearly see and identify passersby, steep slopes, ditches, drop-offs, overhead obstructions, power lines, debris and foreign objects. If you are unable to clearly see these type of items discontinue mowing. (SGM-1)



Avoid mowing in reverse direction when possible. Check to make sure there are no persons behind the mower and use extreme care when maneuvering in reverse. Mow only at a slow ground speed where you can safely operate and control the tractor and mower. Never mow an area that you have not inspected and removed debris or foreign material. (SGM-08)



Follow these guidelines to reduce the risk of equipment and grass fires while operating, servicing, and repairing the Mower and Tractor:



- Equip the Tractor with a fire extinguisher in an accesible location.
- Do Not operate the Mower on a Tractor with an underframe exhaust.
- Do Not smoke or have an open flame near the Mower and Tractor.
- Do Not drive into burning debris or freshly burnt areas.
- Ensure slip clutches are properly adjusted to prevent excessive slippage and plate heating.
- Never allow clippings or debris to collect near drivelines, slip clutches, and gearboxes. Periodically shut down the Tractor and Mower and clean clippings and collected debris from the mower deck. (SGM-12)

# OPERATION

OPERATION

## **11.4 Shutting Down the Implement**

To shut down the implement, first bring the tractor to a complete stop. Then slow down the implement by reducing the engine speed before disengaging the PTO. Push the stop button to disengage the wings and wait for all motion to stop before proceeding to drive or shut down the tractor.



Park the tractor on a level surface, place the transmission in park or neutral and apply the parking brake, lower the attached implement to the ground, shut down the engine, remove the key, and wait for all motion to come to a complete stop before exiting the tractor. OPS-F- 0011\_TK



## **12. DISCONNECTING THE MOWER FROM THE TRACTOR**

Before disconnecting the mower, the PTO must be disengaged and all motion at a complete stop. Move the mower to a level storage location and lower both wings to the ground. If the mower will be stored with the sections in the raised position, be sure that the locks are engaged. If the mower is not resting securely on the ground, block the mower up securely before attempting to disconnect it from the tractor. Use extreme care to keep feet and hands from under the mower and clear of any pinch points. OPS-F-0012\_TK



# OPERATION

After disconnecting the 3 lift points, remove the mower driveline from the tractor PTO shaft. Lay the driveline down carefully to avoid damaging the driveline or its shield. Do not let the driveline fall into mud or dirt, which can contaminate the bearing and shorten the life of the driveline.  
*OPS-F-0013*



**⚠ DANGER**

Never work under the Implement, the framework, or any lifted component unless the Implement is securely supported or blocked up to prevent sudden or inadvertent falling which could cause serious injury or even death. (SG-14)



OPERATION

# OPERATION

## 13. MOWER STORAGE

It is recommended that the mower be stored with the center section and both wings fully lowered to ground level. If the mower is stored with the wings in the raised position, select a level area and make sure the wing transport locks are in place to prevent the wings from falling BEFORE completely shutting down the tractor.

Properly preparing and storing the mower at the end of the season is critical to maintaining its appearance and to help ensure years of dependable service. The following are suggested storage procedures:

- Thoroughly clean all debris off the mower to prevent damage from rotting grass and standing water.
- Lubricate all mower grease points and fill gearbox oil levels as detailed in the maintenance section.
- Tighten all bolts and pins to the recommended torque.
- Check the mower for worn and damaged parts. Perform repairs and make replacements immediately so that the mower will be ready for use at the start of the next season.
- Store the mower in a clean, dry place with the mower housing resting securely on blocks or at ground level.
- Keep the driveline yoke from sitting in water, dirt and other contaminants.
- Use spray touch-up enamel where necessary to prevent rust and maintain the appearance of the mower.



It is critical that driveline clutches slip when an obstacle or heavy load is encountered to avoid mower and/or tractor damage. If the mower sits outside for an extended period of time or is exposed to rain and/or humid air, the clutch lining plates must be inspected to ensure they are not frozen together from rust or corrosion. If the mower has been exposed to such conditions, at the start of each mowing season, and any time it is suspected that the slip clutch plates may be frozen together, readjust the slip clutch as detailed in Seasonal Clutch Maintenance of the maintenance section in this manual. *OPS-F-0014\_TK*



Never allow children to play on or around Tractor or Implement. Children can slip or fall off the Equipment and be injured or killed. Inadvertent contact with controls can cause the Implement to shift or fall crushing themselves or others. (SG-25)

# OPERATION

## 14. TRANSPORTING THE TRACTOR AND IMPLEMENT

Inherent hazards of operating the tractor and implement and the possibility of accidents are not left behind when you finish working in an area. Therefore, the operator must employ good judgement and safe operation practices when transporting the tractor and implement between locations. By using good judgement and following safe transport procedures, the possibility of accidents while moving between locations can be substantially minimized. *OPS-U- 0017*



Never allow children or other persons to ride on the Tractor or Implement. Falling off can result in serious injury or death. (SG-10)



Before transporting the tractor and mower, idle the tractor engine, disengage the PTO, push the stop button to disengage the wings and wait for all mower moving parts to come to a complete stop. Raise the mower sections and ensure transport locks are engaged.



# OPERATION

Before transporting the tractor on a public roadway or boarding a trailer for transport, the tractor brake pedals should be locked together. Locking the pedals ensures that both wheels brake simultaneously while stopping, especially when making an emergency stop. OPS-U- 0018\_TK



## 15. Transporting on Public Roadways

Extreme caution should be used when transporting the tractor and implement on public roadways. The tractor must be equipped with all required safety warning features including a SMV emblem and flashing warning lights to alert drivers of the tractor's presence. Remember that roadways are primarily designed for automotive drivers and most drivers will not be looking out for you, therefore, you must look out for them. Check your side view mirrors frequently and remember that vehicles will approach quickly because of the tractor's slower speed. Be extremely cautious when the equipment that you are transporting is wider than the tractor tire width and/or extends beyond your lane of the road.

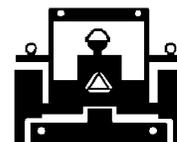
**NOTE:** Ensure that the mower sections are fully raised and that the transport locks are engaged for each section.



Never allow children or other persons to ride on the Tractor or Implement. Falling off can result in serious injury or death. (SG-10)



Make certain that the "Slow Moving Vehicle" (SMV) sign is installed in such a way as to be clearly visible and legible. When transporting the Equipment use the Tractor flashing warning lights and follow all local traffic regulations. (SG-6)



# OPERATION

The SMV (Slow-Moving Vehicle) emblem is universal symbol used to alert drivers of the presence of equipment traveling on roadways at a slow speed. SMV signs are a triangular bright orange with reflective red trim for both easy day and night visibility. Make sure the SMV sign is clean and visible from the rear of the unit before transporting the tractor and implement on a public roadway. Replace the SMV emblem if faded, damaged, or no longer reflective. *OPS-U- 0020*



Make sure that all tractor flashing warning lights, headlights, and brake/tail lights are functioning properly before proceeding onto public roads. While newer model tractors have plenty of lighting to provide warning signals and operating lighting, most older models are only equipped with operating lights. Consult an authorized tractor dealer for lighting kits and modifications available to upgrade the lighting on older tractor models. *OPS-U- 0021\_TK*



When operating on public roads, have consideration for other road users. Pull to the side of the road occasionally to allow all following traffic to pass. Do not exceed the legal speed limit set in your country for agricultural tractors. Always stay alert when transporting the tractor and implement on public roads. Use caution and reduce speed if other vehicles or pedestrians are in the area. *OPS-U- 0022\_TK*



# OPERATION

Reduce speed before turning or applying the brakes. Ensure that both brake pedals are locked together when operating on public roads. OPS-U-0023\_TK



## Hauling the Tractor and Implement

Before transporting a loaded tractor and implement, measure the height and width dimensions and gross weight of the complete loaded unit. Ensure that the load will be in compliance with the legal limits set for the areas that will be traveled through.



. Use adequately sized and rated trailers and equipment to transport the tractor and implement. Consult an authorized tractor dealer to determine the proper equipment required. Using adequately sized chains, heavy duty straps, cables and/or binders, securely tie down both the front (around frame and/or axle locations) and the rear of the tractor (around the drawbar frame location) utilizing proper tie down techniques and in accordance with local laws for areas which will be traveled through. Be sure the chains are not interfering with vulnerable parts like tie rod ends, power steering lines or tires, etc. Ensure proper tension to the chains to restrict movement of the tractor/mower combination while transporting.



# OPERATION

Once the tractor has been loaded onto an adequate rated trailer, raise the side flail/flails into transport position and make sure the control levers are in the center lock position. Ensure the wing start/stop buttons are pushed in the stop position and shut down tractor. Remove key and exit the tractor.

## Dual Wing

To exit and enter the tractor with a dual wing Terrain Master you will need to utilize the rear window. Unlatch the window and proceed to exit always using three point contact as shown on **Figure Ops-1463**.

When completely out of the tractor close window and strap window closed as shown in **Figure Ops-1464**.



OPERATION



**WARNING** Use both hands for support when getting on and off the Tractor. Always use three point contact when exiting or boarding Tractor.

## Dual Wing w/Remote Valve Option

With units that have a Remote Valve, raise the right hand wing into transport position from the tractor seat. Once the right wing is in transport position, make sure control levers are in the center lock position and wing start/stop buttons are pushed in the stop position. Shut down tractor, remove key and exit the tractor. To raise the left hand wing into transport position you will need to use the Remote Valve installed in front of your tractor. Once left hand wing has been raised and locked into transport position, proceed to strapping the wings together.

# OPERATION

Before tying down tractor with chains secure the flail wings together with a shipping strap. Refer to **Figure Ops-1465**



Arrange the chains so that when tightened the chains are pulling downward and against themselves. Carefully tighten the securing chains or other fasteners using boomers or binders to apply maximum tension. Use extreme care when attaching and removing the securing devices as the extreme tension involved when released has the potential to inflict serious injury.

While hauling the tractor and implement make occasional stops to check that the tractor and implement have not moved or shifted and that the securing chains have maintained tension. If during transport a hard braking, sharp turning, or swerving action was performed, stop at the next safe location to inspect the security of the load.



# OPERATION

## **16. TROUBLE SHOOTING GUIDE**

<b>Problem</b>	<b>Possible Cause</b>	<b>Remedy</b>
Excessive Vibrations	Check gearbox bolts. Check for missing knives on cutter shaft. Check to see if knives are free swinging. Blade broken or bent. Cuttershaft bent. Drivelines not phased correctly. Implement & Tractor yokes must be in line.	Tighten if loose Replace missing knives  Free knives so they swing.  Replace blades. Replace cuttershaft. Replace driveline.
Gearbox Overheating	Low on lubricant. Improper type lubricant. Excessive trash build-up around gearbox. Bearing or gears set up improperly.	Fill to level plug. Replace with proper lubricant. Remove trash.  Consult your Dealer.
Gearbox Noisy	Rough Gears. Worn Bearing.	Run in or change gears. Replace bearing.
Noise	Damaged Belt Shield (Rubbing on pulleys or belt). Worn Bearing or Gear.	Straighten or replace Shields.  Replace Bearing or Gear.
Gearbox Leaking	Damaged oil seal Bent shaft. Shaft rough in oil seal area. Oil seal installed wrong. Oil seal not sealing in the housing.  Oil level too high. Sand hole in casting. Gasket damaged. Bolts loose.	Replace seal. Replace oil seal and shaft. Replace or repair shaft. Replace seal. Replace seal or use a sealant on OD of Seal. Drain oil to proper level. Replace castings or gearbox. Replace gasket. Tighten bolts.
Clutch Slips Excessively	Clutch linings badly worn or plates warped. Too much power for clutch.  Oil on facings. Friction facings glazed.	Repair clutch per maintenance section of manuals. Reduce ground speed and material intake.  Replace facings. Clean with emery cloth.

# OPERATION

## OPERATION

Knives Wear Too Fast	Cutting in sandy conditions. Cutting in rocky conditions. Soft "will fit" knives.	Increase cutting height. Increase cutting height. Use genuine Terrain King knives.
Hydraulic Cylinder Will Not Operate	Not enough pressure. Valve not connected properly Quick coupler not completely connected.	Check Pressure Re-plumb valve. Complete connection.
Oil Squirting from Breather Vent Hole	Oil leaking by piston ring. Small leakage amount is normal. Piston "O" Ring worn. Cylinder wall scored or pitted. Wrong piston ring on piston.	Do not carry cutter on cylinder.  Replace piston "O" Ring. Replace cylinder. Use correct piston ring.
Discharging Bunches or Clogging	Belt installed improperly. Blades dull. Grass too wet. Grass too long. Travel speed too fast. PTO RPM too low.	Check belt for correct set-up. Check blades for sharpness. Wait for grass to dry. Mow at 3-1/2" and recut lower. Use a lower tractor gear. Mow at engine RPM to match 540 PTO RPM.
Blades Scalping High Places	Mowing too low. Rough, uneven ground.  Turning Tractor too fast.	Raise height of cut. Use a slower speed. Lower rollers. Slow down when turning.
Uneven Cut	Travel speed too fast. Mower deck not level. Blades dull or unbalanced. Deck underside plugged. Grass too high.	Use a slower speed. Level the mowing deck. Sharpen or balance blades. Clean underside of deck. Mow at 3-1/2" and recut lower.
Grass Clippings Windrow or clump	Grass too wet. Grass too high. Housing plugged.	Wait for grass to dry. Mow at 3-1/2" and recut lower. Clean underside of deck.
Grass Not being Cut Evenly	Belt worn or slipping. Spring broke & belt off idler. Housing plugged. Debris around pulleys.  Grass too high.	Replace or adjust belt. Replace spring or adjust belt. Clean underside of housing. Remove deck belt shield and clean out debris. Mow at 3-1/2" and recut lower.

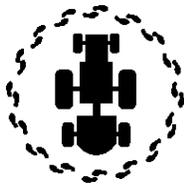
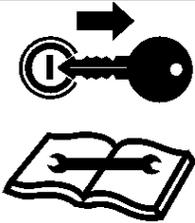
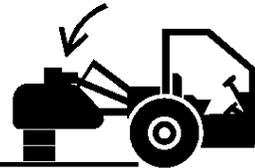
# **MAINTENANCE SECTION**

Maintenance Section 4-1

# MAINTENANCE

MAINTENANCE

## HAZARDS WITH MAINTENANCE OF IMPLEMENT

				
Periodically inspect all moving parts, lubricate drivelines, and tighten all fasteners	Stop engine remove key before conducting maintenance	Block up implement before servicing Use large blocks on soft or wet soil	Engage cylinder transport locks	Inspect Blades for damage or cracks

**⚠ WARNING** AVOID DEATH OR SERIOUS INJURY FROM COMPONENT FAILURE BY KEEPING IMPLEMENT IN GOOD OPERATING CONDITION IN PERFORMING PROPER SERVICE, REPAIRS AND MAINTENANCE.

### BEFORE PERFORMING SERVICE, REPAIRS AND MAINTENANCE ON THE IMPLEMENT:

- **STOP ENGINE AND PTO**, engage parking brake, lower implement, allow all moving parts to stop and remove key before dismounting from tractor.
- **PLACE** implement on ground or securely block up raised equipment. Use large blocks on soft or wet soil.
- **PUSH** and **PULL** Remote Hydraulic Cylinder lever to relieve hydraulic pressure.
- **DISCONNECT IMPLEMENT** driveline from tractor **PTO SHAFT**.

### WEAR SAFETY GLASSES, PROTECTIVE GLOVES and follow SAFETY PROCEDURES when performing service, repairs and maintenance on the implement:

- Always **WEAR** protective **GLOVES** when handling blades, knives, cutting edges or worn component with sharp edges.
- Always **WEAR GLOVES** and **SAFETY GLASSES** with side shields (marked with ANSI Z87) when servicing hot components
- **AVOID CONTACT** with hot hydraulic oil tanks, pumps, motors, valves and hose connection surfaces.
- **SECURELY** support or **BLOCK UP** raised implement, framework and lifted components before working underneath equipment.
- **STOP** any implement movements and **SHUT-OFF TRACTOR** engine before doing any work procedures.
- **USE** ladder or raised stands to reach high equipment areas inaccessible from ground.
- **ENSURE** good footing by standing on solid flat surfaces when getting on implement to perform work.
- **FOLLOW** manufacturer's instructions in handling oils, solvents, cleansers, and other chemical agents.
- **DO NOT** change any factory-set hydraulic calibrations to avoid component or equipment failures.
- **DO NOT** modify or alter implement, functions or components.
- **DO NOT WELD** or repair rotating mower components. These may cause vibrations and component failures being thrown from mower.

### PERFORM SERVICE, REPAIRS, LUBRICATION AND MAINTENANCE OUTLINED IN IMPLEMENT MAINTENANCE SECTION:

- **INSPECT** for loose fasteners, worn or broken parts, leaky or loose fittings, missing or broken cotter keys and washers on pins, and all moving parts for wear.
- **REPLACE** any worn or broken parts with authorized service parts.
- **LUBRICATE** unit as specified by lubrication schedule
- **NEVER** lubricate, adjust or remove material while it is running or in motion.
- **TORQUE** all bolts and nuts as specified.

### BLADE INSPECTION:

- **REPLACE** bent, damage, cracked or broken blades immediately with new blades.
- **AVOID** blade failures and thrown broken blades. **DO NOT** straighten, weld, or weld hard-facing blades.

### SAFETY SHIELDS, GUARDS AND SAFETY DEVICES INSPECTION:

- **KEEP** all Deflectors, Steel Guards, Gearbox Shields, and PTO integral shields, Bands, Side Skirts and Skid Shoes in place and in good condition.
- **REPLACE** any missing, broken or worn safety shields, guards and safety devices.
- **DISCONNECT** Pump solenoid valve or PTO driveline connection before servicing mower head.
- **FOLLOW INSTRUCTIONS** in maintenance section when replacing hydraulic cylinders to prevent component falling.



**WARNING**

Cancer and Reproductive Harm [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

PN HMFM-02

# MAINTENANCE

## PARTS INFORMATION

### PARTS INFORMATION

Terrain King mowers use balanced and matched system components for blade carriers, blades, cuttershafts, knives, knife hangers, rollers, drivetrain components, and bearings. These parts are made and tested to Terrain King specifications. Non-genuine "will fit" parts do not consistently meet these specifications. The use of "will fit" parts may reduce mower performance, void mower warranties, and present a safety hazard. Use genuine Terrain King mower parts for economy and safety. (SPTK-1)

**SEE YOUR TERRAIN KING DEALER**

## DAILY CHECKS

Before operating your Terrain Master, take the time to inspect and repair any damage to the machine or tractor. Only a minimum of time and effort is required to regularly maintain this machine to provide long life and trouble free operation.

1. Lubricate the Terrain Master at the specified intervals as outlined in the lubrication diagram. Figure Mnt-FL-0001. Wipe the fitting before greasing. Wipe the outlet of the grease gun then grease the bearing. When finished wipe any excess grease from around the fitting. In extremely dusty conditions, it is desirable to lubricate more often than every 8 hours. Grease PTO shaft as outlined on the diagram located on PTO shaft shield. The idler pulleys are equipped with a sealed ball bearing and require no further lubrication. Caster wheel bearings should be repacked at the end of each mowing season and checked before the start of the next season. The gearbox is shipped with the proper amount of SAE No. 90 extreme pressure lubricant. Maintain the level of this oil at the lower 1/8" pipe plug on the gearbox cover. LUBRICATE MOWER BEFORE INITIAL USE.

**NOTE:** Lubricate flail roller bearing until lubricant can be seen coming out between roller and bearing housing.

2. Before each day's use, follow this procedure:

- a. Visually check the unit, and make certain all items are properly tightened.
- b. Check the pump drive belt tension. If necessary, tighten the belt as instructed in this section.

**NOTE:** Cutter unit belt tension is maintained by a spring-loaded idler pulley.

c. Check the reservoir fluid level with the cutter units in the transport position. The oil level should be even with the sight glass located on the reservoir. Before removing filler cap, wipe the top of the reservoir to prevent dirt from entering the tank. Use Chevron 1000 THF or an equivalent.

**NOTE:** Your ambient temperature and operating conditions may require a different viscosity oil. Please consult the oil manufacturer for proper specifications.

**NOTE:** If the reservoir needs oil, a leak exists somewhere in the system. Repair the leak before using the unit.

d. Check the cuttershaft to make certain it is fully knifed. Replace any missing knives or cotter pins, then run the unit at full speed to check for vibrations. Do not operate the unit in an out-of-balance condition.

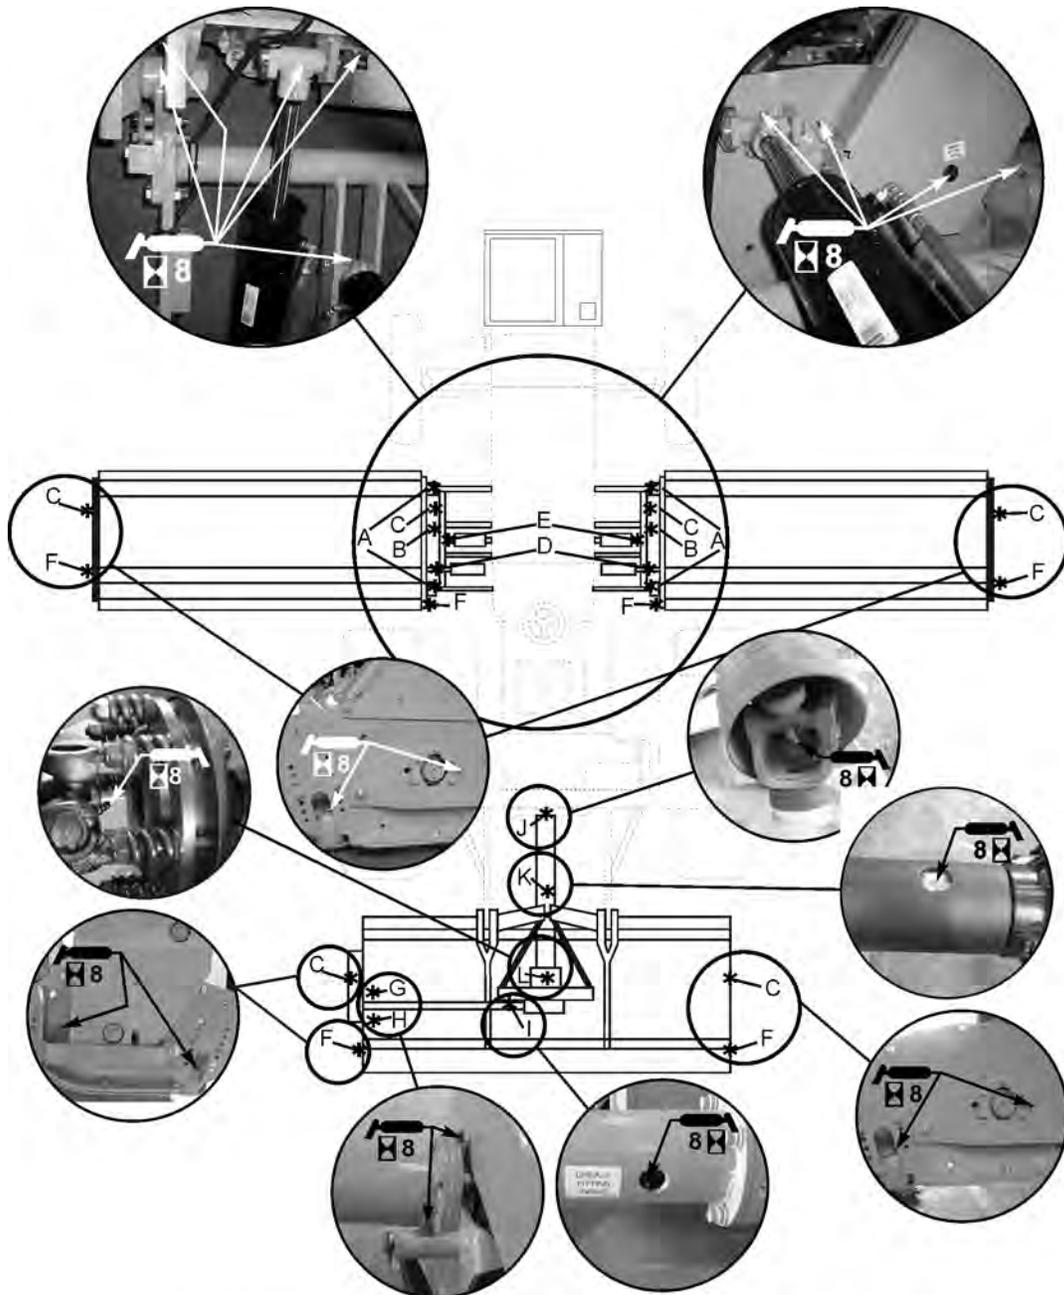


Never work under the Implement, the framework, or any lifted component unless the Implement is securely supported or blocked up to prevent sudden or inadvertent falling which could cause serious injury or even death. (SG-14)

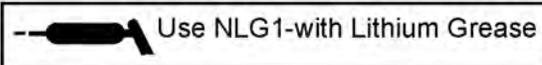


# MAINTENANCE

## MAINTENANCE



LUBRICATE ALL POINTS EVERY 8 HOURS OF OPERATION



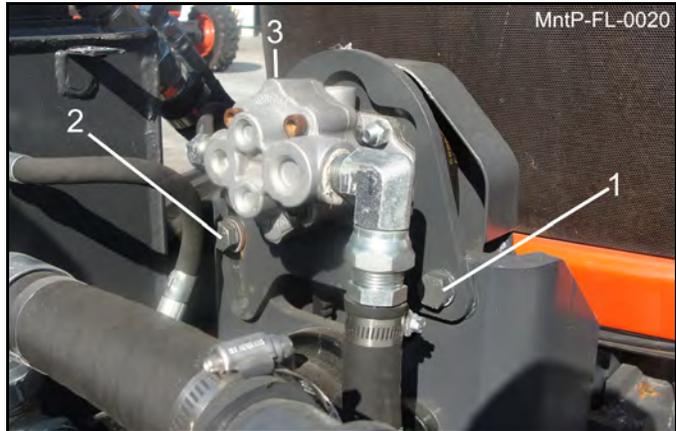
- |   |                          |   |                     |
|---|--------------------------|---|---------------------|
| A | LIFT FRAME POVOT PIN     | G | REAR MOWER IDLERARM |
| B | WING MOWER BELT IDLERARM | H | BANJO BEARING       |
| C | CUTTERSHAFT BEARINGS     | I | BANJO COUPLING      |
| D | TILT CYLINDER ROD END    | J | DRIVELINE YOKE      |
| E | LIFT CYLINDER ROD END    | K | DRIVELINE SHAFT     |
| F | ROLLER BEARING           | L | SLIP CLUTCH         |

Mnt-FL-0001

# MAINTENANCE

## ADJUSTING TENSION OF DRIVEBELTS

1. Remove Pump Cover.
2. Loosen Pump Mount Plate bolt item 1 and 2.  
**Mnt-FL-0010**
3. Loosen Belt Tension Bracket bolt item 3. Mnt-FL-0010
4. Move pump unit outwards to increase tension on the belt. Belts should have no more than 1/4 inch play at midpoint between drive pulley and pump pulley. Tighten mounting bolts.
5. Replace Pump Cover.



## Hydraulic Fluid

Maintaining the proper hydraulic oil level and oil cleanliness is very important for continued trouble-free operation of the mower. The fluid level should be checked daily before the mower is put into service. A visual inspection of the hydraulic connections, hose guards and shielding should occur daily as well. The hydraulic fluid can lose its ability to lubricate in a number of different ways, most commonly contamination and overheating. Both scenarios can lead to catastrophic failure of the hydraulic components and costly repairs. Terrain King offers fluids, filters, and oil analysis capabilities to help you maintain your hydraulic powered machine. Please be sure to follow the oil & filter change procedure that is outlined for your mower.

There are two types of hydraulic oil used by the factory, reference the chart below, Mobil DTE 16m and Chevron 1000 THF. Also, note the ISO cleanliness requirement for your mower.

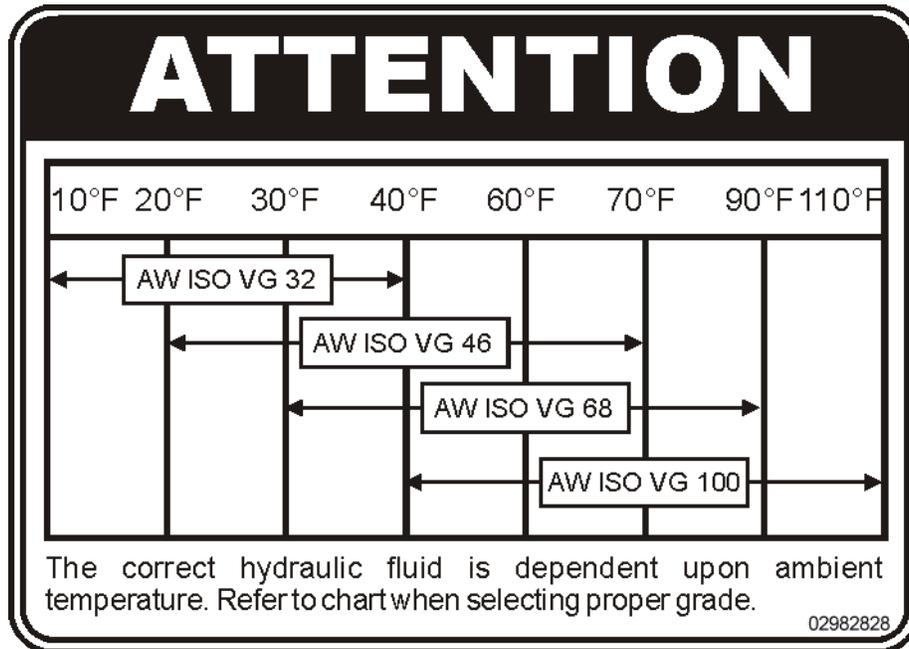
Product	Oil Type	Oil Specification	ISO Cleanliness	Filter Change Recommendation	Oil Change Recommendation
Terrain Master	UTF	Chevron 1000 THF	18/16/14	First 100/every 500 or 12 months	First 500/every 1000 or 12 months

The above are prescribed intervals, but frequency may change based on use. It is important to monitor the filter clogging indicator.

There are many comparable oils that are equivalent to what is used by the factory. An ISO class oil with a viscosity that matches your operating conditions is recommended. For further information please consult the oil manufacturer for proper specifications.

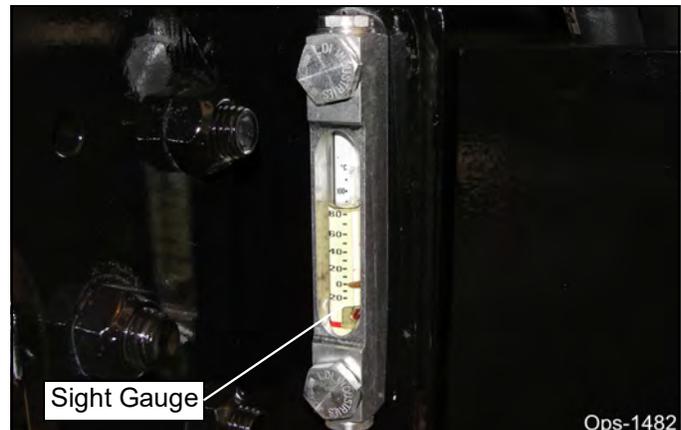
# MAINTENANCE

MAINTENANCE



## Proper Oil Level

Maintain the oil level within the sight gauge located on the reservoir. When oil is cold, the level should be three-quarters up the sight gauge. Never fill the tank above that sight gauge level. A space is maintained above the sight gauge to allow for the expansion of the oil. Oil is added through the filler tube, if your tank does not have a filler tube then fill through the return filter located on the tank. Thoroughly clean the cap area around the filter to prevent oil from contamination. Remove the cap and add the proper viscosity grade of FILTERED oil to achieve the proper level. Never assume any oil is clean, including new.



### Oil Level Low

Low oil level in the reservoir is caused by leakage or improper filling. If leaking, locate the area of the leak and repair the leak at once. Loss of fluid can cause severe & catastrophic damage to the hydraulic components.

**NOTE:** After initial start up, the mower may require more oil to bring the oil level back to the proper level. This is normal. Air trapped in the hydraulic components was displaced by the oil, causing the oil level to go down in the tank. Oil must be added to reach the proper level or cavitation could result.

# MAINTENANCE

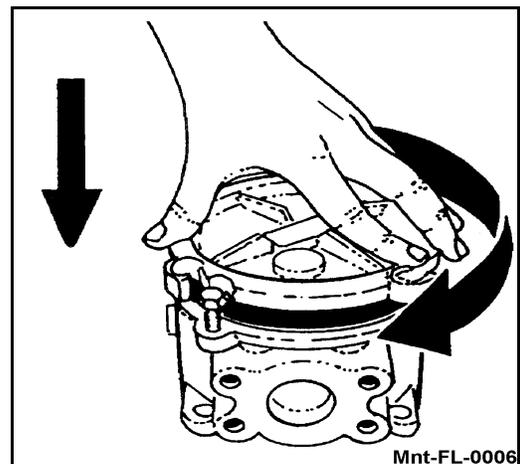
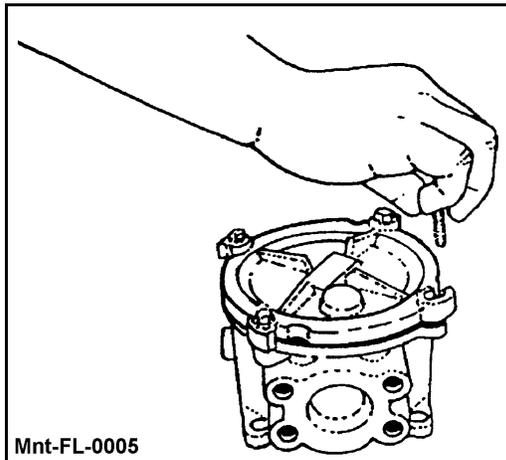
## CHANGING HYDRAULIC SYSTEM FILTER

A large capacity filter is located on top of the hydraulic oil reservoir. **MntP-FL-0017** The filter will trap particles which are .001 inch or larger. The filter needs to be changed after the first 10 hours of operation and every 200 hours or 12 months thereafter.



MAINTENANCE

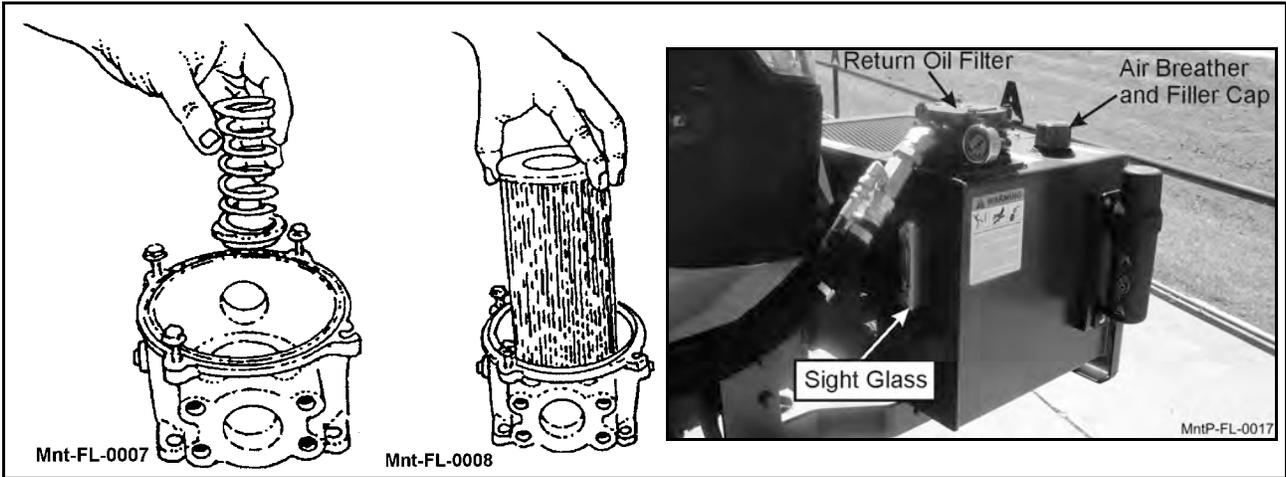
1. Clean the filter cover to prevent dirt from entering tank.
2. Loosen the four bolts on the filter cover. **MntP-FL-0019** Remove one bolt from the filter to aid in removing the filter cover. **Mnt-FL-0005**
3. Push the filter cover down and slowly twist the filter cover off. **Mnt-FL-0006**
4. Remove filter spring. **Mnt-FL-0007**.



5. Remove filter. Inspect material trapped by the filter. It can indicate parts wear in the system. **Mnt-FL-0008**
6. Install the new filter.
7. Reinstall filter spring and filter cover. Replace the one bolt which had previously been removed. Tighten all bolts in an even manner. **Asm-FL-0017**

# MAINTENANCE

## MAINTENANCE



# MAINTENANCE

## CUTTER UNIT

### A. GENERAL

The Terrain Master electrical circuit controls the flow of oil to the hydraulic motor on the cutter unit. The motor control valve relies on a solenoid to control the spool within the valve and direct the flow of oil.

When the mower ON/OFF switch is in the "ON" position, current flows to the solenoid which positions the spool to direct the oil flow from the pump to the motor. The oil then turns the motor which drives the cuttershaft.

When the mower ON/OFF switch is in the "OFF" position, the solenoid is not energized and oil pressure in the power circuit pushes the spool back allowing the oil to return to the reservoir from the valve. Without the flow of oil, the motor will no longer drive the cuttershaft.

### B. OFF-ON SWITCH

The electrical circuit is connected to the tractor ignition switch. (See Electrical Schematic). The yellow wire connects to the switch accessory terminal and the red wire connects to the start terminal. A 6 amp in-line fuse on the yellow wire protects the off-on switches from an overload. THE OFF/ON SWITCH HAS A SAFETY LOCK-OUT FEATURE THAT WILL NOT ALLOW THE TRACTOR STARTER TO ENGAGE IF SWITCH IS IN THE ON POSITION.

### C. SAFETY CUT-OFF SWITCH

In the electrical circuit between the OFF-ON switch and the motor solenoid valve is a safety cut-off switch. This switch is a cam-operated electrical switch that cuts the wing mowers off when the wing is raised to approximately 60 degree angle. This also prevents mower from being operated with the wing up. This feature prevents injury due to inadvertently starting mower with wing raised and should be kept in proper operating condition.

### D. SOLENOID OPERATED VALVE AT MOTOR

The electric solenoid valve is mounted in the hydraulic motor manifold block. The solenoid controls the spool within the valve. When the off-on switch is on and the wing is lowered the solenoid is energized by electrical current and the spool is closed to direct the flow of oil from the pump through the cuttershaft hydraulic motor. When the wing activates the safety cut-off switch, the electrical current is removed from the solenoid causing the spool to open and allows oil to return to tank without being directed through the motor. Without oil flow through the motor, the cuttershaft will not operate.

## GENERAL MAINTENANCE

Mowing is accomplished by a series of knives which rotate at high speed on a shaft. The shaft is driven by a hydraulic motor through a set of drive belts. Belt tension is maintained by a spring-loaded idler pulley.

The cutter unit is mounted to the lift frame by two mounting pins and held in place by a hydraulic cylinder. This cylinder is used to tilt the cutter unit to allow mowing on an angle and tilting to the vertical position for transporting. Another hydraulic cylinder is mounted to the lift frame and the lift cylinder support. This cylinder is used to raise the cutter unit via the lift frame.

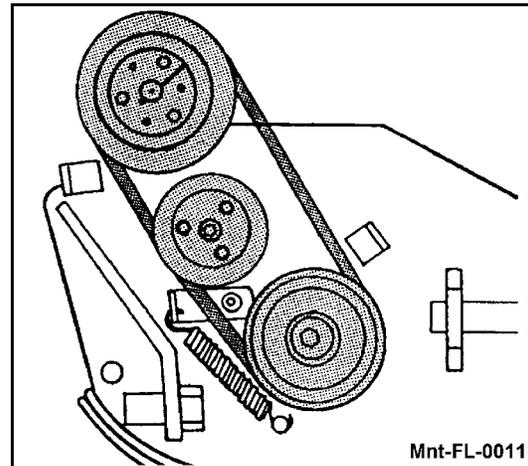
The cutter unit rides on a large roller assembly. The position of this roller is adjustable and will determine the cutting height of the knives.

# MAINTENANCE

## REPLACING CUTTER UNIT DRIVEBELTS

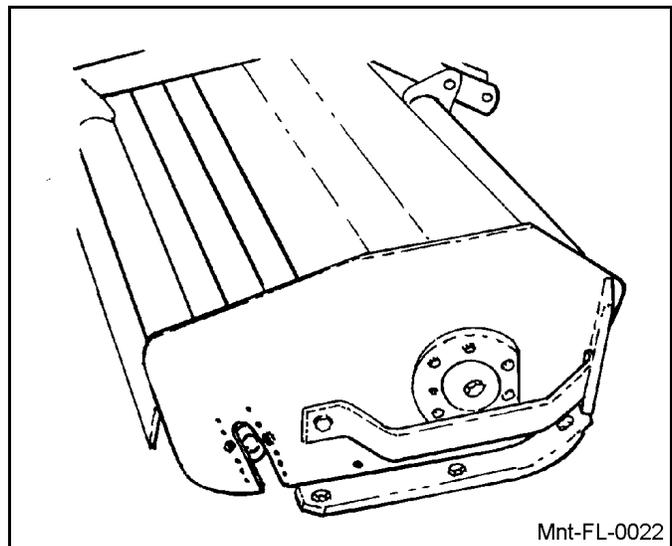
**NOTE:** Belts must be replaced as a set. DO NOT replace just one belt.

1. Place unit on ground or support securely.
2. Remove belt guard.
3. Remove idler arm spring.
4. Remove motor mounting bracket front bolt and loosen rear bolt.
5. Pivot motor-mounting bracket assembly. Remove old belts and install new ones.
6. Reinstall front mounting bolt then secure motor mounting bracket to unit.
7. Reinstall idler arm spring and belt guard.



## ADJUSTING CUTTING HEIGHT

1. Lower cutter unit to ground and place control valve levers in "FLOAT" position.
2. Place lifting device (scissors jack, hydraulic jack) under center of cutter housing.
3. Remove hex nuts, washers and carriage bolts from bracket at each end of roller. Make certain that roller bracket is free to move once the fasteners are removed. A stuck roller could drop suddenly and cause an injury.
4. Use lifting device to reposition cutter housing to desired cutting height. Align bracket holes with cutterhousing holes, then reinstall fasteners. Refer to cutting height decal on mower or Safety Section.
5. Lower cutter unit to ground; then remove lifting device.



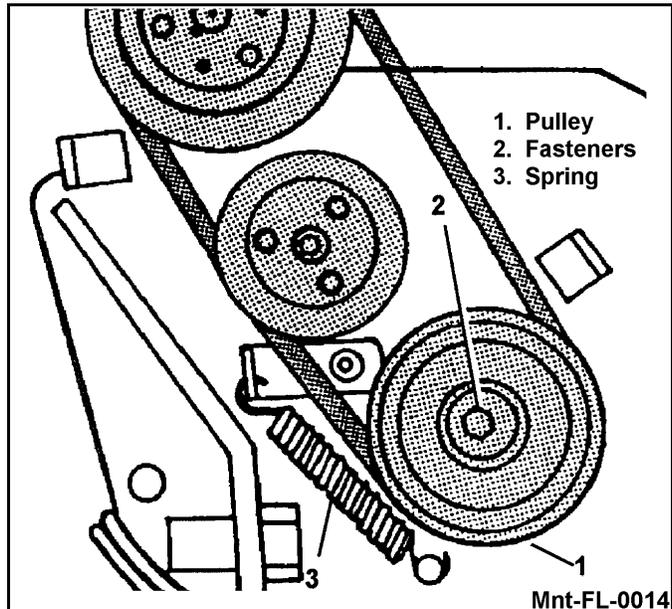
# MAINTENANCE

## Inboard (Drive) Bearing

1. Remove spring from idler arm. **Fig. Mnt-FL-0013**
2. Remove motor mounting bracket fasteners, at the cutterhousing. Pivot motor-mounting bracket
3. Remove fasteners that secure pulley to cuttershaft. Remove pulley and key.
4. Remove fasteners securing inboard bearing and housing assembly to cutter-housing, then remove bearing and housing assembly. Refer to **Mnt-FL-0014**

**NOTE:** There are two tapped holes in the housing which can be used to pull bearing and housing assembly out by using special tool No. 701627.

5. Using a jack to align parts, install inboard bearing and housing assembly to cutter unit. Grease bearing and install cap over fitting.
6. Reinstall key and pulley. Secure with cuttershaft fasteners.
7. Remove jack and check shaft rotation. Reinstall knives which were removed.
8. Reinstall drive belts then secure motor mounting bracket to cutterhousing.
9. Reinstall idler arm spring.
10. Reinstall belt guard.
11. Remove supports, lower unit to ground and test unit.
12. Reinstall outboard fender, if not already installed.



MAINTENANCE

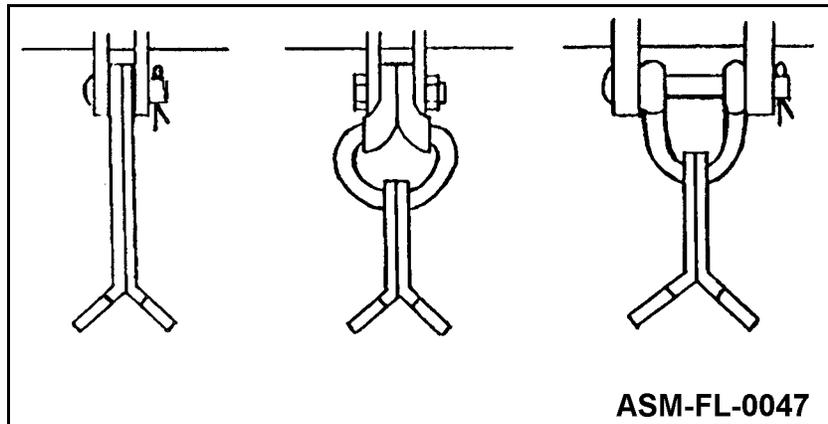
# MAINTENANCE

## REPLACING CUTTER UNIT KNIVES

The cutter knives are attached to the cutter shaft with hardened pin and cotter pins. These pins are supplied with the knife kit. To remove existing knives, remove and discard these pins and install new knives using new pins. **Figure ASM-FL-0047**

**FOR FORWARD ROTATION:** On the right wing and rear unit, all knife pins must be installed with their heads facing away from the cuttershaft pulley. On the left wing, the heads of the knife pins must face the cuttershaft pulley.

**FOR REVERSE ROTATION:** On the right wing and rear unit, all knife pins must be installed with their heads facing toward the cuttershaft pulley. On the left wing, and rear unit, the heads of the knife pins must face away from the cuttershaft pulley.



MAINTENANCE

# MAINTENANCE

## Flail Blades Inspection

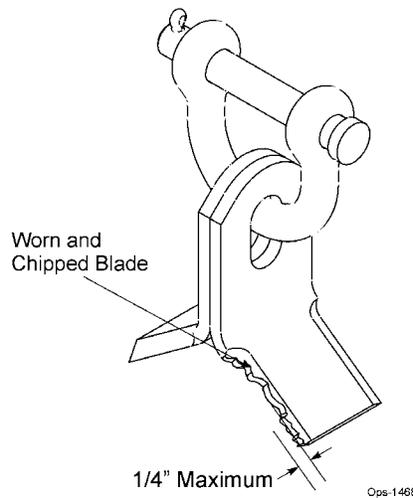


Inspect the Blades daily for abnormal wear. REPLACE ALL BLADES on the carrier IMMEDIATELY if any blades have:

- Become bent or deformed from its original shape, or
- Wear inside the blade bolt hole, or
- Any cracks are visible, or
- Deep gouges in the blade's surface are present, or
- Gouges or chipped areas in the cutting edge are larger than 1/4"(8mm), or
- The material on the leading edge has been worn away by more than 1/4"(8mm)

**DO NOT** straighten, sharpen, weld or hard-face blades

Failure to replace worn or damaged blades may lead to catastrophic failure of the blades and ejection of the broken part with tremendous force which may cause serious bodily injury or death.



Always replace blades in sets

- Blades that are damaged may indicate severe service or abuse. If one blade is worn or damaged other blades on the same shaft will have been subjected to the same severe service or abuse.
- The Flail rotor turns at speeds exceeding 2000 RPM and is dynamically balanced at the factory. Differences in blade weight between used blades with loss of material from gouges or wear as compared to new blades can cause severe vibration and damage to the Flail rotor. Always replace blades as complete sets.



Use only genuine Terrain King replacement blades and fasteners. Other blades and fasteners may not meet the Terrain King requirements and could fail during operation resulting in part being thrown out from under the mower.



Never attempt to sharpen blades. OPS-U-0044\_TK

# MAINTENANCE

## Blade Pins and D-Ring Inspection

Inspect Blade Pins and D-Rings daily for wear or damage as follows:

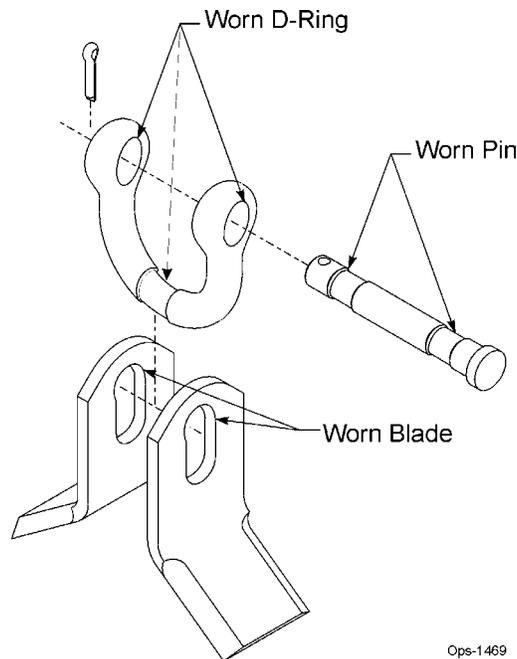


Inspect the Blade pins and D-Rings daily for abnormal wear. Make sure the cotter pins are in place and properly spread. REPLACE BLADE Pins and D-Rings IMMEDIATELY if they have:

- Visible cracks or
- If a Pin or D-Ring has visible worn areas, or
- If a Pin or D-Ring has gouges or chipped areas

Failure to replace abnormally worn pins or D-Rings may lead to catastrophic failure and ejection of the broken part which may cause serious bodily injury or death.

Always replace the pins and D-Rings whenever excessive wear is noticed.



Ops-1469

### Important

If the cotter pins are broken by contact with other flail blades, remove the pin and reverse the direction the pin is inserted through the D-Ring so that the cotter pin is on the opposite side of the D-Ring. This will prevent the next set of blades from swinging back and hitting the cotter pin. OPS-U-0045

# MAINTENANCE

## HYDRAULICS

### General

The Terrain Master hydraulic system consists of two circuits. The power circuit drives the cuttershaft. The control circuit lifts and tilts the cutter unit.

A tractor with a cutter unit installed on each side will have two independent power circuits with two sets of lift and tilt cylinders, and one control circuit with a four-section control valve (instead of a two section valve).

**NOTE:** It is important that pipe thread sealant be used on solid connections only; never on connections between swivel fittings or fittings with “O” rings and straight threads. Use pipe thread sealing compound. DO NOT substitute other types of sealant, such as teflon tape, paint, shellac, etc.

### Initial Start-Up Procedures

Whenever the hydraulic system is drained in order to service a hydraulic component, the following start-up procedure should be completed.

1. Check all nuts and hex head capscrews to be sure they are tight and that all lock washers are fully compressed.
2. Check all hoses and hydraulic connections to be sure that they are tight.
3. Inspect all moving parts, and make certain that no wires or hoses will be caught or pinched when the tractor is in operation.
4. Secure all wires and hoses.
5. Thoroughly lubricate the Terrain Master. Refer to SECTION 2, Illustration 4.
6. Change the hydraulic filter and fill the reservoir to the sight glass with new hydraulic oil. Refer to SECTION 1 for specifications.



Remove all objects from, and stand clear of the front of the cutter unit. DO NOT GET NEAR ROTATING KNIVES.

1. Turn mowers off, then start tractor and run engine at low idle. Operate the lift and tilt circuits, and the power circuit (turn cutter units on ONLY when mowers are fully lowered). Operate until the system is fully charged. Recheck the fluid level and add oil, if necessary. If undue noise continues after the system is fully charged, stop the unit and determine the cause.
2. After the hydraulic system is fully charged and functioning properly, switch the mowers on and increase the engine speed to run the PTO at 540 RPM. Maintain this speed for 5 minutes and look for any leaks or possible problems.

# MAINTENANCE

## Troubleshooting

The following shows various problems, the apparent cause, and the recommended procedure for their correction.

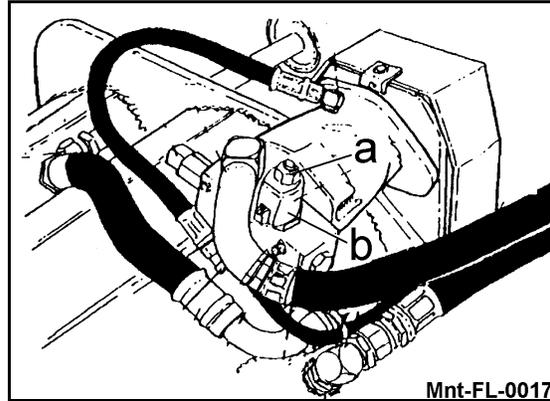
PROBLEM	POSSIBLE CAUSE	REMEDY
Mower will not rotate	In line Fuse blown. Safety switch not making contact. Broken Drivebelts. On/Off Switch bad. Insufficient voltage through Solenoid. Solenoid Spool will not shift completely.	Replace Fuse. Adjust or replace Safety Switch. Replace Belts Replace On/Off Switch Check Coil and Wires.  Clean or replace Solenoid Cartridge.
Mower will not stop.	Solenoid Spool will not shift.	Clean or replace Solenoid Cartridge.
Intermittent mowing power.	Safety Switch maladjustment Electrical problem. Bad Solenoid.	Adjust Safety Switch. Trace Electrical Circuit for short. Replace Solenoid Coil.
Insufficient cutting power or low Cuttershaft speed.	Drivebelts slipping. Bound Shaft. Relief Valve setting too low. Solenoid Spool will not shift completely. Worn Pump or Motor.	Readjust Belt tension and check. Free the Shaft. Adjust Relief Valve. Replace Valve Cartridge.  Replace or rebuild.
Hydraulic Oil overheating Mower free to rotate.	Low Fluid level. Relief Valve setting too high. Obstruction in Power Circuit-Extra or Will-Fit Parts.	Fill to proper level. Adjust Relief Valve. Remove obstruction & Extra Items which are not standard.
Pump making loud noise.	Low Oil level. Vacuum in reservoir. Clogged Oil Filter. Worn Pump.	Add Hydraulic Fluid. Clean or replace Vent Plug. Replace Filter. Replace or rebuild.
Mower will not raise or raises slowly.	Slow Gear Pump speed. Relief Valve Setting too low. Worn Gear Pump. Worn Cylinder. Worn Control Valve.	Check Belts, Idler Pulley, Spring. Adjust Relief Valve. Replace or rebuild. Replace or rebuild. Replace Valve Section.

# MAINTENANCE

## Solenoid Control Valve

The solenoid control valve directs oil flow from the hydraulic pump. When the mower ON/OFF switch is in the "ON" position, the solenoid is energized and the spool within the valve is positioned to direct oil to the cuttershaft motor.

When the mower ON/OFF switch is in the "OFF" position, oil pressure within the valve pushes the spool back which allows the oil to circulate through the cutter unit before returning to the reservoir. When the flow of oil to the motor is cut off, the cuttershaft will stop rotating. **Figure Mnt-FL-0017**



a. Control Valve

b. Solenoid

## Checking Solenoid Valve

1. With engine running, turn the mower ON/OFF switch in the "ON" position. Check voltage level at the solenoid.
2. If it is less than 12 volts, check wiring and ground connections. Checking ground wire is as important as checking the hot wire. If voltage is sufficient, the solenoid valve is bad and will need to be replaced.

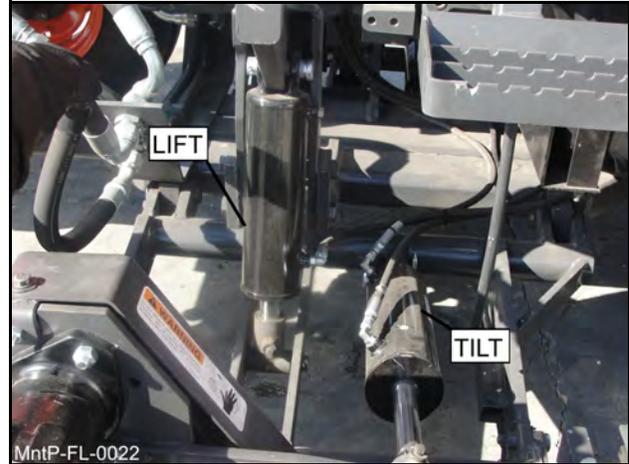
# MAINTENANCE

## CONTROL CIRCUIT

### Lift and Tilt Cylinders

Hydraulic cylinders change the position of the cutter unit. The lift cylinder raises and lowers the unit by changing position of the lift frame. To lift unit, oil is supplied to rod side of cylinder.

The tilt cylinder changes the angle of the cutter unit. Oil is supplied to both ends of the cylinder and provides power to tilt the unit up or down. The unit can be tilted to the full vertical position for transport.



Lift Cylinder (3-1/4" O.D.)

Tilt Cylinder (3-3/4" O.D.)

### Cylinder Rod Maintenance

It is important to visually inspect the hydraulic cylinder rods daily before use. It is highly recommended that while the machine is stored or getting very little use that a protectant is applied to the hydraulic cylinder rods to prevent degradation. If the machine receives more frequent use, be sure to fully cycle each cylinder function so that the cylinder rod is coated by the systems hydraulic fluid. Depending on your operating environment it may be necessary, under normal operating conditions, to apply a protective lubricant to the cylinder rods for protection against rust and pitting. Hydraulic fluid may provide a suitable amount of protection, but remember any protectant can attract dust and debris so attention must be given to the cylinder rods daily. Also remember that any other protectant must be compatible with hydraulic fluid. Terrain King is not responsible for rust or pitting of the cylinder rod due to weather exposure or impacts from normal operation or mounting. If hydraulic cylinders and or the cylinder rods are damaged as a result of the rods rusting or pitting, the hydraulic cylinders and rods will not be covered under warranty by Terrain King.

# MAINTENANCE

## Boom Cylinder Removal and Replacement Instructions

1. Clear the area of all personnel before lowering the boom mower head.
2. From the tractor seat with your seat belt fastened around you, Lower the boom mower head to the ground. Extend the boom to the furthest reach and lower the mower head flat on the ground. DO NOT attempt to replace the cylinders with the boom in the raised or transport position.
3. Shut off the tractor, engage the parking brake, place the tractor transmission in the park position, and remove the key before dismounting.
4. Allow the system to cool to room temperature before removing any hydraulic components
5. Wear Safety glasses and impenetrable gloves when working with hydraulic hoses and fittings.
6. Release all oil pressure from the hydraulic circuit by manually stroking each valve section with the tractor engine off. Utilize the Manual Override function if the unit is equipped with an electric over hydraulic valve.
7. Utilize blocks, jack stands or a suitable over head hoist to support the weight of the boom section and remove pressure form the cylinder mounting pins.
8. Check to see that the cylinder to be replaced is not under pressure by moving the cylinder pins by hand. The pins should be loose and should slide form the pin bore easily. If the pins are tight and cannot be moved, the cylinder may be under pressure. Make sure the boom components are properly supported and that the pressure is relived from the circuit.
9. Cylinder assemblies are heavy and can fall when the pins are removed. Support the hydraulic cylinder with a suitable hoist or jack.
10. Slowly loosen the hydraulic connections to the cylinder. Carefully unscrew hose fitting and allow any remaining pressure to bleed off. Use Extreme Care. Oil must be cool, and the technician should stand to the side to prevent exposure to any hydraulic oil. Always consult the Material Safety Data Sheet and wear any required Personal Protective Equipment. A catch pan may be required to retain any spilled oil.
11. Cap both ends of the fitting with suitably sized metal caps.
12. Remove the cylinder pins starting with the ROD end cylinder pin. Make sure the cylinder is properly supported, and remove the base end cylinder pin. The cylinder may be heavy, use proper lifting techniques to lift and handle the cylinder. If needed, get assistance from another person to safely lift the cylinder from the machine.
13. Measure the distance between the cylinder pin holes and extend the new cylinder the correct length prior to attempting an installation.
14. Install the new cylinder in place and install both cylinder pins and retaining hardware.
15. Remove the metal caps, and re-install the hydraulic hoses.
16. Check the hydraulic reservoir of the boom mower to ensure there is sufficient oil. Follow the manufactures recommendations for proper oil type and filtering techniques and requirements to add oil to the system.
17. Clear the area of all persons prior to starting the tractor.
18. Consult the Operator's Manual for instruction in regard to the proper operating procedure.
19. From the tractor seat, with the seat belt fastened, operate the boom to ensure proper operation of the boom function.
20. From the tractor seat, with the seat belt fastened, operate the boom controls to fully extend and retract the new cylinder several times to purge any trapped air from the system.
21. From the tractor seat, with the seat belt fastened, look for signs of and oil leak. If an oil leak is observed, shut the tractor down and follow the steps to remove pressure from the hydraulic circuit. Identify the source of the leak, and resolve the issue.
22. Upon completion of the required repairs, return to Step # 16 to recheck the cylinder for proper operation.

# MAINTENANCE

**MAINTENANCE**

## Hydraulic Component Maintenance Schedule

Component	Installation	Hours of Operation											
		200	400	600	800	1000	1200	1400	1600	1800	2000	2200	
Pump Drive Shaft Check and Lubricate	X	X	X	X	X	X	X	X	X	X	X	X	X
Pump Mounting Bolt torque check (Inspect Daily)	X	X	X	X	X	X	X	X	X	X	X	X	X
Charge Pump Filter	Installation	X			X					X			
Pressure Filter to the Control Valve	Installation	X			X					X			
Return Canister Filter Element	Installation	X			X					X			
Hydraulic Oil Change	Installation	X								X			
Hydraulic Oil Particle Count Testing	X	X			X					X			
Hydraulic Tank Breather Filter	Installation	Inspect								Replace			
Hydraulic Tank Suction Screen	Installation	Inspect								Inspect			
Hydraulic Hose Inspection/Replacement	Installation	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect
Cooling Fan Clean and Inspect	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily
Check Hydraulic Fluid Level (Inspect Daily)	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily
Mower Blades Replace (INSPECT DAILY)		X	X	X	X	X	X	X	X	X	X	X	X
Blade Bolts Replace (INSPECT DAILY)		X	X	X	X	X	X	X	X	X	X	X	X
Blade Bar Assembly Replace	Installation					X						X	
Spindle Lube Replacement (INSPECT DAILY)	X					X						X	
Spindle Bearing Pre-load Inspection	X	X	X	X	X	X	X	X	X	X	X	X	X
Mower Debris Guard Inspect/Replace	X	X	X	X	X	X	X	X	X	X	X	X	X
Pivot Point Lubrication	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily	Daily
King Pin Bearing Replacement	Installation									X			
Pivot Pin Bearing replacement (Steel)	Installation									X			
Pivot Pin Bearing Replacement (Fiber)	Installation					X						X	
Inspect Operation And Safety Decals Replace when faded, torn or missing.	X	X	X	X	X	X	X	X	X	X	X	X	X

**Repeat the Maintenance Schedule based on the hours indicated for the life of the machine**

### Hydraulic Gear Pump

The gear pump, mounted to the pump mount and driven by the crank shaft pulley, produces oil flow for the control circuit. The gear pump inlet is connected, via a hose, to the reservoir which supplies control circuit oil. A high pressure hose connects the pump outlet to the sectional control valve inlet.

**NOTE:** The gear pump is not used when tractor hydraulics are used to power the control circuit.



MntP-FL-0018

# MAINTENANCE

## Sectional Control Valve

The control valve directs oil flow from the gear pump to the hydraulic cylinders. In the "HOLD" position, the spool blocks oil flow to the cylinders which prevents movement, and directs oil through the valve back to the reservoir.

When the spool is shifted, oil flows to one side of the cylinder while the other side is opened to the return line. The cylinder rod then moves in or out and changes the cutter unit's position.

In the "FLOAT" position, the spool will open both sides of the cylinder to the return line. The cylinder rod is then free to move since oil can enter or leave either side of the cylinder.

There are two valve sections for each side of the tractor. One is for TILT, one is for LIFT. The sections are bolted together between an inlet and an outlet section. The LIFT section has four positions: UP, HOLD, DOWN & FLOAT. The TILT section has four positions: UP, HOLD, OUT and FLOAT.

A pressure relief valve is mounted in the inlet section of the valve. When a cylinder is bottomed, the relief valve will open and allow oil from the gear pump to return to the reservoir.



# MAINTENANCE

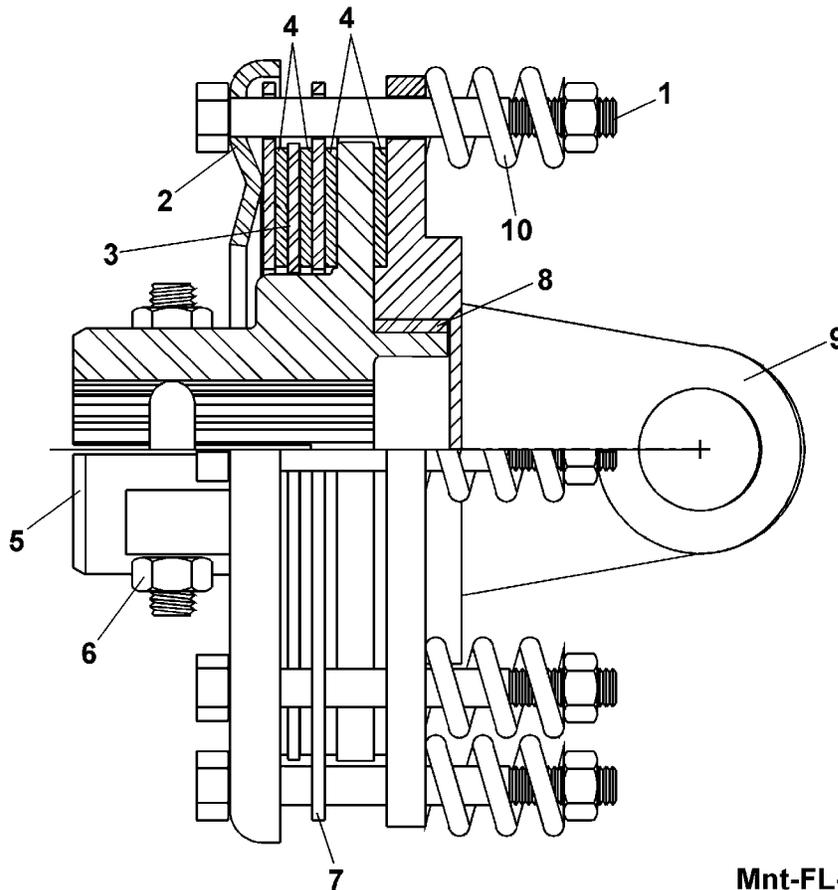
## Slip Clutch

A slip clutch is incorporated in the PTO driveline. It is designed to slip, absorb the shock load, and protect the driveline.

After the first hour of operation, the slip clutch should be checked for overheating. After this first check, the slip clutch should be checked weekly or anytime there is overheating. To adjust the slip clutch, tighten the spring bolts 1/8 (maximum) turn at a time. Bolts should NEVER be adjusted to the point where the springs are compressed solid. Minimum spring length is 1-1/8".

The slip clutch should be checked periodically and adjusted to compensate for wear. The lining plates are 1/8" thick when new. Replace after 1/32" wear. If the mower has been idle for an extended period of time, or in wet weather, before operating check to be sure the friction lining plates are not frozen or rusted together. Should this freezing occur refer to the procedure described in the "Seasonal Clutch Maintenance" section on the next page.

There are four friction lining plates in the slip clutch. These should be checked weekly for oil or grease, wear, and moisture which could cause corrosion on the drive plates.



Mnt-FL-0024

# MAINTENANCE

## SEASONAL CLUTCH MAINTENANCE

It is important that the clutch lining plates slip when an obstacle or load heavier than clutch setting is encountered. Therefore, if the machine sits outside longer than 30 days and is exposed to rain and/or humid air it is important to make sure that the clutch lining plates are not rusted/corroded together. Before using the mower use the following procedure to make sure the clutch will slip and give the overload protection required.

1. Loosen nuts on springs until the springs can freely rotate, yet remain secure on bolts.
2. Attach mower to tractor and start the tractor. Set the engine speed at 1200 RPM.
3. Mark outer plates as shown in.
4. Engage the PTO (approximately one second) and then quickly disengage it. The friction lining plates should break loose (check the mark).
5. Turn tractor off and tighten the nuts on the springs to their original position of 1-5/16" compressed spring length.

A double wing Terrain Master with 74" wing mowers will require approximately 26 gallons of oil to fill the hydraulic tank, hoses, cylinders and cooling tubes in the mower deck. A Terrain Master with 88" wings will require more oil. The Hydraulic tank only holds 15 gallons of oil and you can not add enough oil to the tank the first time to completely fill the system. Oil should be changed after the first 200 hours of operation and every 400 hours or 12 months of operation thereafter.

The following filling instructions must be carefully followed to prevent pump cavitation and instant pump failure.

1. After the Terrain Master mower is completely assembled to the tractor and with the wings on the ground, fill the mower hydraulic tank above the oil level sight gauge approximately 5" or 1" below the top of the tank.
2. Start the tractor and run it for 30 to 45 seconds and then turn it off.
3. Check the oil level in the sight gauge. If no oil is seen, add oil to bring the level up to the sight gauge.

**NOTE:** Do not fill the tank with oil above the level of the sight gauge after the first filling. Overfilling the tank with oil after the initial filling may result in oil being discharged through the air filter on top of the hydraulic tank.

4. Start the tractor and run it for 2 minutes and then turn it off.
5. Again check the oil level in the sight gauge. If the oil level is in the sight gauge, the unit is ready to run. If no oil is seen, add oil to bring the level up to the sight gauge.
6. Repeat steps 4 and 5 as required until the oil level stabilizes at the level of the sight gauge.

# MAINTENANCE

MAINTENANCE

## Proper Torque for Fasteners

The chart lists the correct tightening torque for fasteners. When bolts are to be tightened or replaced, refer to this chart to determine the grade of bolts and the proper torque except when specific torque values are assigned in manual text.

RECOMMENDED TORQUE IN FOOT POUNDS UNLESS OTHERWISE STATED IN THE MANUAL \*

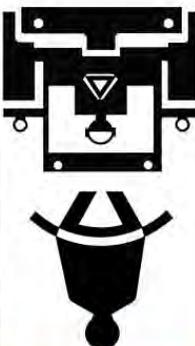
**NOTE:** These values apply to fasteners as received from supplier, dry or when lubricated with normal engine oil. They do not apply if special graphited or molydisulphide greases or other extreme pressure lubricants are used. This applies to both UNF fine and UNC coarse threads.

TORQUE SPECIFICATIONS - DRY TORQUE					
Proper torque for American fasteners. Recommended Torque in Foot Pounds (Newton Meters).*					
WRENCH SIZE (IN.) "A"	BOLT DIAMETER (IN.) "B" AND THREAD SIZE	SAE GRADE			
		2	5	8	
7/16	1/4 - 20 UNC	6 (7)	8 (11)	12 (16)	
7/16	1/4 - 28 UNF	6 (5)	10 (13)	14 (18)	
1/2	5/16 - 18 UNC	11 (15)	17 (23)	25 (33)	
1/2	5/16 - 24 UNF	13 (17)	19 (26)	27 (37)	
9/16	3/8 - 18 UNC	20 (27)	31 (42)	44 (60)	
9/16	3/8 - 24 UNF	23 (31)	35 (47)	49 (66)	
5/8	7/16 - 14 UNC	32 (43)	48 (66)	70 (95)	
5/8	7/16 - 20 UNF	36 (49)	55 (75)	78 (106)	
3/4	1/2 - 13 UNC	49 (66)	76 (103)	108 (144)	
3/4	1/2 - 20 UNF	55 (75)	85 (115)	120 (163)	
7/8	9/16 - 12 UNC	70 (95)	109 (148)	153 (207)	
7/8	9/16 - 18 UNF	79 (107)	122 (165)	172 (233)	
15/16	5/8 - 11 UNC	97 (131)	150 (203)	212 (287)	
15/16	5/8 - 18 UNF	110 (149)	170 (230)	240 (325)	
1-1/8	3/4 - 10 UNC	144 (195)	265 (360)	378 (509)	
1-1/8	3/4 - 16 UNF	192 (260)	297 (402)	420 (569)	
1-5/16	7/8 - 9 UNC	166 (225)	430 (583)	606 (821)	
1-5/16	7/8 - 14 UNF	184 (249)	474 (642)	668 (905)	
1-1/2	1 - 8 UNC	250 (339)	644 (873)	909 (1232)	
1-1/2	1 - 12 UNF	274 (371)	705 (955)	985 (1348)	
1-1/2	1 - 14 UNF	280 (379)	721 (977)	1019 (1381)	
1-11/16	1-1/8 - 7 UNC	354 (480)	795 (1077)	1288 (1745)	
1-11/16	1-1/8 - 12 UNF	397 (538)	890 (1206)	1444 (1957)	
1-7/8	1-1/4 - 7 UNC	500 (678)	1120 (1518)	1817 (2462)	
1-7/8	1-1/4 - 12 UNF	553 (749)	1241 (1682)	2013 (2728)	
2-1/16	1-3/8 - 6 UNC	655 (887)	1470 (1992)	2382 (3228)	
2-1/16	1-3/8 - 12 UNF	746 (1011)	1672 (2266)	2712 (3675)	
2-1/4	1-1/2 - 6 UNC	870 (1179)	1950 (2642)	3161 (4283)	
2-1/4	1-1/2 - 12 UNF	979 (1327)	2194 (2973)	3557 (4820)	

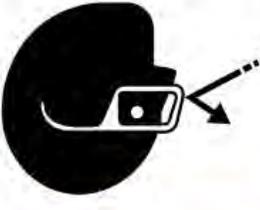
Proper torque for Metric fasteners. Recommended torque in Foot Pounds (Newton Meters).*					
WRENCH SIZE (mm) "A"	BOLT DIA. (mm) "B"	ASTM CLASS			
		4.8	8.8	9.8	10.9
8	5	1.6 (2.4)		5.1 (6.9)	6.5 (8.8)
10	6	3 (4)		8.7 (12)	11.1 (15)
13	8	7.3 (10)		21.1 (29)	27 (37)
16	10	14.5 (20)		42 (57)	53 (72)
18	12	25 (34)	74 (100)	73 (99)	93 (126)
21	14	40 (54)	118 (160)	116 (157)	148 (201)
24	16	62 (84)	167 (226)	161 (245)	230 (312)
30	20	122 (165)	325 (440)		449 (608)
33	22		443 (600)		611 (826)
36	24	211 (286)	563 (763)		779 (1054)
41	27		821 (1112)		1139 (1542)
46	30	418 (566)	1119 (1516)		1547 (2096)

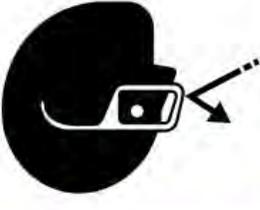
Mnt-B-0005

<p><b>⚠️ ADVERTENCIA</b></p>	<p><b>⚠️ WARNING</b></p>	<p><b>PARA EVITAR MUERTE Y LESION GRAVE DURANTE LA TRANSPORTACION:</b></p> <ul style="list-style-type: none"> <li>• SIEMPRE ABROCHE el cinturón de seguridad;</li> <li>• COLOQUE el brazo seguramente en transporte y apague el interruptor principal;</li> <li>• VERIFIQUE QUE EL SMV, reflectors, y luces intermitentes de advertencia pueden ser vistos claramente por detras de la unidad.</li> <li>• PRIENDA las luces intermitentes de advertencia.</li> </ul> <p><b>CONTROL DE TRANSPORTACION:</b></p> <ul style="list-style-type: none"> <li>• NO remolque en velocidades arriba de 20 mph.</li> <li>• REDUZCA LA VELOCIDAD en inclinas, en vueltas y en pobres condiciones de remolque.</li> </ul> <p>D699_1</p>		<p><b>TO AVOID DEATH OR SERIOUS INJURY DURING TRANSPORTATION:</b></p> <ul style="list-style-type: none"> <li>• ALWAYS BUCKLE UP seat belt;</li> <li>• PLACE wing securely in Transport latch and turn off master switch;</li> <li>• CHECK SMV sign, reflectors and warning lights for visibility behind unit;</li> <li>• TURN ON tractor flashing warning lights;</li> </ul> <p><b>TO AVOID LOSS OF TRANSPORTATION CONTROL:</b></p> <ul style="list-style-type: none"> <li>• DO NOT travel at speeds over 20 mph.</li> <li>• REDUCE SPEED on inclines, in turns and in poor weather conditions.</li> </ul>
<p><b>⚠️ ADVERTENCIA</b></p>	<p><b>⚠️ WARNING</b></p>	<p><b>PARA EVITAR MUERTE Y LESION GRAVE DURANTE LA OPERACION:</b></p> <ul style="list-style-type: none"> <li>• NO levante el implemento al estar en pendientes pronunciados..</li> <li>• MANTENGASE ALEJADO DE agujeros y zanjas blancas..</li> <li>• MANTENGA SIEMPRE el 20% de peso del tractor en las ruedas delanteras.</li> <li>• NO comience ni acelere repentinamente.</li> <li>• MANTENGA la unidad, por lo menos 10 pies de distancia de las líneas electricas y líneas de tubo.</li> </ul> <p>D699_2</p>		<p><b>TO AVOID DEATH OR SERIOUS INJURY DURING OPERATION:</b></p> <ul style="list-style-type: none"> <li>• DO NOT lift implement while on steep slopes;</li> <li>• KEEP AWAY from soft ditch banks and holes.</li> <li>• ALWAYS MAINTAIN 20% of tractor weight on front wheels.</li> <li>• DO NOT start or accelerate suddenly.</li> <li>• KEEP mower AT LEAST 10 FEET AWAY from electric lines and pipe lines.</li> </ul>
<p><b>⚠️ ADVERTENCIA</b></p>	<p><b>⚠️ WARNING</b></p>	<p><b>PARA EVITAR INCENDIOS DE EQUIPO Y CÉSPED:</b></p> <ul style="list-style-type: none"> <li>• QUITE el césped y escombros de las líneas hidráulicas, circuito, y las cubiertas.</li> <li>• NO PERMITA QUE LAS CUCHILLAS CONTACTEN piedras, metal o objetos solidos.</li> <li>• NO PERMITA QUE EL ACEITE CAIGA en el equipo o componentes calientes.</li> </ul> <p><b>PARA EVITAR INCENDIOS POR IGNICION:</b></p>	 <p>D699</p>	<p><b>TO AVOID EQUIPMENT AND GRASS FIRES:</b></p> <ul style="list-style-type: none"> <li>• CLEAR AWAY grass or debris from hydraulic lines, circuits and decks.</li> <li>• DO NOT ALLOW BLADES TO CONTACT rocks, metal or solid objects.</li> <li>• DO NOT ALLOW OIL TO SPRAY on hot equipment or components.</li> </ul> <p>D699_3</p>

# SEGURIDAD

# SEGURIDAD

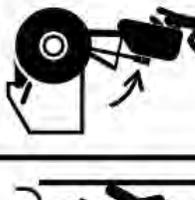
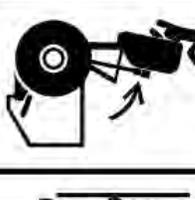
<b>⚠ PELIGRO</b>			
		 <a href="http://www.algqr.com/kts">www.algqr.com/kts</a>	
<p><b>PARA EVITAR MUERTE O LESION GRAVE:</b></p> <ul style="list-style-type: none"> <li>● LEA Y ENTIENDA el Manual de Operador proporcionado, signos de seguridad y calcomanías informativas para el tractor y implemento antes de operar el equipo.</li> <li>● CONTACTE AL DISTRIBUIDOR inmediatamente si no tiene los manuales.</li> <li>● CONTACTE AL DISTRIBUIDOR para que le explique cualquier instrucciones que no entienda completamente.</li> <li>● SIEMPRE USE lentes de seguridad con protectores laterales (marcados para cumplir con ANSI Z87).</li> <li>● USE un casco, zapatos de seguridad y guantes para su protección cuando esta operando el equipo.</li> </ul>			

<b>⚠ DANGER</b>			
		 <a href="http://www.algqr.com/kte">www.algqr.com/kte</a>	
<p><b>TO AVOID DEATH OR SERIOUS INJURY:</b></p> <ul style="list-style-type: none"> <li>● READ AND UNDERSTAND the provided Operator's Manuals, safety signs and information decals for tractor and implement before operating equipment.</li> <li>● CONTACT DEALER immediately if you do not have manuals.</li> <li>● CONTACT DEALER to explain any instructions not fully understood.</li> <li>● ALWAYS WEAR safety glasses with side shields (marked with ANSI Z87).</li> <li>● WEAR hard hat, safety shoes and gloves for protection when operating equipment.</li> </ul>			

D841 SP 5

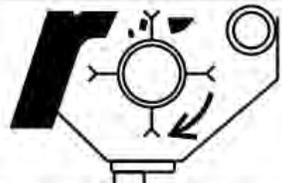
# SEGURIDAD

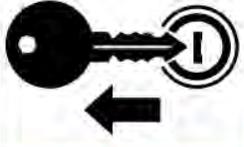
# SEGURIDAD

			
<p><b>PARA EVITAR MUERTE O LESION GRAVE:</b></p> <ul style="list-style-type: none"> <li>• USE un tractor equipado con Estructura Protectora Contra Vuelcos ("ROPS"), incluyendo barra antivuelco y cinturón de seguridad. Mantenga la barra antivuelco en la posición elevada.</li> <li>• PERMANEZCA ALEJADO al quitar el seguro de transporte, y al bajar o subir las alas.</li> <li>• DESPEJE EL ÁREA de personas presentes antes de bajar las alas del implemento.</li> <li>• EL IMPLEMENTO SE PUEDE CAER por el mal funcionamiento hidráulico o operación accidental de los controles.</li> <li>• BLOQUEE y soporte con seguridad el equipo antes de poner manos, pies o cuerpo debajo del equipo o componentes levantados.</li> </ul>		<p><b>TO AVOID DEATH OR SERIOUS INJURY:</b></p> <p>D841 SP 4</p> <ul style="list-style-type: none"> <li>• USE tractor equipped with Rollover Protective Structure ("ROPS") including roll bar and seat belt. Keep roll bar in raised position.</li> <li>• STAND CLEAR when removing transport latch, lowering or raising wings.</li> <li>• CLEAR AREA of bystanders before lowering implement wings.</li> <li>• IMPLEMENT CAN FALL from hydraulic failure or accidental operation of controls.</li> <li>• BLOCK UP and securely support equipment before putting hands, feet or body under raised equipment or lifted components.</li> </ul>	
<p><b>Riesgo de Aplastamiento - Muerte o Lesion</b></p> <p><b>⚠ PELIGRO</b></p>		<p><b>Crushing Hazard - Death or Injury</b></p> <p><b>⚠ DANGER</b></p>	

# SEGURIDAD

# SEGURIDAD

	<p><b>PELIGRO</b></p> <p><b>RIESGO DE ENREDAMIENTO</b></p>
	<p><b>PARA EVITAR MUERTE O LESION GRAVE:</b></p> <ul style="list-style-type: none"> <li>• NO opere sin la cubierta protectora en su lugar y en buen estado. Toma De Fuerza (Barra Gítoria) y guardias de caja de engranaje son SUJETO AL ESGASTE.</li> <li>• MANTENGASE ALEJADO y MANTENGA manos, pies y cuerpo LEJOS de las cuchillas girando, líneas de conducción, y partes que siguen moviéndose después de que el poder es apagado. ESPERE hasta que todos los elementos móviles se han parado.</li> <li>• SIEMPRE REEMPLACE CUBIERTAS que han sido quitadas para servicio o mantenimiento.</li> <li>• DETENGASE, OBSERVE y ESCUCHE por el movimiento de rotación antes de acercarse al implemento.</li> <li>• NO PISE EN las líneas de conducción o cubiertas.</li> </ul>
	<p><b>DANGER</b></p> <p><b>ENTANGLEMENT HAZARD</b></p>
	<p><b>TO AVOID DEATH OR SERIOUS INJURY:</b></p> <ul style="list-style-type: none"> <li>• DO NOT operate without guards in place and in good condition. PTO and gearbox guarding are SUBJECT TO WEAR.</li> <li>• STAY AWAY and KEEP hands, feet and body AWAY from rotating blades, drivelines and parts that continue to move after power shut-off. WAIT until all moving elements have stopped.</li> <li>• ALWAYS REPLACE GUARDS that have been removed for service or maintenance.</li> <li>• STOP, LOOK and LISTEN for rotating motion before approaching implement.</li> <li>• DO NOT STEP ON drivelines or guards.</li> </ul>
	<p>D841 SP 3</p>

<b>▲ PELIGRO</b>			
			
<b>Riesgo de Atropello Muerte o Lesion</b>			
<p><b>PARA EVITAR MUERTE O LESION GRAVE:</b></p> <ul style="list-style-type: none"> <li>• SIEMPRE ABROCHE el cinturón de seguridad.</li> <li>• SOLO ENCIENDA el tractor mientras que esta sentado en el asiento del operador.</li> <li>• PARE EL MOTOR y Toma De Fuerza (Barro Gítoria), aplique el freno de mano, baje el implemento, y deje que todas las partes movi paren completamente, y quite la llave antes de desmontar el tractor.</li> <li>• ENTIENDA COMO parar el tractor y equipo rápidamente en caso de una emergencia.</li> <li>• NO MONTE o DESMONTE el tractor en movimiento.</li> <li>• NUNCA PERMITA pasajeros en el tractor o implemento.</li> <li>• NUNCA PERMITA que niños operen o se monten en el tractor o implemento.</li> <li>• MANTENGA LAS PERSONAS PRESENTES LEJOS de la area antes de mover el tractor o implemento.</li> <li>• MANTENGASE ALERTO y EVITE golpes en troncos, agujeros, pozos o terreno en desnivel.</li> <li>• EVITE las ramas de árbol, maleza y algun otros objetos que sobresalen que puedan golpear y tumbar el operador del asiento.</li> </ul>			
<b>▲ DANGER</b>			
<b>Run Over Hazard - Death or Injury</b>			
<p><b>TO AVOID DEATH OR SERIOUS INJURY:</b></p> <ul style="list-style-type: none"> <li>• ALWAYS BUCKLE UP seat belt.</li> <li>• ONLY START Tractor while seated in the operator's seat.</li> <li>• STOP ENGINE and PTO, engage parking brake, lower implement, allow all moving parts to stop and remove key before dismounting from tractor.</li> <li>• KNOW HOW to stop tractor and equipment quickly for an emergency.</li> <li>• DO NOT MOUNT or DISMOUNT Tractor in motion.</li> <li>• NEVER ALLOW riders on tractor or implement.</li> <li>• NEVER ALLOW children to operate or ride on tractor or implement.</li> <li>• KEEP BYSTANDERS CLEAR of area before moving tractor or implement.</li> <li>• KEEP ALERT and AVOID hitting stumps, holes, ruts, and uneven terrain.</li> <li>• AVOID tree limbs, brush and other overhanging objects that can strike and throw the operator from seat.</li> </ul>			

D841 SP 2

 <b>PELIGRO</b>		
<b>RIESGO DE OBJETOS LANZADOS</b>		
<p><b>Cortcesped puede lanzar objetos hasta 300 pies. PARA EVITAR MUERTE O LESION GRAVE a operadores y personas presentes:</b></p> <ul style="list-style-type: none"> <li>• Pare de segar si personas o tráfico se acercan entre 300 pies del área de segar.</li> <li>• NO OPERE sin la cubierta para objetos lanzados.</li> <li>• MANTENGA la cubierta para objeto lanzado en su lugar y en buenas condiciones. Los protectores de objetos lanzados son sujetos al desgaste.</li> <li>• REPARA O REEMPLAZA cubiertas si son dañadas, quebradas, o si faltan.</li> <li>• INSPECCIONE el área por si hay riesgos potenciales de objetos lanzados antes de segar.</li> <li>• REMUEVA y EVITE objetos como alambre, cable, objetos de metal y todo otro material extranjero.</li> <li>• NO DEJE que las cuchillas contacten los objetos sólidos como alambre, rocas, postes, borde de banqueta, o barandillas.</li> <li>• NO OPERE en posición de transporte o con las alas levantadas.</li> </ul>		
  		
<b>THROWN OBJECTS HAZARD</b>		
 <b>DANGER</b>		
<p><b>Mower can throw objects up to 300 feet. TO AVOID DEATH OR SERIOUS INJURY to operator or bystanders:</b></p> <ul style="list-style-type: none"> <li>• STOP mowing if pedestrians or bystanders come within 300 feet.</li> <li>• DO NOT OPERATE with thrown object shielding removed.</li> <li>• KEEP thrown object shielding in place and in good condition during operation. Thrown Objects shielding is subject to wear.</li> <li>• REPAIR OR REPLACE shielding if damaged, broken or missing. See Operator's Manual for all Shields and Guards.</li> <li>• INSPECT area for potential mower thrown object hazards before mowing.</li> <li>• Remove and AVOID objects such as wire, cable, metal objects and all other foreign material.</li> <li>• DO NOT ALLOW blades to contact solid objects like wire, rocks, posts, curbs or guard rails.</li> <li>• DO NOT OPERATE in transport position or with wings off ground.</li> </ul>		
D841 SP 1		

**SEGURIDAD**

**SEGURIDAD**

 <p><b>DANGER</b></p>	<p>Si vous ne pouvez pas lire l'anglais : avant d'utiliser l'équipement, demandez à une personne de vous traduire les messages de sécurité ou allez sur le site Internet pour voir la traduction des autocollants et des messages de sécurité.</p>
 <p><b>PELIGRO</b></p>	<p>Si no puede leer inglés: antes de poner en funcionamiento este equipo, solicite que alguien le traduzca los mensajes de seguridad o vaya al sitio web para consultar los mensajes de seguridad y las etiquetas ya traducidos.</p>
 <p>Manuel de l'Opérateur</p>  <p><a href="http://www.algqr.com/kff">www.algqr.com/kff</a></p>	 <p>El Manual del Operador Seguridad vídeo</p>   <p><a href="http://www.algqr.com/kfs">www.algqr.com/kfs</a> <a href="http://www.algqr.com/avs">www.algqr.com/avs</a></p>

 <p><b>GEFAHR</b></p>	<p>Falls Sie nicht Englisch sprechen: Bevor Sie die Geräte in Betrieb nehmen, bitten Sie eine Englisch sprechende Person darum, Ihnen die Sicherheitsmeldung zu übersetzen, oder besuchen Sie die Website; dort finden Sie übersetzte Aufkleber und Sicherheitsmeldungen.</p>
 <p><b>PERIGO</b></p>	<p>Caso você não leia inglês: antes de operar o equipamento, peça para alguém traduzir as mensagens de segurança ou visite a web e obtenha tais mensagens ou os decalques traduzidos.</p>
 <p>Benutzerhandbuch</p>  <p><a href="http://www.algqr.com/kfg">www.algqr.com/kfg</a></p>	 <p>Manual do Operador</p>  <p><a href="http://www.algqr.com/kfp">www.algqr.com/kfp</a></p>

<p><b>ADVERTENCIA</b> </p> <p><b>Cáncer y Daño Reproductivo</b> www.P65Warnings.ca.gov</p>	<p><b>WARNING</b> </p> <p><b>Cancer and Reproductive Harm</b> www.P65Warnings.ca.gov</p>
<p>Seguro. Compañías de Alamo Group, Alamo Industrial, Bush Hog, M&amp;W, Rhino, Schulte y Tiger así como AEM y FEMA proporcionan material para entrenar que es esencial para su seguridad y la seguridad de otros al operar este equipo. Haga estos procedimientos de seguridad una parte importante de su día de trabajo. Lea y entienda el Manual de Operadores. No permita que personas sin entrenamiento funcionen este equipo.</p> <p>Contacte a su distribuidor, AEM (www.aem.org), FEMA (314-878-2304, www.FarmEquipment.org), o Alamo Group (www.Alamo-Group.com) para la información sobre el material de entrenamiento o cursos que ofrecen el entrenamiento de Prácticas de Operación para Cortadoras.</p>	<p>To prevent serious injury to yourself and/or bystanders, be trained in Safe Mowing Practices.</p> <p>Alamo Group Companies, Alamo Industrial, Bush Hog, M&amp;W, Rhino, Schulte, Tiger and Terrain King as well as AEM and FEMA provide training material that is critical for your Safety and the Safety of others when operating this equipment. Make these Safety Procedures an important part of every workday.</p> <p>Read and understand the Operator's Manual. Do not let untrained individuals operate this equipment. Contact your Dealer, AEM (www.aem.org), FEMA (314-878-2304, www.FarmEquipment.org), or Alamo Group (www.Alamo-Group.com) for information on training material or courses that provide training in Safer Operating Practices for Mowers.</p>
<p><b>ESTE CONSCIENTE SEA ENTRENADO</b> <b>ESTE ALERTO</b> Antes de Funcionar <b>ESTE VIVO</b> Cortacésped</p>	<p><b>BE AWARE</b> <b>BE ALERT</b> Before Operating <b>BE ALIVE</b> this Mower</p>
<p><b>IMPORTANTE</b></p>	<p><b>IMPORTANT</b></p>
<p><b>ADVERTENCIA</b> </p> <p><b>PARA EVITAR MUERTE O LESION GRAVE:</b></p> <ul style="list-style-type: none"> <li>El uso de piezas no originales puede provocar el fallo de la pieza, creando condiciones peligrosas para el operador y personas presentes.</li> <li>SOLO use piezas de repuesto genuinas de Terrain King que han sido validadas y probadas para usar en equipo. Terrain King por el fabricante.</li> <li>El fabricante del equipo no puede verificar el material, o integridad estructural de piezas de repuesto no genuino suministrados.</li> </ul> <p>Contacte a su distribuidor local o TERRAIN KING sobre partes de reparo at: 1502 E. Walnut, Seguin, TX 78156 Servicio al Cliente: 800-882-5756 www.algqr.com/kpm Correo Electronico: boom@terrainking.com</p>	<p><b>WARNING</b> </p> <p><b>TO AVOID DEATH OR SERIOUS INJURY:</b></p> <ul style="list-style-type: none"> <li>ONLY use genuine TERRAIN KING replacement parts, which have been validated and tested to use on Terrain King equipment by the manufacturer.</li> <li>The equipment manufacturer cannot verify the material or structural integrity of third-party supplied non-genuine replacement parts.</li> <li>Using non-genuine parts can result in the part failing, creating hazardous conditions for operator and bystanders.</li> </ul> <p>Contact local dealer or TERRAIN KING about repair parts at: 1502 E. Walnut, Seguin, TX 78156 Customer Service: 800-882-5756 www.algqr.com/kpm Email: boom@terrainking.com</p>

D869 SP

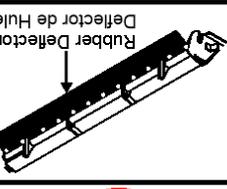
SEGURIDAD

SEGURIDAD

**SEGURIDAD**

**SEGURIDAD**

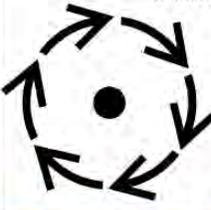
<b>⚠ PELIGRO</b>		<b>⚠ DANGER</b>	
<b>Riesgo de Aplastamiento Muerte o Lesion</b>		<b>Crushing Hazard - Death or Injury</b>	
<p><b>PARA EVITAR MUERTE O LESION GRAVE:</b></p> <ul style="list-style-type: none"> <li>• MANTENGASE LEJOS al quitar el cierre de transporte, bajando y devanando las alas.</li> <li>• DESOCUPE EL AREA de personas presentes antes de bajar las alas del implemento.</li> <li>• EL IMPLEMENTO PUEDE CAER del fracaso hidráulico o por operación accidental de controles.</li> <li>• BLOQUEE y soporte con seguridad antes de poner manos, pies o cuerpo debajo del equipo de componentes levantados.</li> <li>• CON SEGURIDAD ACTIVE el cierre de transporte antes de la transportación o trabajar debajo de las alas.</li> <li>• LLENE LOS CILINDROS con aceite antes de intentar de bajar las alas del implemento.</li> <li>• NO OPERE en posición de transporte o con las alas devanadas del la tierra.</li> </ul> <p style="text-align: right;">D698</p>		<p><b>TO AVOID DEATH OR SERIOUS INJURY:</b></p> <ul style="list-style-type: none"> <li>• STAND CLEAR when removing transport latch, lowering or raising wings.</li> <li>• CLEAR AREA of bystanders before lowering implement wings.</li> <li>• IMPLEMENT CAN FALL from hydraulic failure or accidental operation of controls.</li> <li>• BLOCK UP and securely support equipment before putting hands, feet or body under raised equipment or lifted components.</li> <li>• SECURELY ENGAGE transport latch before transportation or working under wing.</li> <li>• FILL CYLINDERS with oil before attempting to lower implement wings.</li> <li>• DO NOT OPERATE in transport position or with wings off ground.</li> </ul>	
			

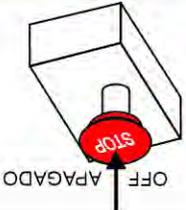
<b>⚠ PELIGRO</b>		<b>⚠ DANGER</b>	
<b>RIESGO DE OBJETOS LANZADOS</b>		<b>THROWN OBJECT HAZARD</b>	
<p><b>PARA EVITAR MUERTE O LESION GRAVE:</b></p> <ul style="list-style-type: none"> <li>• NO OPERE si la cubierta de Objetos Lanzados esta dañada o falta.</li> <li>• Mantenga Los Deflectores de Hule en buenas condiciones.</li> <li>• Inspeccione Los Deflectores de Hule con frecuencia.</li> </ul> <p style="text-align: right;">Mantenga Cubierta de Objetos Lanzados AQUI ↑</p> <p style="text-align: right;">D626 SF</p>		<p><b>TO AVOID DEATH OR SERIOUS INJURY:</b></p> <ul style="list-style-type: none"> <li>• DO NOT OPERATE if Thrown Object Shielding is damaged or missing.</li> <li>• Maintain Rubber Deflectors in good condition.</li> <li>• Inspect Rubber Deflectors frequently.</li> </ul> <p style="text-align: right;">MAINTAIN Thrown Object Shielding HERE ↑</p>	
			



<b>! DANGER</b>	
<b>! PELIGRO</b>	<b>! DANGER</b>
<p>GUARD DO NOT MISSING OPERATE</p>	<p>FALTA EL CUBIERTA NO OPERE</p>
<p>D546 SP</p> 	
<b>! DANGER</b>	

<b>! WARNING</b>	
<p><b>! ADVERTENCIA</b></p> 	<p><b>TO AVOID EQUIPMENT AND GRASS FIRES:</b></p> <ul style="list-style-type: none"> <li>• CLEAR AWAY grass or debris from slip clutches, gearboxes, drivelines and decks.</li> <li>• DO NOT ALLOW BLADES TO CONTACT rocks, metal or solid objects.</li> </ul>
<p>D708 SP</p> 	<p><b>PARA EVITAR INCENDIOS DE EQUIPO Y PASTIZALES</b></p> <ul style="list-style-type: none"> <li>• Limpie la hierba o escombros de los cloches, caja de cambio, líneas de conducción y cubiertas</li> <li>• PARA EVITAR FUEGO AL ENCENDER EL EQUIPO:</li> <li>• NO PERMITIR QUE LAS CUCHILLAS CONTACTEN PIEDRAS, METAL O OBJETOS SÓLIDOS.</li> </ul>

<b>⚠️ ADVERTENCIA</b>		<b>⚠️ WARNING</b>
<p style="text-align: center;"><b>540 RPM</b></p> <p style="text-align: center;">OPERE ESTA MÁQUINA A</p> <p>SOLAMENTE OPERE ESTA MÁQUINA A LA VELOCIDAD DE PTO (TOMA DE FUERZA O BARRA GITATORIA) DEL TRACTOR DE 540 RPM. El sobre exceso de velocidad de PTO puede causar el fracaso de componente que resultara en lesión. ROTACION DE PTO DEL TRACTOR: EN SENTIDO HORARIO <small>D547 SP</small></p>	 <p><small>D388_2</small></p>	<p>OPERATE THIS MACHINE AT <b>540 RPM</b></p> <p>TRACTOR PTO SPEED ONLY. Overspeeding PTO may cause component failure resulting in bodily injury. TRACTOR PTO ROTATION: CLOCKWISE</p>
<b>⚠️ PELIGRO</b>		<b>⚠️ DANGER</b>
<p>PARA EVITAR LESION SERIA O MUERTE POR CONTACTO A LA LINEA DE CONDUCCION, SEPARACION DE LINEA DE CONDUCCION, O EL FRACASO DEL EJE DE PTO:</p> <ul style="list-style-type: none"> <li>• PARE, MIRE y ESCUCHE por el movimiento de rotación antes de acercarse al implemento.</li> <li>• MANTENGASE ALEJADO y MANTENGA manos, pies y cuerpo LEJOS de partes girando, hasta que todos los elementos de movimiento se han parado.</li> <li>• SIEMPRE apague la Toma De Fuerza (Barra Gitatoria) antes de desmontar.</li> <li>• NO opere si las cubiertas de Toma De Fuerza (Barra Gitatoria) estan dañadas.</li> <li>• EMPUJE Y JALE el yugo hasta que el collar de fijación hace clic y el yugo se traba en lugar.</li> <li>• REVISE las guardias de línea de conducción por giración libre y suficiente trasape para evitar areas sin cobertura.</li> <li>• NO UTILICE UN ADAPTOR PARA LA TOMA DE FUERZA (Barra Gitatoria).</li> </ul> <p style="text-align: right;"><small>D547_1</small></p>	 <p>PTO (Barra Gitatoria)</p>    	<p><b>TO AVOID DEATH OR SERIOUS INJURY FROM DRIVELINE CONTACT, DRIVELINE SEPARATION OR PTO STUB SHAFT FAILURE:</b></p> <ul style="list-style-type: none"> <li>• STOP, LOOK and LISTEN for rotating motion before approaching implement.</li> <li>• STAY AWAY and KEEP hands, feet and body AWAY from rotating parts until all moving elements have stopped.</li> <li>• ALWAYS shut off PTO before dismounting.</li> <li>• DO NOT operate if PTO shields are damaged or missing.</li> <li>• PUSH AND PULL on yoke until collar clicks and locks in place.</li> <li>• CHECK driveline guards for free rotation and sufficient overlap to avoid unshielded areas.</li> <li>• DO NOT USE PTO ADAPTER</li> </ul>

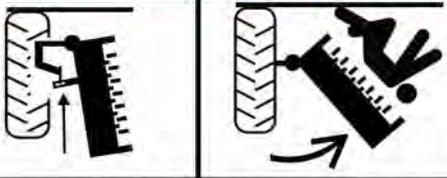
<b>⚠ DANGER</b>	
<b>Entanglement Hazard</b>	
<p>Mower head will start running when lowered if Mower ON/OFF Switch is ON.</p> <p><b>TO AVOID DEATH OR SERIOUS INJURY:</b></p> <ul style="list-style-type: none"> <li>• MAKE CERTAIN the ON/OFF SWITCH is OFF before lowering mower head.</li> <li>• CLEAR AREA of bystanders before lowering mower head.</li> </ul> <p>Mower head automatically shuts OFF when raised above 45°.</p>	
	
<b>⚠ PELIGRO</b>	
<b>Riesgo de Enredamiento</b>	
<p>La Cabeza Cortadora empezará al bajar si el interruptor de ENCENDIDO/APAGADO de cortadora esta en la posición ENCENDIDO.</p> <p><b>PARA EVITAR MUERTE O LESION GRAVE:</b></p> <ul style="list-style-type: none"> <li>• ESTE SEGURO que el INTERRUPTOR de ENCENDIDO/APAGADO esta en la posición APAGADO antes de bajar la cabeza cortadora.</li> <li>• DESOCUPE EL AREA de personas presentes antes de bajar la cabeza cortadora.</li> </ul> <p>La Cabeza Cortadora se APAGA automáticamente cuando es levantada arriba de 45°.</p>	
<small>D682</small>	

<p><b>▲ ADVERTENCIA ▲</b>      <b>▲ WARNING ▲</b></p>		
<p><b>PARA EVITAR MUERTE O LESION GRAVE POR LA PENETRACION A LA PIEL POR ALTA PRESION DE ACEITE HIDRAULICO:</b></p> <ul style="list-style-type: none"> <li>● NO OPERE el equipo con fugas de aceite o combustible.</li> <li>● MANTENGA todas las mangueras hidráulicas, líneas y conexiones en buenas condiciones y apretadas antes de aplicar presión al sistema.</li> <li>● Relieve la presión hidráulica antes de desconectar las líneas o trabajar en le sistema.</li> <li>● QUITE y reemplace la manguera si sospecha que hay fuga.</li> </ul> <p><b>FUGAS DE ALTA PRESION PUEDEN SER INVISIBLE. AL VERIFICAR POR FUGAS HIDRAULICAS Y TRABAJANDO ALREDEDOR DE SISTEMAS HIDRAULICOS:</b></p> <ul style="list-style-type: none"> <li>● NO use las manos para verificar si hay agujeros.</li> <li>● SIEMPRE USE lentes de seguridad y guantes impenetrables.</li> <li>● USE papel o un cartón para buscar agujeros.</li> <li>● NO USE las manos o partes del cuerpo para buscar agujeros.</li> <li>● MANTENGA manos y cuerpo LEJOS de agujeros de alfiler y boquillas que expulsan el líquido hidráulicos.</li> </ul>	<p style="text-align: center;">D617 SP</p> 	<p><b>TO AVOID DEATH OR SERIOUS INJURY FROM HIGH PRESSURE HYDRAULIC OIL LEAKS PENETRATING SKIN:</b></p> <ul style="list-style-type: none"> <li>● DO NOT OPERATE equipment with oil or fuel leaks.</li> <li>● KEEP all hydraulic hoses, lines and connections in good condition and tight before applying system pressure.</li> <li>● Relieve hydraulic pressure before disconnecting lines or working on the system.</li> <li>● REMOVE and replace hose if you suspect it leaks. Have dealer test it for leaks.</li> </ul> <p><b>HIGH PRESSURE FLUID LEAKS CAN BE INVISIBLE. WHEN CHECKING FOR AROUND HYDRAULIC SYSTEMS:</b></p> <ul style="list-style-type: none"> <li>● DO NOT use hands to check for leaks.</li> <li>● ALWAYS WEAR safety glasses with side shields (marked with ANSI Z87) and impenetrable gloves.</li> <li>● USE paper or cardboard to search for leaks.</li> <li>● KEEP hands and body AWAY from pin holes and nozzles ejecting hydraulic fluid.</li> <li>● Hydraulic fluid may cause gangrene if not surgically removed immediately by a doctor familiar with this form of injury.</li> </ul>

<b>▲ DANGER</b>			<b>PINCH POINT HAZARD</b> ● DO NOT OPERATE with Belt Shield removed.
<b>▲ ADVERTENCIA</b>			<b>RIESGO DE PUNTOS DE PELLIZCO</b> ● NO OPERE con la cubierta de correa ausente. PARA EVITAR LESION SERIA: D641 SP

<b>▲ WARNING</b>			● STAY AWAY from hot oil that may spray out of tank. ● ALLOW oil to cool down BEFORE removing cap. ● SLOWLY remove cap to relieve pressure BEFORE removing completely.
<b>▲ ADVERTENCIA</b>			<b>TANQUE PRESURIZADO</b> LA TAPA DE DEPOSITO DE PETROLEO ES LA TAPA DE ALIVIO DE PRESION.

PARA EVITAR MUERTE O LESION GRAVE POR ESCALDADURA DE PETROLEO CALIENTE: MATENGASE ALEJADO del aceite caliente que puede salir a presión del tanque. Remueva LENTAMENTE la tapa para relajar la presión ANTES de remover la tapa completamente. PERMITA que el petróleo se enfríe ANTES de remover la tapa. D625 SP

<b>▲ DANGER</b>		
<b>▲ PELIGRO</b>		
<b>Crushing Hazard</b> RAISE AND SECURELY position Wing onto Transport Latch before transporting mower on roadways or working under wing.		
<b>Riesgo de Aplastamiento</b> Cierre de Transporte LEVANTE Y DE FORMA SEGURA COLOQUE la ala sobre el cierre de transporte antes de transportar la cortadora en la carretera o trabajando debajo del ala. D697		

# SEGURIDAD

## INFORMACIÓN DE PARTES

### INFORMACIÓN DE PARTES

Las cortadoras Terrain King usan balancadas y componentes de sistema seleccionado para los portadores de cuchillas, cuchillas, eje de cortar, navaja, suspensiones de navajas, los rodillos, los componentes de línea motriz, y cojinetes. Estas partes son echas y probadas a la especificaciones de Terrain King. Partes que no son auténticas no regularmente llegan con estas especificaciones. El uso de partes que no son auténticas puede reducir el funcionamiento de la cortadora, anular garantías, y presentar un peligro de seguridad. Use partes de cortadora auténticas de Terrain King por economía y seguridad. (SPTK-1-SP)

### CONTACTE A SU DISTRIBUIDOR TERRAIN KING

Manuales de Partes y Operador

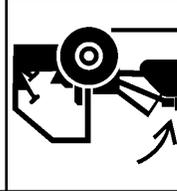
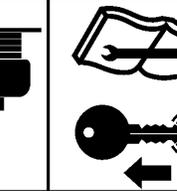
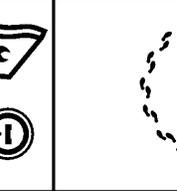


[www.alkqr.com/kpm](http://www.alkqr.com/kpm)

**NOTA:** Si necesita un manual completamente en español por favor de ponerse en contacto a; *Translations, direccion 1502 E. Walnut Street Seguin, TX 78155; Fax: (830) 372-9529*

# SEGURIDAD

## RIESGOS CON EL MANTENIMIENTO DEL IMPLEMENTO

	Inspeccione las cuchillas para detectar daños o fisuras
	Coloque las trabas de transporte cillíndricas
	Bloquee el implemento antes de repararlo. Utilice bloques grandes sobre suelo blando o húmedo
	Apague el motor. Quite la llave antes de realizar tareas de
	Inspeccione periódicamente todas las partes móviles, librique las líneas de conducción y ajuste todas las sujeciones.

**MANTENGA LOS IMPLEMENTOS EN BUENAS CONDICIONES DE FUNCIONAMIENTO, A TRAVÉS DE UN SERVICIO, REPARACIÓN O MANTENIMIENTO APROPIADO.**



- **ANTES DE REALIZAR TAREAS DE SERVICIO, REPARACIÓN Y MANTENIMIENTO DEL IMPLEMENTO:**
- **APAGUE EL MOTOR Y EL PTO, COLOQUE EL FRENO DE MANO, DESCENDA EL IMPLEMENTO, ESPERE A QUE SE DETENGAN TODAS LAS PARTES MÓVILES Y quite la llave antes de bajar el tractor.**
- **COLOQUE** el implemento sobre el suelo o trabe de manera segura los equipos elevados. Utilice bloques grandes sobre suelo blando o húmedo.
- **JALE** la palanca del Cilindro Hidráulico Remoto para liberar la presión hidráulica.
- **DESCONECTE** la línea de conducción del **IMPLEMENTO DEL EJE DE PTO** del tractor.
- **USE GAFAS DE SEGURIDAD Y GANTES** protectores al manipular las hojas, cuchillas, bordes filosos o un componente desgastado con bordes filosos.
- Siempre **USE GANTES** y **USE GAFAS DE SEGURIDAD** al reparar componentes en caliente.
- **EVITE EL CONTACTO** con tanques de aceite hidráulico, bombas, motores, válvulas y superficies de conexión de mangueras calientes.
- **SUJETE FIRMEMENTE** o **TRABE EN POSICIÓN ELEVADA** todos los implementos, bastidores y componentes elevados antes de trabajar sobre los equipos que se encuentran debajo.
- **DEFIENA** el movimiento de todos los implementos y **APAGUE EL MOTOR DEL TRACTOR** antes de realizar ninguna tarea.
- **USE** una escalera o gradas elevadas para alcanzar áreas altas del equipo a las que no se pueda acceder desde la tierra.
- **ASEGURESE** de estar bien apoyado sobre superficies sólidas planas al subirse al implemento para realizar tareas.
- **SIGA** las instrucciones del fabricante sobre cómo manipular los lubricantes, solventes, limpiadores y otros agentes químicos.
- **NO** cambie ninguna calibración hidráulica de fábrica para evitar fallas de los componentes o equipos.
- **NO** modifique o altere el implemento, las funciones o componentes de la cortadora.
- **NO** **SUELDE** o repare los componentes de la cortadora. Esto puede causar vibraciones y fallas de los componentes que se desprendan de la cortadora.

**REALICE LAS TAREAS DE SERVICIO, REPARACIÓN, LUBRICACIÓN Y MANTENIMIENTO QUE SE DESCRIBEN EN LA SECCIÓN DE MANTENIMIENTO DEL IMPLEMENTO:**

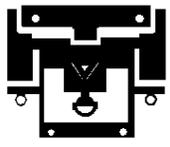
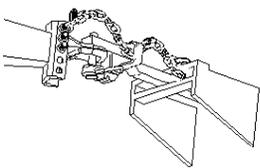
- **INSPECCIONE** el implemento para detectar sujeciones sueltas, partes gastadas o rotas, ajustes sueltos o con filtraciones, que los pasadores tengan chavetas y arandelas, y las partes móviles para detectar el desgaste.
- **REEMPLACE** todas las partes gastadas o rotas con repuestos autorizados.
- **LUBRIQUE** la unidad tal como se especifica en el cronograma de lubricación.
- **NUNCA** lubrique, ajuste o quite material mientras el equipo está en funcionamiento o movimiento.
- **AJUSTE** todas las tuercas y pernos tal como se especifica.
- **INSPECCION DE CUCHILLAS:**
- **REEMPLACE** las cuchillas dobladas, dañadas, agritadas o rotas inmediatamente por cuchillas nuevas.
- **EVITE** fallas de las cuchillas y que vuelen trozos de cuchillas. **NO** enderece, suelde o suelde con superficies rígidas.
- **INSPECCION DE PROTECTORES DE SEGURIDAD, GUARDAS Y DISPOSITIVOS DE SEGURIDAD:**
- **MANTENGA** en su lugar y en buen estado todos los defletores, protectores de acero, cubiertas de caja de engranajes, cubiertas integrales de PTO, bandas, faldones laterales y zapatas antideseizantes.
- **REEMPLACE** cualquier protector, cubierta o dispositivo de seguridad faltante, roto o gastado.
- **DESCONECTE** la válvula de solenoide de la bomba o la conexión de la línea de conducción de la TDF de antes de reparar el cabezal de la cortadora.
- **SIGA LAS INSTRUCCIONES** de la sección de mantenimiento al reemplazar los cilindros hidráulicos para evitar la caída de componentes

**Cáncer y daño reproductivo** www.P65Warnings.ca.gov. **PN HMF-M-02-SP**



# SEGURIDAD

## RIESGOS EN TRANSPORTE

 <p>Use señales de SMV (vehículo de movimiento lento) y balizas</p>	 <p>Peligro de detención por pérdida de control</p>	 <p>Peligro de velocidad excesiva por pérdida de control</p>	 <p>Use la cadena de remolque de seguridad – Tractor a implemento</p>	 <p>Coloque las trabas de transporte</p>
--	---	---	--	---



PARA EVITAR LESIONES GRAVES O LA MUERTE AL REMOLCAR O TRANSPORTAR EQUIPOS:

- **MANTENGA** la velocidad de transporte **POR DEBAJO DE 20** millas por hora para mantener el control del equipo.
- **REDUZCA LA VELOCIDAD** en terreno inclinado, en las curvas y en condiciones de remolque desfavorables.
- **NO REMOLQUE** camiones u otros vehículos
- **USE** un tractor de tamaño adecuado y equipado en función del equipo de remolque.
- **SIGA** todas las reglamentaciones de tránsito locales.
- **REQUISITOS DEL TRACTOR PARA REMOLCAR O TRANSPORTAR IMPLEMENTOS:**
- **SOLO TRANSPORTE** en el tractor con el mecanismo **ROPS** (antivuelco) en posición elevada.
- **USE** un tractor de tamaño adecuado y equipado, que supere el peso del implemento en al menos un 20%
- **MANTENGA EL 20%** del peso del tractor en las ruedas frontales para mantener la dirección en forma segura.

### ANTES DE TRANSPORTAR O REMOLCAR EL IMPLEMENTO:

- **INSPECCIÓN DEL TRACTOR:**
- **VERIFIQUE** la dirección y los frenos para asegurarse el correcto funcionamiento y las condiciones adecuadas.
- **VERIFIQUE LLEVAR EL AVISO DE SMV**, los reflectores y las luces de advertencia para la adecuada operación y visibilidad detrás de la unidad.
- **VERIFIQUE** que no haya impedimentos a la visión mientras conduce, en el tractor, la cabina o el implemento, sentado en el asiento del tractor.
- **AJUSTE** su posición de conducción, los espejos y el transporte del implemento para tener una visión clara para condiciones de conducción y tránsito.

### PREPARE EL IMPLEMENTO PARA EL TRANSPORTE O EL REMOLQUE:

- **COLOQUE LAS TRABAS PARA TRANSPORTE Y LAS CADENAS DE SEGURIDAD:**
- **ELEVE LA CORTADORA e INSTALE** topes o pasadores de transporte cilíndricos en el eje central
- **ELEVE LAS ALAS e INSTALE TRABAS DE TRANSPORTE** o pasadores.
- **AJUSTE LA CADENA DE SEGURIDAD** del implemento al tractor.
- **QUITTE** todo material cortado que se acumule en la plataforma de la cortadora.

### TRANSPORTE O REMOLQUE:

- **DETERMINE LAS CARACTERÍSTICAS DE DETENCIÓN DEL TRACTOR Y EL IMPLEMENTO PARA EL TRANSPORTE O REMOLQUE:**
- **FRENE** a velocidades en aumento.
- **DETERMINE** las distancias de **DETECCIÓN** con el aumento de velocidad.
- **DETERMINE** la velocidad de transporte máxima segura que no supere las 20 millas por hora.

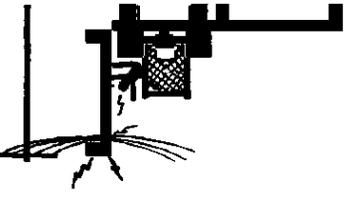
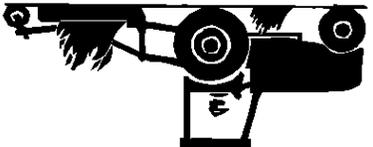
### IRREGULAR:

- **PONGA A PRUEBA** el equipo aumentando lentamente la velocidad en las curvas para determinar si se puede operar a mayor velocidad.
- **USE MENORES** velocidades de giro en las curvas pronunciadas para evitar el vuelco.
- **AL REMOLCAR O TRANSPORTAR EL EQUIPO:**
- Siempre **USE EL CINTURÓN DE SEGURIDAD** al operar o transportar la cortadora.
- **USE** bajas velocidades para evitar el vuelco con las alas elevadas.
- **USE** bajas velocidades y dirección gradual en las curvas, colinas, o en superficies irregulares o poco uniformes, y en carreteras mojadas.
- **ENCIENDA LAS BALIZAS DE ADVERTENCIA** del tractor.
- **TENGA EN CUENTA** el espacio necesario para el valivén del implemento en las curvas.
- **MANTENGA** todas las alas elevadas a 3 metros (10 pies) o una mayor distancia de todos los cables de alimentación y obstrucciones elevadas. *PN TH01 SP*

SEGURIDAD

# SEGURIDAD

## RIESGOS ELÉCTRICOS Y DE FUEGO

 <p>Contacto de ala con cables eléctricos elevados</p>	 <p>Riesgo de choque y explosión Contacto de paletas con líneas de servicios o gas</p>	 <p>No opere cerca de fuego. Mantenga limpia la plataforma de la cortadora</p>
---	---	---

**PARA EVITAR LESIONES GRAVES O LA MUERTE POR CONTACTO ELÉCTRICO AL TRABAJAR CERCA DE CABLES ELÉCTRICOS, LÍNEAS DE GAS Y DE SERVICIOS:**



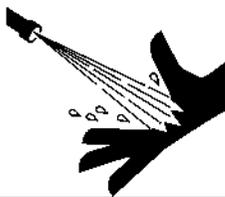
- **INSPECCIONE** el área de corte para que no interfiera con cables de alimentación eléctricos subterráneos, obstrucciones, líneas de gas, cables y servicios, estructuras municipales o de otro tipo.
  - **MANTENGA** todas las alas elevadas a 3 metros (10 pies) o una mayor distancia de todos los cables de alimentación y obstrucciones elevadas.
  - **NO** ponga en contacto la cortadora con ninguna estructura u obstrucción de servicios o municipales.
  - **LLAME** AL 811 y al 1-800-258-0808 para identificar cables de servicios subterráneos.
- PAUTAS DE PREVENCIÓN DE INCENDIOS durante la operación, reparación y servicio de la cortadora y el tractor, a fin de reducir el riesgo de incendio del equipo y de la vegetación:**

- El tractor debe estar **EQUIPADO CON MATAFUEGOS**
- **NO OPERE** la cortadora sobre un tractor equipado con escape debajo del bastidor
- **NO FUME** ni acerque fuego directo a la cortadora o el tractor
- **NO CONDUZCA** sobre residuos encendidos o en áreas recientemente quemadas
- **EVITE LA FORMACIÓN DE CHISPAS** al no permitir que la hoja de la cortadora entre en contacto con objetos sólidos como metal o roca.
- **AJUSTE LOS EMBRAGUES DESLIZANTES** para evitar el deslizamiento excesivo y el calentamiento de la placa del embrague
- **LIMPIE** todo resto de hierba o residuo acumulado alrededor de las líneas de conducción de la cortadora, los embragues deslizantes y cajas de cambios.
- **APAGUE EL MOTOR** al cargar combustible.
- **NO OPERE** el equipo con filtraciones de aceite o combustible. Repare cualquier filtración de aceite y retire el aceite acumulado antes de operar.
- **LIMPIE** todo resto de hierba o residuo acumulado alrededor de las bombas hidráulicas, valvulas, o tanques hidráulicos. *PN EFM-01 SP*

# SEGURIDAD

# SEGURIDAD

## RIESGO DE FILTRACION DE ACEITE HIDRÁULICO DE ALTA PRESIÓN

 <p>Penetración de aceite de alta presión en la piel</p>	 <p>Erosión de la piel por el aceite de alta presión</p>	 <p>Usar cartón para detectar filtraciones de aceite</p>	 <p>Los contenidos del tanque están bajo presión. Permita que el aceite se enfríe antes de quitar la tapa.</p>
---	--	---	---

**▲ PELIGRO** PARA EVITAR LESIONES GRAVES O LA MUERTE POR PENETRACIÓN DE FILTRACIONES DE ACEITE HIDRÁULICO DE ALTA PRESIÓN:

- **NO OPERE** el equipo con filtraciones de aceite o combustible.
- **MANTENGA** todas las mangueras hidráulicas, líneas y conexiones en **BUEN ESTADO** y **AJUSTADAS** antes de aplicar presión al sistema.
- **LIBERE LA PRESIÓN HIDRÁULICA** antes de desconectar las líneas o trabajar en el sistema.
- **QUITTE** y reemplace la manguera si sospecha que tiene filtraciones. Solicite al distribuidor que verifique si hay filtraciones.

### LAS FILTRACIONES DE LÍQUIDO DE ALTA PRESIÓN PUEDEN NO SER VISIBLES.

### AL VERIFICAR FILTRACIONES HIDRÁULICAS Y TRABAJAR CERCA DE LOS SISTEMAS HIDRÁULICOS:

- **SIEMPRE USE** gafas de seguridad y guantes impenetrables.
- **USE** papel o cartón para verificar si hay filtraciones.
- **NO USE** las manos o partes del cuerpo para detectar filtraciones.
- **MANTENGA** las manos y el cuerpo **LEJOS** de los orificios de clavijas y boquillas de eyección de fluido hidráulico. El fluido hidráulico puede causar gangrena si no es extraído quirúrgicamente de inmediato por un médico especializado en este tipo de lesiones.

### Tenga cuidado cuando retire la tapa del tanque hidráulico.

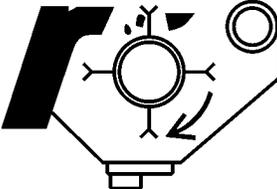
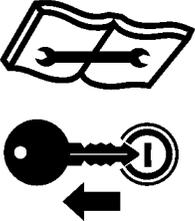
- Los contenidos del tanque pueden estar bajo presión.
- Siempre permita que el aceite se enfríe antes de quitar la tapa.
- Libere la presión de aceite antes de retirar la tapa lentamente.
- Alejese del aceite caliente que pueda rociarse desde el tanque.

PN HPFM-01\_SP

# SEGURIDAD

## SEGURIDAD

### RIESGO DEL CONTACTO A LAS CUCHILLAS DE CORTADORA

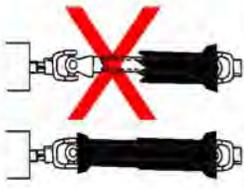
		
<p>No ponga los dedos debajo de la cortadora</p>	<p>No ponga el pie debajo de la cortadora</p>	<p>Detenga el tractor. Quite la llave. Lea el Manual</p>

**PELIGRO** MANTÉNGASE LEJOS DE LAS CUCHILLAS GIRATORIAS PARA EVITAR LESIONES GRAVES O LA MUERTE POR CONTACTO CON LA CUCHILLA:

- MANTÉNGASE LEJOS y NO ACERQUE LAS MANOS, LOS PIES y EL CUERPO a las cuchillas giratorias, líneas de conducción y partes hasta que todos los elementos móviles se hayan detenido.
- NO ponga las manos o los pies debajo de las plataformas de la cortadora
- DETENGA las CUCHILLAS giratorias antes de elevar la plataforma de la cortadora o las alas
- DETENGA la cortadora, EXAMÍNELA y PRESTE ATENCIÓN A LOS SONIDOS antes de acercarse a la cortadora para asegurarse de que se haya detenido todo el movimiento giratorio. *PN MBFM-01 SP*

# SEGURIDAD

## RIESGO DE ENREDO POR EL PTO

<p>Peligro de enredo No se acerque o toque ningún eje de transmisión de PTO giratorio</p>	
<p>Asegúrese de que el eje de PTO esté firmemente sujetado. No use un adaptador de PTO</p>	
<p>No opere la máquina si las cubiertas de PTO están dañadas o faltantes</p>	
<p>Asegúrese de que los ejes de PTO sean del largo adecuado</p>	

**PELIGRO** MANTÉNGASE ALEJADO DE LAS LÍNEAS DE CONDUCCIÓN Y OTROS ELEMENTOS GIRATORIOS PARA EVITAR LESIONES GRAVES O LA MUERTE:

MANTÉNGASE LEJOS y NO ACERQUE las manos, los pies y el cuerpo a las cuchillas giratorias, líneas de conducción y partes hasta que todos los elementos móviles se hayan detenido.

**DETENGA** la cortadora, **EXAMÍNELA Y PRESTE ATENCIÓN A LOS SONIDOS** antes de acercarse a la cortadora para asegurarse de que se haya detenido todo el movimiento giratorio.

**LOS ELEMENTOS GIRATORIOS SIGUEN ROTANDO** una vez apagada la PTO.

### PROTECCIÓN DE LA PTO:

**PARA EVITAR LESIONES GRAVES O LA MUERTE POR ENREDO AL OPERAR EL IMPLEMENTO:**

**MANTENGA** instalados los protectores, las cubiertas integrales de las líneas de conducción y las cubiertas de entrada

**NO OPERE** la cortadora si los protectores o cubiertas no están bien colocados o faltan.

**REEMPLACE O REPARÉLOS** si faltan, están dañados o rotos

**SIEMPRE REEMPLACE LOS PROTECTORES** que se han quitado para tareas de reparación o mantenimiento.

**PARA EVITAR** que la línea de conducción se rompa durante las operaciones:

**VERIFIQUE** que la línea de conducción tenga el largo adecuado entre el eje de PTO y el eje de la caja de cambios del implemento.

Las líneas de conducción demasado cortas se pueden soltar o romper.

Las líneas de conducción demasado largas pueden tocar el suelo.

Un ensamblaje telescópico de la línea de conducción que toque el suelo no se deslizará y se solidificará.

Si la línea de conducción toca el suelo, puede atravesar los cojinetes de soporte y romper el eje de PTO.

**EVITE** hacer curvas pronunciadas o elevar la cortadora a alturas que puedan hacer caer la línea de conducción.

Lubrique los componentes telescópicos del eje de transmisión en forma semanal.

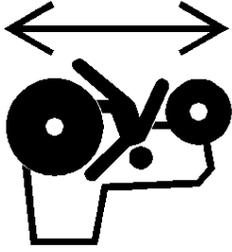
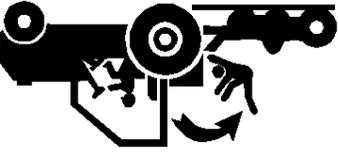
**COMUNÍQUESE CON EL DISTRIBUIDOR** si la línea de conducción del implemento no coincide con el eje de PTO del tractor:

**NO UTILICE UN ADAPTADOR DE PTO.**

El uso de un adaptador de PTO puede causar vibración excesiva, caída de objetos, fallas de las cuchillas y el implemento como consecuencia de la duplicación de la velocidad operativa. El aumento de la longitud de trabajo puede exponer áreas desprotegidas de la línea de conducción. *PN PE01 SP*

**SEGURIDAD**

**RIESGO DE ATROPELLO**

		
<p>Riesgo de atropello del operador</p>	<p>Riesgo de atropello por caída del operador</p>	<p>Riesgo de atropello por caída del operador</p>

**▲ PELIGRO** PARA EVITAR LESIONES GRAVES O LA MUERTE POR CAÍDA DEL TRACTOR O ATROPELLO DEL EQUIPO:

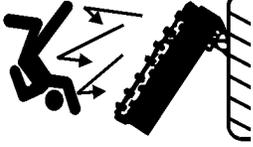
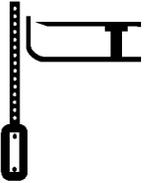
- USE tractores equipados con SISTEMA ANTIVUELCO (ROPS) y CINTURONES DE SEGURIDAD para las operaciones de corte.
- MANTENGA EL SISTEMA ROPS trabado en posición vertical.
- SÓLO ENCIENDA el tractor sentado en el asiento del tractor.
- SIEMPRE ABROCHESE el cinturón de seguridad al operar el tractor y los equipos.
- SÓLO OPERE el tractor y el equipo sentado en el asiento del tractor.
- NUNCA LLEVE A OTRAS PERSONAS en el tractor o implemento.

**AL SUBIR Y BAJAR DEL TRACTOR:**

- SÓLO suba o baje del tractor cuando éste y sus partes móviles estén detenidos.
- APAGUE EL MOTOR Y LA TDF, coloque el freno de mano, descienda del implemento, espere a que se detengan todas las partes móviles y quite la llave antes de bajarse del tractor. *PN R001 SP*

# SEGURIDAD

## RIESGO DE OBJETOS LANZADOS (continuado)

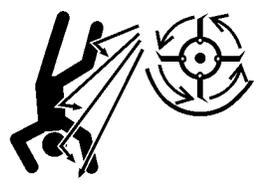
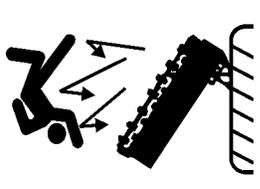
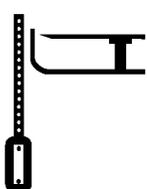
Peligro de objetos lanzados por la cortadora	
Objetos lanzados desde cortadora elevada	
Inspeccione el área. Quite los objetos extraños	
No permita que las cuchillas entren en contacto con objetos sólidos	

### OPERACIÓN DE LA CORTADORA:

- NO exceda la capacidad de corte nominal de la cortadora, ni corte elementos que no sean vegetación.
- **USE CABINAS DE TRACTOR CERRADAS** cuando haya dos o más cortadoras operando en un mismo sector.
- **AJUSTE LA ALTURA de corte para EVITAR EL CONTACTO DE LAS CUCHILLAS** con objetos sólidos, como alambres, piedras, postes, cordones, guardarrailles y obstrucciones fijas.
- **NO opere la cortadora con la(s) ala(s) elevada(s) o en posición de transporte.**
- **DETENGA LA CORTADORA** de inmediato si las cuchillas entran en contacto con objetos pesados, estructuras fijas, guardarrailles de metal y estructuras de cemento:
- 1. **LAS CUCHILLAS PUEDEN FALLAR** con el impacto y los objetos pueden ser arrojados a gran velocidad.
- 2. **INSPECCIONE y REEMPLACE** las cuchillas dañadas.
- 3. **VERIFIQUE** el equilibrio del porta cuchillas y **REEMPLÁCELO** si está dañado.
- **NO opere la cortadora en agua PARA EVITAR una posible FALLA DE LAS CUCHILLAS.**
- **EVITE OPERAR LA CORTADORA** en reversa:
  1. **DETENGA EL PTO** y retroceda la cortadora.
  2. **DESCIENDA** la cortadora, encienda el **PTO** y corte hacia adelante.
- **DETENGA EL PTO** y las **CUCHILLAS** al elevar la cortadora a posición de transporte.
- **NO ENCIENDA EL PTO** con la cortadora en posición de transporte.
- **DETENGA** la cortadora cuando se produzca **VIBRACIÓN EXCESIVA**:
  1. **DETENGA EL PTO Y EL MOTOR** del tractor.
  2. **INSPECCIONE** la cortadora para detectar la fuente de la vibración
  3. **REEMPLACE** toda parte dañada o las **CUCHILLAS** dobladas o dañadas. *PN T0FM-02 SP*

# SEGURIDAD

## RIESGO DE OBJETOS LANZADOS

	<p>Peligro de objetos lanzados por la cortadora</p>	<p>Objetos lanzados desde cortadora elevada</p> 	<p>Inspeccione el área. Quite los objetos extraños</p> 	<p>No permita que las cuchillas entren en contacto con objetos sólidos</p> 
---	---	--	--	--



LAS CORTADORAS GIRATORIAS PUEDEN ARROJAR OBJETOS A 90 METROS (300 PIES) O MÁS EN CONDICIONES ADVERSAS.

PARA EVITAR LESIONES GRAVES O LA MUERTE AL OPERADOR O TRANSEÚNTES COMO CONSECUENCIA DE OBJETOS ARROJADOS:

- MANTENGA a los transeúntes a 100 metros de distancia (300 pies)
- **NO OPERE LA CORTADORA SI HAY PERSONAS A MENOS DE 100 METROS(300 PIES), SALVO QUE:**

- Todos los **PROTECTORES CONTRA OBJETOS ARROJADOS** estén colocados y en buen funcionamiento al operar la cortadora, entre los que se incluyen los deflectores frontales y traseros, los protectores de acero, las bandas, los faldones laterales y las zapatas antidestilizantes.

- Las partes de la cortadora o la aila estén ajustadas cerca y paralelas al suelo, sin exponer las cuchillas.
- Se ha inspeccionado el **ÁREA DE CORTE** y se han quitado todos los materiales extraños y residuos.
- **LOS TRANSEÚNTES** estén en el interior de un vehículo cerrado.

**ANTES DE OPERAR LA CORTADORA, INSPECCIONE EL ÁREA PARA DETECTAR LA POSIBILIDAD DE OBJETOS QUE PUEDAN SER LANZADOS:**

- **QUITE** residuos, piedras, cables, alambres, objetos metálicos y cualquier otro objetos extraños del área.
- Los alambres, cables, sogas, cadenas y objetos metálicos pueden ser arrojados o salir desprendidos de la plataforma a gran velocidad:

**No permita** que las cuchillas de la cortadora entren en contacto con cadáveres de animales en descomposición o otros materiales peligrosos. Las cuchillas de la cortadora podrían arrojar materiales peligrosos y biológicos de la cortadora, exponiendo al operador y personas presentes a riesgos de salud. Siempre use el equipo de protección personal (PPE) aprobado por OSHA cuando limpie o retire material potencialmente peligroso de equipo.

1. **MARQUE** los objetos que no se puedan quitar.
2. **EVITE** estos objetos cuando use la cortadora.

### INSPECCIÓN DEL ÁREA PARA DETECTAR HIERBA ALTA Y MALEZAS:

- **INSPECCIONE Y quite** cualquier residuo oculto de gran tamaño.
- **PASE LA CORTADORA** a una altura intermedia
- **INSPECCIONE** y quite el residuo restante
- **PASE LA CORTADORA** a la altura final

### PROTECCIÓN CONTRA OBJETOS ARROJADOS DE LA CORTADORA:

- **MANTENGA** todos los protectores contra objetos arrojados en su lugar y en buen funcionamiento al operar la cortadora, entre los que se incluyen los deflectores frontales y traseros, los protectores de acero, las bandas, los faldones laterales y las zapatas antidestilizantes.

- **NO OPERE LA CORTADORA** si falta algún protector contra objetos arrojados, o si éstos están dañados.
- **DERECHO DE PASO (autopista) CON LA CORTADORA**

Ninguna protección ofrece una eficacia del 100% en la prevención de objetos arrojados. Para reducir la posibilidad de que se produzcan lesiones:

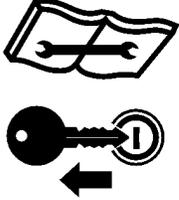
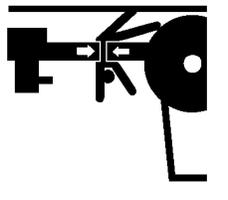
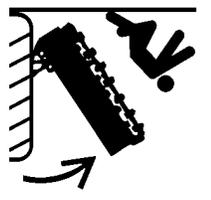
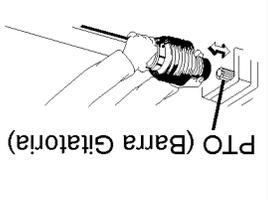
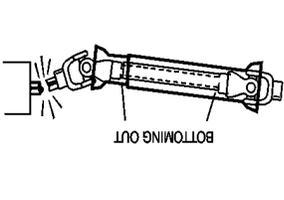
1. **MANTENGA LOS PROTECTORES DE LA CORTADORA**, los faldones laterales, las zapatas antidestilizantes y las cuchillas en buen estado de funcionamiento,
2. **ELEVE LA ALTURA DE CORTE a 15 CM (6 PULGADAS)** como mínimo,
3. **INSPECCIONE EL ÁREA** con cuidado antes de pasar la cortadora para ELIMINAR el posible riesgo de **OBJETOS ARROJADOS**,
4. **NUNCA PERMITA QUE LAS CUCHILLAS EN MOVIMIENTO ENTREN EN CONTACTO CON OBJETOS SÓLIDOS** como

alambres, piedras, postes, cordones, guardarrailles o el suelo. **PN TORM-01 SP**

SEGURIDAD

# SEGURIDAD

## SEGURIDAD DE CONECTAR O DESCONECTAR IMPLEMENTO

 <p>Detenga el tractor Quite la llave Lea el Manual</p>	 <p>Lesión opresiva entre tractor e implemento</p>	 <p>Lesión aplastante por caída de ala</p>	 <p>PTO (Barra Gítoria) Asegúrese de que el eje de TDF esté firmemente ajustado al tractor</p>	 <p>Asegúrese de que el eje de TDF sea del largo adecuado</p>
--	--	---	---	--

**PELIGRO**

PARA EVITAR LESIONES GRAVES O LA MUERTE POR APLASTAMIENTO POR EL TRACTOR O IMPLEMENTO:

AL DAR MARCHA ATRÁS el tractor hacia el enganche del implemento:

- NO PERMITA QUE HAYA PERSONAS entre el tractor y el implemento

ANTES de conectar y desconectar el enganche del implemento:

- APAGUE EL MOTOR DEL TRACTOR, coloque la palanca en "estacionar", ponga el freno de mano y saque la llave.

Al conectar y desconectar el enganche del implemento:

- NO se agache o camine debajo de la cortadora o la ala en posición elevada.

AL CONECTAR LA LÍNEA DE CONDUCCIÓN DEL IMPLEMENTO:

PARA EVITAR que la línea de conducción del implemento se suelte durante la operación:

- LUBRIQUE el anillo de cierre del resorte del yugo para asegurarse de que se deslice libremente sobre el eje de PTO.
- ASEGURE las bolas de cierre del yugo en la muesca del eje de PTO.

PRESSIONE y JALE DE LA LÍNEA DE CONDUCCIÓN del EJE DE TOMA DE FUERZA(PTO) del tractor y del implemento para asegurarse de que estén FIRMEMENTE SUJETADOS

PARA EVITAR que la línea de conducción se rompa durante las operaciones:

- VERIFIQUE que la línea de conducción tenga el largo adecuado entre el eje de PTO y el eje de la caja de cambios del implemento.
- Las líneas de conducción demastado cortas se pueden soltar o romper.
- Las líneas de conducción demastado largas pueden tocar el suelo.
- Un ensamblaje telescópico de la línea de conducción que toque el suelo no se deslizará y se solidificará.
- Si la línea de conducción toca el suelo, puede atravesar los cojinetes de soporte y romper el eje de PTO.

COMUNIQUESE CON EL DISTRIBUIDOR si la línea de conducción del implemento no coincide con el eje de TDF del tractor:

- NO UTILICE UN ADAPTADOR DE PTO.
- El uso de un adaptador de PTO puede ocasionar:
  - Vibración excesiva, caída de objetos, fallas de la hoja y el implemento como consecuencia de la duplicación de la velocidad operativa.
  - Mayor extensión de trabajo, lo que deja expuestas áreas desprotegidas de la línea de conducción e implica el riesgo de entredo con otros objetos.

ANTES DE QUITAR LAS TRABAS DE RETENCIÓN DE LAS ALAS:

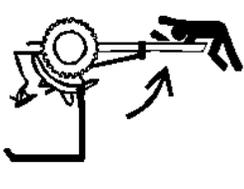
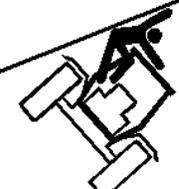
- LENE los cilindros de las alas con lubricante
- MANTENGA a los transeñales lejos del área antes de operar las alas
- DESCIENDA LAS ALAS de manera lenta y cuidadosa.

NO conecte la cortadora a un tractor con la TDF directamente conectada a la transmisión del tractor. PN CDFM-03 SP

SEGURIDAD

# SEGURIDAD

## RIESGO DE APLASTAMIENTO

				
Lesión aplastante por caída de ala	Lesión aplastante por caída de implemento	Siempre utilice cinturón de seguridad	Trabe el sistema ROPS (antivuelco) en la posición vertical	Lesión aplastante por vuelco

**▲ PELIGRO** PARA EVITAR UNA LESIÓN GRAVE O LA MUERTE POR CAÍDA DEL TRACTOR, O EL APLASTAMIENTO, VUELCO Y APLASTAMIENTO DE UN EQUIPO POR LA CAÍDA DE UNA ALA O UN IMPLEMENTO:

- USE tractores equipados con **SISTEMA ANTIVUELCO (ROPS) Y CINTURONES DE SEGURIDAD** para las operaciones de corte.
- **MANTENGA EL SISTEMA ROPS** trabado en posición vertical.
- **SIEMPRE ABROCHÉSE** el cinturón de seguridad al operar el tractor y los equipos.
- **SÓLO OPERE** el tractor y el equipo sentado en el asiento del tractor.
- **EN CASO DE EMERGENCIA**, apague el motor del tractor, desenganche la toma de fuerza y espere a que todo movimiento de rotación se detenga. Coloque el tractor en posición de estacionamiento, ponga el freno de estacionamiento y retire la llave antes de abandonar el asiento del operador.

### AL ELEVAR O DESCENDER LAS ALAS:

- Eleve o descienda las alas **SÓLO CUANDO ESTÉ SENTADO** en el asiento del tractor, con el cinturón de seguridad ajustado.
- **PARA EVITAR** el vuelco del implemento.
- **MANTENGA A LOS TRANSEUNTES FUERA** del área de operación **PARA EVITAR** accidentes por aplastamiento.
- **MANTENGA** suficiente espacio libre alrededor de los implementos y alas **PARA EVITAR** el contacto con edificios o cables elevados.

Los equipos **ELEVADOS** se pueden caer por fallas mecánicas o hidráulicas o por un movimiento inesperado de la palanca de control.

### ▲ ADVERTENCIA

**PARA EVITAR LA CAÍDA DEL EQUIPO** al trabajar cerca o debajo de las alas, los componentes e implementos elevados por un enganche de tractor de 3 puntos:

- **SUJETE CON FIRMEZA** o bloquee en posición vertical todos los equipos, alas y componentes elevados.
- **BLOQUEE EN POSICIÓN VERTICAL** y sujete con firmeza el equipo antes de poner las manos, los pies o el cuerpo debajo de los equipos o componentes elevados.
- **MANTENGA A LOS TRANSEUNTES LEJOS** de las alas dobladas hasta que estén bloqueadas o trabadas en posición vertical.

**AL ESTACIONAR** el implemento y el tractor:

- **DESCIENDA** el implemento, **TRABE** o **BLOQUEE** las partes elevadas antes de alejarse del equipo.
- **NUNCA** deje un implemento sin atención en posición elevada.

### ▲ ADVERTENCIA

**PARA EVITAR LA CAÍDA O EL APLASTAMIENTO DE NIÑOS POR EL EQUIPO:**

- **NUNCA DEJE** que los niños jueguen sobre el tractor o los implementos, ni en sus alrededores.
- **AL DESENGANCHAR EL IMPLEMENTO:**

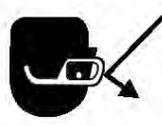
- **DESCIENDA** el implemento, **TRABE** o **BLOQUEE** las partes elevadas antes de alejarse del equipo.
- **USE** el gato de la lengüeta para controlar el movimiento de la lengüeta del implemento.
- **USE** el **GATO** de la lengüeta para elevar lengüetas de implementos pesados.
- **EVITE** recargar el gato para evitar falla al gato y una lesión al operador.

### ANTES DE QUITAR LAS TRABAS DE RETENCIÓN DE LAS ALAS:

- **CONECTE** las mangueras al tractor.
- **LENE** los cilindros de las alas con lubricante
- **MANTENGA** a los transeuntes lejos del área de funcionamiento de las alas
- **DESCIENDA LAS ALAS** de manera lenta y cuidadosa. *PN CH01 SP*

# SEGURIDAD

## SEGURIDAD DEL OPERADOR

	Lea con atención el Manual del Operador
	Siempre use gafas de seguridad
	Use casco y calzado protector
	Nunca consuma drogas o alcohol mientras opera el equipo
	Utilice chaleco de seguridad al operar en o cercas de carreteras

**ADVERTENCIA**  
**PARA EVITAR LESIONES GRAVES O LA MUERTE, SIGA LAS SIGUIENTES INSTRUCCIONES:**

- **LEA, COMPRENDA y SIGA** las instrucciones del Manual del Operador, al igual que las Advertencias y Mensajes de Seguridad.
- **USE GAFAS DE SEGURIDAD**, calzado protector, casco, protección auditiva y guantes al operar o reparar el equipo.
- **USE** un aparato de respiración apropiado al operar en condiciones polvorientas a fin de evitar contraer enfermedades respiratorias.
- **NO USE** prendas sueltas o joyas que se puedan enredar con las partes giratorias y causar una lesión.
- **NO CONSUMA DROGAS o ALCOHOL** antes o durante la operación del equipo.
- **NO PERMITA** que nadie opere el equipo bajo los efectos negativos de las drogas o el alcohol.
- **CONSULTE** a un médico para conocer los efectos desfavorables de la medicación sobre los sentidos.
- **MANTÉNGASE ALERTA**, la operación prolongada puede causar fatiga. **HAGA UNA PAUSA y DESCANSE.**

### SEGURIDAD DE OPERACIÓN GENERAL

- **CONDICIONES DE VISIBILIDAD AL USAR LA CORTADORA:**
- **OPERE LA CORTADORA CON LUZ SOLAR** o con luz que aporte una visibilidad nítida de más de 90 metros (100 yardas).
- **DEBE PODER VISUALIZAR e** identificar transeúntes, terrenos empinados, pozos, desniveles, obstrucciones elevadas, cables de alimentación, residuos y objetos extraños.
- **VELOCIDAD RESPECTO AL SUELO AL USAR LA CORTADORA:**
- El rango de **VELOCIDAD NORMAL** es de entre 2 y 5 millas por hora.
- **AJUSTE LA VELOCIDAD DE CORTE** según las condiciones del terreno y el tipo de césped, la densidad y la altura del corte.
- **REDUZCA LA VELOCIDAD DE CORTE** al acercarse a inclinaciones empinadas, pozos, desniveles, obstrucciones elevadas, cables de alimentación y para evitar residuos y objetos extraños.

### INFESTACIÓN CON INSECTOS

- No opere en áreas susceptibles al ataque de abejas o insectos, salvo que **USE PRENDAS PROTECTORAS** o una cabina de tractor cerrada.

### VELOCIDAD DE PTO:

- **NO EXCEDA LA VELOCIDAD DE PTO NOMINAL DEL IMPLEMENTO**
- **EVITE** superar las velocidades nominales de PTO, porque puede causar roturas en la línea de conducción o fallas de las cuchillas.
- **SENALES DE SEGURIDAD:**
- **REEMPLACE** cualquier señal de seguridad faltante, dañada o ilegible. *PN OS01 SP*

# SEGURIDAD

## INSTRUCCIONES DE SEGURIDAD Y PRÁCTICAS GENERALES

El mejor operador es un operador cuidadoso. La seguridad es de importancia fundamental para el fabricante, y también debería serlo para el propietario u operador. La mayoría de los accidentes se pueden evitar prestando suma atención al equipo, al ambiente circundante, y tomando algunas precauciones. La primera sección de este manual incluye una lista de Mensajes de Seguridad que deben observarse para contribuir a la protección del operador y otras personas frente a lesiones o la muerte. Lea con atención estos Mensajes de Seguridad antes de ensamblar, operar o reparar este implemento. Este equipo sólo debe ser operado por personas que hayan leído el manual, responsables y calificadas, que sepan cómo hacerlo de manera responsable.



El Símbolo de Alerta de Seguridad se utiliza en combinación con una Señal Verbal, tal como la que se muestra a continuación, en todo este manual y en los autoadhesivos adheridos a los equipos. El Símbolo de Alerta de Seguridad significa:

“¡ATENCIÓN! MANTÉNGASE ALERTA! SU SEGURIDAD ESTÁ EN JUEGO!” El Símbolo y la Señal Verbal tienen el objetivo de advertir al propietario/operador sobre un riesgo inminente y el grado de lesión que se puede producir al operar este equipo.

**Adopte todas las medidas habituales para trabajar en forma segura y, sobre todo, recuerde que la seguridad depende de USTED. Sólo USTED puede impedir una lesión grave o la muerte a causa de prácticas no seguras.**

Indica una situación peligrosa inminente que, de no ser evitada, **OCCASIONARÁ** la MUERTE O UNA LESIÓN MUY GRAVE.



Indica una situación peligrosa inminente que, de no ser evitada, **PODRÍA OCCASIONAR** la MUERTE O UNA LESIÓN MUY GRAVE.



Indica una situación peligrosa inminente que, de no ser evitada, **PODRÍA OCCASIONAR** UNA LESIÓN MENOR.



Indica información considerada importante, pero no relacionada con riesgos (por ejemplo, mensajes relacionados con daños a la propiedad).



**NOTA:** Identifica aspectos de particular interés para lograr una operación o reparación más eficiente y conveniente.

Si no se siguen cuidadosamente las advertencias e instrucciones indicadas en este Manual y en los Mensajes de Seguridad del implemento, se pueden producir lesiones graves o la muerte. Siempre siga las instrucciones de este manual y use el sentido común para evitar situaciones peligrosas.



Los pictogramas se utilizan a lo largo de este manual para ayudar a que su atención visual se centre en los problemas de seguridad.

PELIGRO DE SEGURIDAD	PROCEDIMIENTO DE EVITACIÓN	PREVENCIÓN DE SEGURIDAD
<p>El pictograma rodeado por un triángulo indica un peligro de seguridad que debe evitarse.</p> <p>EJEMPLO:</p> <p>Equipo en contacto con líneas eléctricas aéreas</p>	<p>El pictograma por sí mismo o dentro de una caja indica un procedimiento de evitación que se debe seguir para evitar lesiones.</p> <p>EJEMPLO:</p> <p>Apague siempre el motor y retire la llave antes de trabajar en el equipo</p>	<p>Un círculo con una barra indica una acción que está prohibida.</p> <p>EJEMPLO:</p> <p>No FUMAR</p>

**NOTA:** Si desea obtener una traducción de esta sección de seguridad en alguno de los siguientes idiomas, comuníquese con: Translations, a la dirección 1502 E. Walnut Street Seguin, TX 78155; Fax: (830) 372-9529; La Sección de Seguridad está disponible en español, portugués, francés, alemán, ruso. PN 6501 SP

# SECCIÓN DE SEGURIDAD

Sección de Seguridad 1-1



## Instrucciones de operaciones antes de la entrega del DISTRIBUIDOR al CLIENTE

El distribuidor deberá informar al comprador de este producto las condiciones, disposiciones y procedimientos de garantía aplicables; informar la responsabilidad del comprador de capacitar a sus operadores para la operación segura; revisar el contenido del Manual del Operador, incluido el equipo de seguridad, la operación segura y el mantenimiento; y revisar las Señales de Seguridad que se encuentran en el implemento (y en el tractor, de ser posible).

- **IMPLEMENTOS:** He explicado que los deflectores, protectores de cadena o faldones sólidos se deben mantener en buenas condiciones de reparación y se deben instalar, excepto en zonas donde personas, vehículos, ganado u otros bienes no corran peligro por objetos arrojados, y en los casos en que dichos equipos de seguridad impedirían un desempeño razonable de la cortadora en su tarea asignada.
- **LÍNEAS DE CONDUCCIÓN:** Me he asegurado de que todos los protectores de líneas de conducción, de caja de engranajes y otros están en buenas condiciones de reparación y firmemente sujetos para prevenir lesiones por entredos u objetos arrojados.
- **MÁQUINAS HIDRÁULICAS:** He explicado la necesidad de usar aceite hidráulico limpio, cambiar los filtros según las instrucciones, detener filtraciones, prevenir daños por operar con aceite demasado caliente, cuidar las mangueras, usar mangueras del tipo correcto, mantener la presión operativa especificada y prevenir el posible riesgo de que el aceite penetre en la piel.

- **IMPLEMENTOS PLEGABLES:** He explicado que no es posible proteger contra objetos arrojados cuando el cabezal está elevado del suelo y que el operador es responsable de verificar que no existan personas en las inmediaciones. He explicado que el brazo o cabezal de cortadora elevado puede entrar en contacto con obstrucciones elevadas y dañar cables y líneas telefónicas, y posiblemente causar lesiones. He explicado que el brazo o cabezal extendido, o el brazo retirado, puede entrar en contacto con cables de alimentación y causar lesiones o la muerte por electrocución, y que el operador es responsable de evitar dichos riesgos.

## SERVICIO ANTES DE LA ENTREGA VERIFIQUE Y AJUSTE O LUBRIQUE SEGÚN SEA NECESARIO

Consulte los detalles en el Manual del Operador  
Inspección realizada – Garantía y procedimientos de seguridad explicados – Instalación realizada

### LUBRICACIÓN E HIDRÁULICA

- Caja de engranajes (niveles de aceite)
- Nivel de aceite hidráulico (tanque externo)
- Nivel de aceite hidráulico del tractor
- Mangueras hidráulicas (no retorcidas y ajustadas)
- Propulsor de bomba frontal (conjunto ajustado y eje bien alineado)

### CORTADORA

- Nivel y altura de corte de la cortadora ajustados
- Cojinetes del eje de corte lubricados
- Todas las piezas metálicas bien ajustadas

### ACCESORIOS E INSTALACIÓN

- Deflectores frontales y traseros
- Sentido de giro de las hojas correcto

### CONEXIONES DE CORTADORA A TRACTOR

- Pivote y conexiones de bastidor en A
- Altura de eje (ajustar)
- Altura de corte (ajustar)
- Verificación de pre-operación de kit de montaje

### ELEMENTOS DE SEGURIDAD

- Protectores (operación e instalación)
- Embrague de línea de conducción (limitador de ajuste) (ajustar y poner en marcha)
- Autoadhesivos de seguridad (colocados)
- Manual del Operador (entregado)
- Protector de TDF del tractor (instalado)
- Emblema S.M.V. (instalado de ser necesario)
- Gato con lengüeta (instalación y operación)
- Cadena de remolque de seguridad (instalada)
- Manual de Seguridad de Línea de Conducción ADMA (entregado)
- Manual de Seguridad de Cortadora AEM (entregado en porta manual)
- Se mostró el Video de Seguridad de Cortadora AEM al comprador

**Terrain King está dispuesto a suministrar un (1) Video de Prácticas de Seguridad para Cortadoras AEM**

- Por favor enviar:
- Video de Seguridad para el Operador de Cortadoras AEM/FEMA – formato VHS
  - Video de Seguridad para el Operador de Cortadoras AEM/FEMA – formato DVD
  - Manual del Operador de la Cortadora
  - Manual de Seguridad del Operador de la Cortadora AEM

Nombre del solicitante: \_\_\_\_\_ Teléfono: \_\_\_\_\_

Dirección del solicitante: \_\_\_\_\_

Ciudad \_\_\_\_\_

Estado \_\_\_\_\_

Código postal \_\_\_\_\_

Modelo de cortadora: \_\_\_\_\_ Número de serie: \_\_\_\_\_

Fecha de compra: \_\_\_\_\_ Vendedor del distribuidor: \_\_\_\_\_

Nombre del distribuidor: \_\_\_\_\_ Dirección del distribuidor: \_\_\_\_\_

Enviar por correo a:

AEM Video Services

1502 E. Walnut Street

Seguin, TX 78155

○ enviar por fax a:

(830) 372-9529

○ enviar por correo electrónico a:

AEMVideo@alamo-group.com



Video de Seguridad

➤ **Sea Seguro**

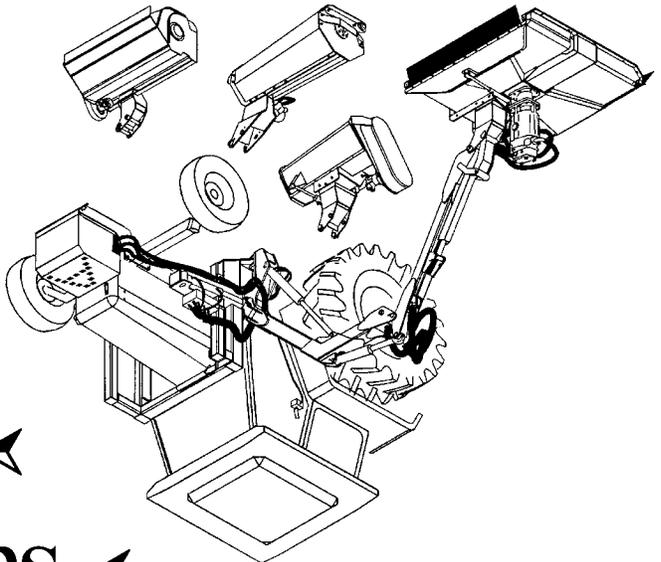
➤ **Sea Alerto**

➤ **Sea Vivo**

➤ **Sea Entrenado**

antes de funcionar  
el cortacésped

# **TERRAINKING™** Engineering Practical Solutions™ **Entrenamiento de Seguridad** *Hace la Diferencia*



A fin de reducir la tasa de accidentes y mejorar la operación segura de las cortadoras, Terrain King se ha asociado con otros fabricantes de la industria para desarrollar el video y la guía de Prácticas de Seguridad para Cortadoras Industriales y Agrícolas AEM/FEMA.

El video explica a los operadores de tractores y cortadoras las prácticas seguras que deben adoptar cuando utilizan cortadoras industriales y agrícolas. Es importante que todos los operadores de cortadoras aprendan cómo operar sus equipos de corte y puedan reconocer los posibles peligros que pueden surgir al operar una cortadora. Este video, en conjunto con el manual del operador de la cortadora y los mensajes de advertencia que se encuentran en la cortadora, serán muy útiles para complementar este aprendizaje tan importante.

Es posible que su distribuidor autorizado de *Terrain King* le haya mostrado este video y le haya entregado una copia en DVD cuando adquirió su cortadora. Si usted o algún operador de cortadora no vio el video, mire el video, lea este Manual del Operador, y complete la Guía del Video antes de operar su cortadora nueva. Si no comprende alguna de las instrucciones del video o del manual del operador, o si tiene alguna pregunta acerca de la operación segura, comuníquese con su supervisor, con el distribuidor o con Terrain King.

Si desea recibir una copia del video en VHS, envíe un mensaje de correo electrónico a [AEMVideo@alamo-group.com](mailto:AEMVideo@alamo-group.com) o un fax al (830) 372-9529, o envíe por correo una copia rellena del formulario que se encuentra al dorso de esta página a AEM VHS Video 1502 E Walnut Street, Seguin, TX 78155, y solicite la versión en VHS. Indique su nombre, dirección postal, modelo de cortadora y número de serie.

Cada uno de los operadores debe recibir capacitación para cada equipo (tractor y cortadora), comprender el uso previsto, y comprender los posibles peligros antes de operar el equipo.

La información y material mecionado en la información anterior junto con el Manual de Operador puede asistir en cumplir con los requisitos de OSHA para el entrenamiento anual del Operador.

## **REQUISITOS DE ENTRENAMIENTO DEL OSHA**

**Los siguientes requisitos de entrenamiento se an tomada del Título 29, código de la pieza de regulaciones federales 1928.57 (a) (6). [www.osha.gov](http://www.osha.gov)**

Instrucciones del operador. A la hora de la asignación inicial y por lo menos anualmente después de eso, el empleador mandará a cada empleado quien opera un tractor agrícola o implemento en las practicas de operación segura y el mantenimiento de el equipo con el cual el empleado este, o estará implicado y de cualquier otras prácticas dictados por el ambiente laboral.



# TERRAIN KING™

Engineering Practical Solutions™

## MANUAL DE OPERADOR

**TERRAIN  
MASTER/  
FLAIL KING**  
Segadora  
Desgranadora



Video de Seguridad



[www.algqr.com/kvs](http://www.algqr.com/kvs)

Este Manual del Operador es una parte esencial de la operación segura de esta máquina y se debe mantener con la unidad siempre. LEA, ENTIENDA, Y SIGA las Instrucciones de Seguridad y Operación contenidas en este manual antes de operar el equipo.

Importantes instrucciones de operación y las instrucciones de seguridad se encuentran en el video Cortacésped Sobre Seguridad que se puede acceder instantáneamente en el internet en: [www.algqr.com/kvs](http://www.algqr.com/kvs) C01-Cvr Kubota\_SP

Publicado en 03/21

Parte n.º. 37002990204



FC-R-0076

**Terrain King**

1502 E. Walnut St.  
Seguin, Texas 78155-5202  
800-882-5756



[www.algqr.com/kwe](http://www.algqr.com/kwe)

Página Web de Terrain King



©2021 Terrain King

\$0.00